USER'S MANUAL

notebook

Downloaded from LpManual.com Manuals

V09.1.00

Downloaded from LpManual.com Manuals

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

©December 2009

Trademarks

Intel and **Intel Core** are trademarks/registered trademarks of Intel Corporation.

Downloaded from LpManual.com Manuals

FCC Statement
(Federal Communications Commission)

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the service representative or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

1. This device may not cause interference.

   And

2. This device must accept any interference, including interference that may cause undesired operation of the device.

Downloaded from LpManual.com Manuals

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Warning

Use only shielded cables to connect I/O devices to this equipment. You are cautioned that changes or modifications not expressly approved by the manufacturer for compliance with the above standards could void your authority to operate the equipment.

EuP Off Mode Power Consumption Statement:

The figures below note the power consumption of this computer in compliance with European Commission (EC) regulations on power consumption in off mode:

- Off Mode < 1W

Downloaded from LpManual.com Manuals

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock, and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using this equipment with a telephone line (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit (Full Range AC/DC Adapter - AC Input 100 - 240V, 50 - 60Hz DC Output 19V, 11.57A (**220W**) minimum).

This Computer's Optical Device is a Laser Class 1 Product

Downloaded from LpManual.com Manuals

Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:

1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.

Do not expose the computer to any shock or vibration.	*Do not place it on an unstable surface.*	*Do not place anything heavy on the computer.*
		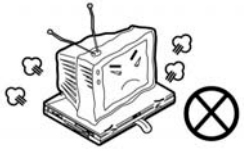

2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

Do not expose it to excessive heat or direct sunlight.	*Do not leave it in a place where foreign matter or moisture may affect the system.*	*Don't use or store the computer in a humid environment.*	*Do not place the computer on any surface that will block the Vents/Fan Intakes.*
			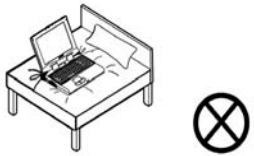

Downloaded from LpManual.com Manuals

3. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.

4. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

Do not turn off the power until you properly shut down all programs.	*Do not turn off any peripheral devices when the computer is on.*	*Do not disassemble the computer by yourself.*	*Perform routine maintenance on your computer.*

5. **Take care when using peripheral devices**.

Use only approved brands of peripherals.	*Unplug the power cord before attaching peripheral devices.*
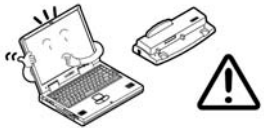	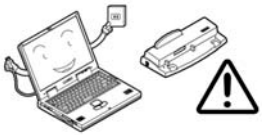

Downloaded from LpManual.com Manuals

Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC/DC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies (i.e. AC/DC adapter or car adapter).

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Do not plug in the power cord if you are wet.	*Do not use the power cord if it is broken.*	*Do not place heavy objects on the power cord.*
	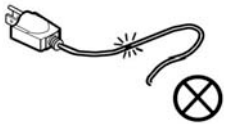	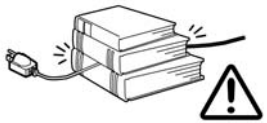

Downloaded from LpManual.com Manuals

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not remove any batteries from the computer while it is powered on.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Disposal & Caution

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Downloaded from LpManual.com Manuals

Cleaning

Do not apply cleaner directly to the computer; use a soft clean cloth.
Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.

Servicing

Do not attempt to service the computer yourself. Doing so may violate your warranty and expose you and the computer to electric shock. Refer all servicing to authorized service personnel. Unplug the computer from the power supply. Then refer servicing to qualified service personnel under any of the following conditions:

- When the power cord or AC/DC adapter is damaged or frayed.
- If the computer has been exposed to rain or other liquids.
- If the computer does not work normally when you follow the operating instructions.
- If the computer has been dropped or damaged (do not touch the poisonous liquid if the LCD panel breaks).
- If there is an unusual odor, heat or smoke coming from your computer.

Removal Warning

When removing any cover(s) and screw(s) for the purposes of device upgrade, remember to replace the cover(s) and screw(s) before turning the computer on.

Downloaded from LpManual.com Manuals

Travel Considerations

Packing

As you get ready for your trip, run through this list to make sure the system is ready to go:

1. Check that the battery pack and any spares are fully charged.
2. Power off the computer and peripherals.
3. Close the display panel and make sure it's latched.
4. Disconnect the AC/DC adapter and cables. Stow them in the carrying bag.
5. The AC/DC adapter uses voltages from 100 to 240 volts so you won't need a second voltage adapter. However, check with your travel agent to see if you need any socket adapters.
6. Put the notebook in its carrying bag and secure it with the bag's straps.
7. If you're taking any peripherals (e.g. a printer, mouse or digital camera), pack them and those devices' adapters and/or cables.
8. Anticipate customs - Some jurisdictions may have import restrictions or require proof of ownership for both hardware and software. Make sure your "papers" are handy.

Power Off Before Traveling

Make sure that your notebook is completely powered off before putting it into a travel bag (or any such container). Putting a notebook which is powered on in a travel bag may cause the Vents/Fan Intakes to be blocked. To prevent your computer from overheating make sure nothing blocks the Vent/Fan Intakes while the computer is in use.

Downloaded from LpManual.com Manuals

On the Road

In addition to the general safety and maintenance suggestions in this preface, and Chapter 8: Troubleshooting, keep these points in mind:

Hand-carry the notebook - For security, don't let it out of your sight. In some areas, computer theft is very common. Don't check it with "normal" luggage. Baggage handlers may not be sufficiently careful. Avoid knocking the computer against hard objects.

Beware of Electromagnetic fields - Devices such as metal detectors & X-ray machines can damage the computer, hard disk, floppy disks, and other media. They may also destroy any stored data - Pass your computer and disks around the devices. Ask security officials to hand-inspect them (you may be asked to turn it on). **Note**: Some airports also scan luggage with these devices.

Fly safely - Most airlines have regulations about the use of computers and other electronic devices in flight. These restrictions are for your safety, follow them. If you stow the notebook in an overhead compartment, make sure it's secure. Contents may shift and/or fall out when the compartment is opened.

Get power where you can - If an electrical outlet is available, use the AC/DC adapter and keep your battery(ies) charged.

Keep it dry - If you move quickly from a cold to a warm location, water vapor can condense inside the computer. Wait a few minutes before turning it on so that any moisture can evaporate.

Downloaded from LpManual.com Manuals

Developing Good Work Habits

Developing good work habits is important if you need to work in front of the computer for long periods of time. Improper work habits can result in discomfort or serious injury from repetitive strain to your hands, wrists or other joints. The following are some tips to reduce the strain:

- Adjust the height of the chair and/or desk so that the keyboard is at or slightly below the level of your elbow. Keep your forearms, wrists, and hands in a relaxed position.
- Your knees should be slightly higher than your hips. Place your feet flat on the floor or on a footrest if necessary.
- Use a chair with a back and adjust it to support your lower back comfortably.
- Sit straight so that your knees, hips and elbows form approximately 90-degree angles when you are working.
- Take periodic breaks if you are using the computer for long periods of time.

Remember to:

- Alter your posture frequently.
- Stretch and exercise your body several times a day.
- Take periodic breaks when you work at the computer for long periods of time. Frequent and short breaks are better than fewer and longer breaks.

Downloaded from LpManual.com Manuals

Lighting

Proper lighting and a comfortable viewing angle can reduce eye strain and shoulder and neck muscle fatigue.

- Position the display to avoid glare or reflections from overhead lighting or outside sources of light.
- Keep the display screen clean and set the brightness and contrast to levels that allow you to see the screen clearly.
- Position the display directly in front of you at a comfortable viewing distance.
- Adjust the display-viewing angle to find the best position.

LCD Screen Care

To prevent **image persistence** on LCD monitors (caused by the continuous display of graphics on the screen for an extended period of time) take the following precautions:

- Set the *Windows* **Power Plans** to turn the screen off after a few minutes of screen idle time.
- Use a rotating, moving or blank screen saver (this prevents an image from being displayed too long).
- Rotate desktop background images every few days.
- Turn the monitor off when the system is not in use.

Cable TV Safety

If you have included a **TV Tuner** in your purchase option then pay careful attention to the following:

- Make sure that your CATV system installer has connected the Coaxial cable shield to the grounding system of the building, as close to the point of cable entry as practical.
- This reminder is provided to call the CATV system installer's attention to Article 820-93 of the NEC (Section 54, Part I of the Canadian Electrical Code).
- The TV antenna supplied with any TV Tuner module is intended for indoor use only. Please do not use your TV Tuner module outdoors.

Downloaded from LpManual.com Manuals

Downloaded from LpManual.com Manuals

Contents

Notice I
FCC Statement II
FCC RF Radiation Exposure Statement: III
EuP Off Mode Power Consumption Statement: III
Instructions for Care and Operation V
Power Safety VII
Battery Precautions VIII
Cleaning IX
Servicing IX
Travel Considerations X

Quick Start Guide

Overview 1-1
Advanced Users 1-2
Beginners and Not-So-Advanced Users 1-2
Warning Boxes 1-2
Not Included 1-3
System Software 1-4
RAID & AHCI Setup 1-4
System Startup 1-5
System Map: LCD Panel Open & Top View 1-6
LED Indicators 1-7
Game Keys 1-7
Touch Sensor Instant Keys 1-8
Keyboard 1-9
Function Keys & Visual Indicators 1-10
System Map: Front & Rear Views 1-11
System Map: Right View 1-12
System Map: Left View 1-13
System Map: Bottom View 1-15
Video Features 1-17
Screen Resolution 1-18
Power Options 1-20

Storage Devices, Mouse, Audio & Printer

Overview 2-1
Hard Disk Drive 2-2
Optical Device 2-3
Loading Discs 2-3
Handling CDs or DVDs 2-4
DVD Regional Codes 2-5
7-in-1 Card Reader 2-6
ExpressCard Slot 2-7
Game Keys 2-8
HDMI Ports 2-9

Downloaded from LpManual.com Manuals

GameMate Media Player (HDMI-In) 2-10
HDMI Audio Configuration 2-13
Audio Setup for LCD Monitors/
TVs with HDMI Input 2-14
Audio Features 2-16
Suppressing Audio Background Noise 2-17
Setup for Audio Recording 2-19
Setup for 5.1 Surround Sound 2-20
Sound Effects Equalizer 2-22
Dolby Settings 2-23
TouchPad and Buttons/Mouse 2-24
Gestures and Device Settings 2-25
Adding a Printer 2-28
USB Printer 2-28
Install Instructions: 2-28
Parallel Printer 2-28

Power Management

Overview 3-1
The Power Sources 3-2
AC/DC Adapter 3-2
Battery 3-2
Turning On the Computer 3-3
Power Plans 3-4
Power-Saving States 3-6
Sleep 3-6
Hibernate 3-7
Shut down 3-7
Configuring the Power Buttons 3-8
Resuming Operation 3-9
Battery Information 3-10
Conserving Battery Power 3-11
Battery Life 3-12
New Battery 3-12
Recharging the Battery with the AC/DC Adapter 3-12
Proper handling of the Battery Pack 3-13
Battery FAQ 3-14

Drivers & Utilities

RAID & AHCI Setup 4-1
What to Install 4-1
Module Driver Installation 4-1
Driver Installation 4-2
Manual Driver Installation 4-3
Updating/Reinstalling Individual Drivers 4-4
User Account Control (Win Vista) 4-4
Windows Security Message 4-4
New Hardware Found 4-4
Driver Installation Procedure 4-5
Video 4-5

Downloaded from LpManual.com Manuals

Audio 4-5
LAN 4-5
TouchPad 4-6
Card Reader/ExpressCard 4-6
GameKey Utility 4-6
Hot Key 4-6
HDMI-In Driver 4-6
Optional Drivers 4-7
Wireless LAN 4-8
PC Camera 4-8
Consumer Infrared (for TV Tuner Remote) 4-8
Fingerprint Reader Module 4-8

BIOS Utilities

Overview 5-1
The Power-On Self Test (POST) 5-2
Failing the POST 5-3
Fatal Errors 5-3
Non-Fatal Errors 5-3
The Setup Utility 5-4
Entering Setup 5-4
Setup Screens 5-5
Main Menu 5-6
System Time & Date (Main Menu) 5-6
System/Extended Memory: (Main Menu) 5-7
BIOS Revision/VGA Card etc. (Main Menu) 5-7
Advanced Menu 5-8
SATA Mode (Advanced Menu) 5-8
Legacy USB Support: (Advanced Menu) 5-9
Boot-time Diagnostic Screen: (Advanced Menu) 5-9
Power On Boot Beep (Advanced Menu) 5-9
Battery Low Alarm Beep: (Advanced Menu) 5-9
Security Menu 5-10
Set Supervisor Password (Security Menu) 5-10
Set User Password (Security Menu) 5-11
Password on boot (Security Menu) 5-11
Boot Menu 5-12
Exit Menu 5-13

Upgrading The Computer

Overview 6-1
When Not to Upgrade 6-2
Removing the Battery 6-3
Upgrading the Hard Disk Drive(s) 6-4
Upgrading the System Memory (RAM) - 1 6-8
Upgrading the System Memory (RAM) - 2 6-13
Upgrading the Optical (CD/DVD) Device 6-19
Upgrading the Video Card 6-20

Downloaded from LpManual.com Manuals

Modules

Overview 7-1
Setting Up SATA RAID Mode 7-2
Intel® Matrix Storage Manager 7-2
SATA RAID Setup Procedure (BIOS) 7-4
RAID Setup (Intel Matrix) 7-5
Intel® Matrix Driver Installation 7-7
Intel® Matrix Storage Manager 7-8
RAID Volume Data Verification and Repair 7-9
Replacing and Reverting Recovery and Master Volumes 7-9
Bluetooth Module 7-11
Bluetooth Configuration in Windows 7 7-12
Wireless LAN Module 7-16
Intel® Wi-Fi Link Series Driver Installation 7-17
802.11b/g/n Driver Installation 7-17
Connecting to a Wireless Network in Windows 7 7-18
Windows Mobility Center 7-21
PC Camera Module 7-22
PC Camera Driver Installation 7-22
PC Camera Audio Setup 7-23
TV Tuner Module 7-29
Consumer Infrared Driver 7-30
Digital TV Broadcast Signal 7-31
TV Recording and Power Plans 7-31
Remote Control Unit 7-31
Fingerprint Reader Module 7-32
Fingerprint Reader Driver Installation 7-33
User Enrollment 7-34
Fingerprint Control Center Features 7-37

Troubleshooting

Overview 8-1
Basic Hints and Tips 8-2
Backup and General Maintenance 8-3
Viruses 8-4
Upgrading and Adding New Hardware/Software 8-5
Problems & Possible Solutions 8-7

Interface (Ports & Jacks)

Overview A-1
Ports and Jacks A-2
Card Reader A-2
Cable (CATV) A-2
Antenna Jack A-2
Consumer Infrared Transceiver A-2
DC-In Jack A-2
DVI-Out Port A-2
e-SATA/USB Port A-3
HDMI-Out Port A-3

Downloaded from LpManual.com Manuals

HDMI-IN Port A-3
Headphone-Out Jack A-3
Line-In Jack A-3
Microphone-In Jack A-4
Mini-IEEE 1394 Port A-4
RJ-45 LAN Jack A-4
S/PDIF-Out Jack A-4
Security Lock Slot A-4
USB 2.0/1.1 Ports A-5

NVIDIA Video Driver Controls

NVIDIA Video Driver Installation B-1
NVIDIA Control Panel (Win 7) B-2
Display Devices B-5
Display Modes B-6
Attaching Other Displays (Win 7) B-11
SLI Multi GPU Configuration B-14
SLI Multi GPU Configuration & Battery Power B-15
Enabling TV Display B-16

Specifications

Processor C-2
Core Logic C-2
Display C-2
Memory C-2
Video Adapter Options C-2
BIOS C-2
Storage C-2
Audio C-2
Keyboard & Pointing Device C-3
Card Reader C-3
Slots C-3
Interface C-3
Communication C-3
Security C-3
Operating System C-4
Power Management C-4
Power C-4
Environmental Spec C-4
Physical Dimensions & Weight C-4

Downloaded from LpManual.com Manuals

Downloaded from LpManual.com Manuals

Chapter 1: Quick Start Guide

Overview

This Quick Start Guide is a brief introduction to the basic features of your computer, to navigating around the computer and to getting your system started. The remainder of the manual covers the following:

- **Chapter 2** A guide to using some of the main features of the computer e.g. the **storage devices** (**hard disk**, **optical device**, **7-in-1 card reader**, **ExpressCard/34**), **Game Keys, HDMI Ports, TouchPad** & **Mouse, Audio Features** & **Printer**.
- **Chapter 3** The computer's **power** management options.
- **Chapter 4** The installation of the **drivers** and utilities essential to the operation or improvement of some of the computer's subsystems.
- **Chapter 5** An outline of the computer's built-in software or **BIOS** (Basic Input Output System).
- **Chapter 6** Instructions for **upgrading** your computer.
- **Chapter 7** A quick guide to the computer's **RAID**, **Bluetooth**, **Wireless LAN, PC Camera, TV Tuner** and **Fingerprint** modules (some of which may be **optional** depending on your purchase configuration).
- **Chapter 8** A **troubleshooting** guide.
- **Appendix A** Definitions of the **interface**, **ports**/**jacks** which allow your computer to communicate with external devices.
- **Appendix B** Information on the **NVIDIA** Video driver controls.
- **Appendix C** The computer's **specification**.

Downloaded from LpManual.com Manuals

Advanced Users

If you are an advanced user you may skip over most of this Quick Start Guide. However you may find it useful to refer to *"Drivers & Utilities" on page 4 - 1*, *"BIOS Utilities" on page 5 - 1* and *"Upgrading The Computer" on page 6 - 1* in the User's Manual. You may also find the notes marked with a ✎ of interest to you.

Notes

Check the light colored boxes with the mark above to find detailed information about the computer's features.

Beginners and Not-So-Advanced Users

If you are new to computers (or do not have an advanced knowledge of them) then the information contained in this Quick Start Guide should be enough to get you up and running. Eventually you should try to look through all the documentation (more detailed descriptions of the functions, setup and system controls are covered in the remainder of the User's Manual), but do not worry if you do not understand everything the first time. Keep this manual nearby and refer to it to learn as you go. You may find it useful to refer to the notes marked with a ✎ as indicated in the margin. For a more detailed description of any of the interface ports and jacks see *"Interface (Ports & Jacks)" on page A - 1*.

Warning Boxes

No matter what your level please pay careful attention to the warning and safety information indicated by the symbol. Also please note the safety and handling instructions as indicated in the *Preface*.

Downloaded from ManualsManual.com Manuals

Not Included

Operating Systems (e.g. *Windows 7*) and applications (e.g. word processing, spreadsheet and database programs) have their own manuals, so please consult the appropriate manuals.

Drivers

If you are installing new system software, or are re-configuring your computer for a different system, you will need to install the appropriate drivers. Drivers are programs which act as an interface between the computer and a hardware component e.g. a wireless network module. It is very important that you install the drivers in the order listed in ***Table 4 - 1, on page 4 - 3***. You will be unable to use most advanced controls until the necessary drivers and utilities are properly installed. If your system hasn't been properly configured (your service representative may have already done that for you), refer to ***"Drivers & Utilities" on page 4 - 1*** for installation instructions.

Ports and Jacks

See ***"Ports and Jacks" on page A - 2*** for a description of the interface (ports & jacks) which allow your computer to communicate with external devices, connect to the internet etc.

Downloaded from LpManual.com Manuals

TV Tuner Module Support

Note that the TV Tuner module (factory) option is supported by the **Windows Media Center** software. **Windows Media Center** is not included in **Starter** or **Home Basic** versions of ***Windows 7***.

System Software

Your computer may already come with system software pre-installed. Where this is not the case, or where you are re-configuring your computer for a different system, you will find the ***Windows 7*** operating system is supported.

Note: In order to run ***Windows 7*** without limitations or decreased performance, your computer requires a minimum **1GB** of system memory (RAM).

RAID & AHCI Setup

Note that setting up a RAID, or AHCI mode, needs to be done prior to installing the *Windows OS* (see ***"Setting Up SATA RAID Mode" on page 7 - 2***).

Downloaded from ePManual.com Manuals

System Startup

1. Remove all packing materials, and place the computer on a stable surface.
2. Securely attach any peripherals you want to use with the notebook (e.g. keyboard and mouse) to their ports.
3. Attach the AC/DC adapter to the DC-In jack at the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
4. Use one hand to raise the lid/LCD to a comfortable viewing angle (it is preferable not to exceed 130 degrees); use the other hand (as illustrated in ***Figure 1 - 1*** below) to support the base of the computer (**Note**: **Never** lift the computer by the lid/LCD).
5. Raise the lid/LCD to a comfortable viewing angle, and press the power button.

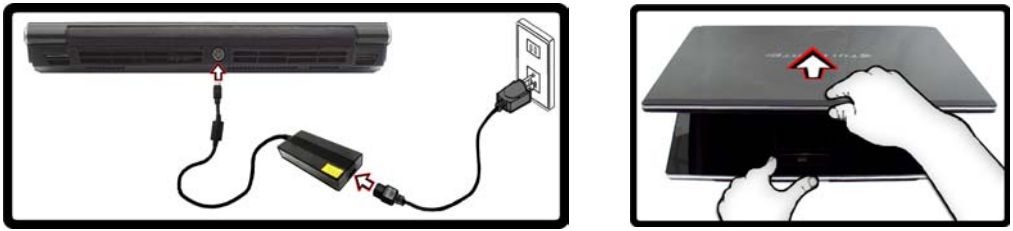

Shutdown

Note that you should always shut your computer down by choosing the **Shut Down** command from the **Start** menu in ***Windows 7***. This will help prevent hard disk or system problems.

Figure 1 - 1 **- Computer with AC/DC Adapter Plugged-In/Opening the Lid/LCD**

Downloaded from LpManual.com Manuals

System Map: LCD Panel Open & Top View

Figure 1 - 2
LCD Panel Open & Top View

1. Optional Built-In PC Camera
2. LCD
3. LED Status Indicators
4. Touch Sensor Instant Keys
5. 8 * Gaming Keys
6. Keyboard
7. TouchPad and Buttons
8. Fingerprint Reader Module (**optional**)
9. LED Power Indicators
10. LCD Panel Color LED

See ***Appendix A*** for a more detailed description of the ports & jacks etc.

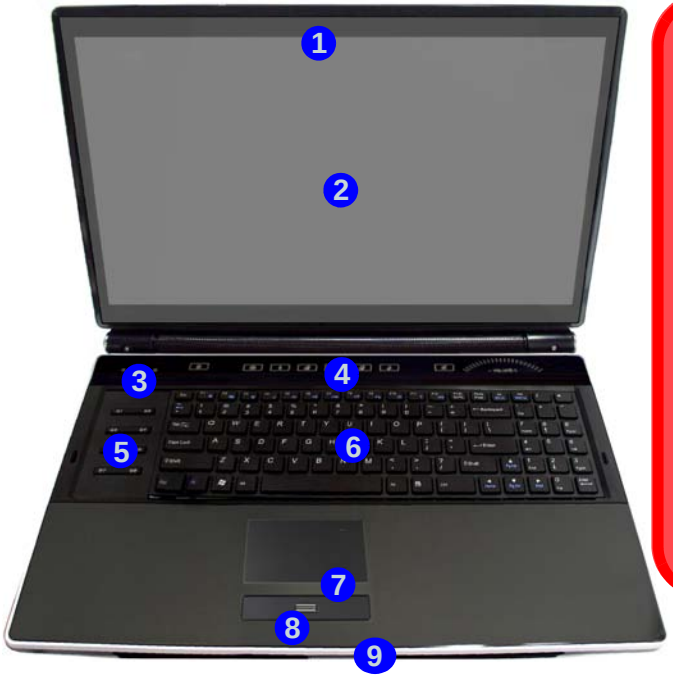

Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices (e.g. WLAN or Bluetooth) aboard aircraft is usually prohibited. Make sure any wireless modules are OFF if you are using the computer aboard aircraft.

Use the appropriate function key combination/Touch Sensor Key to toggle power to any wireless modules, and check the indicators to see if any modules are powered on or not (see ***Table 1 - 2, on page 1 - 8***).

Downloaded from Laptopmanuals.com Manuals

LED Indicators

The two sets of LED indicators (**LED Status Indicators** and **LED Power Indicators**) display helpful information about the current status of the computer.

Icon	Color	Description
	Blinking Blue	Hard Disk Activity
	Blue	Number Lock is Activated
	Blue	Caps Lock is Activated
	Blue	Scroll Lock is Activated
	Green	The Computer is On
	Blinking Green	The Computer is In Sleep Mode
	Orange	The Battery is Charging
	Blinking Orange	The Battery has Reached Critically Low Power Status
	Green	The Battery is Fully Charged

Table 1 - 1 **- LED Status Indicators**

Game Keys

The eight **Game Keys** on the left of the computer allow macros to be configured for common keystrokes used in applications, as long as the driver is installed.

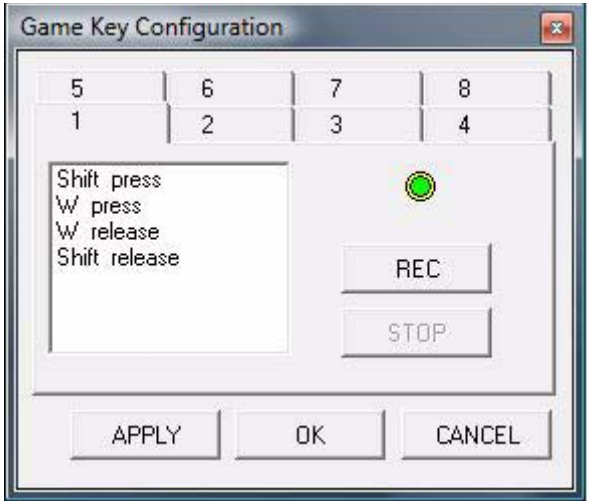

Figure 1 - 3 **- Game Key Configuration**

Downloaded from LpManual.com Manuals

Touch Sensor Instant Keys

Press the Touch Sensor Instant Keys on the computer to toggle the appropriate function on/off. When a module is powered on the appropriate icon will be highlighted.

Icon	Description	Icon	Description
	LED Color Toggle (press to toggle flashing colors or single color)		Wireless LAN Module Power Toggle
	PC Camera Module Power Toggle		Activate the Default Internet Browser
	Bluetooth Module Power Toggle		Sound Effects Equalizer Mode Toggle (see page *2 - 22*)
	Toggle *Silent Mode (for power saving) Visual Indicator		Mute Toggle
		Volume Control Slider (move your finger slowly along the slider to adjust the system volume)	

Table 1 - 2 **- Touch Sensor Instant Keys**

*When enabled, **Silent Mode** will reduce fan noise and save power consumption. Note this may reduce computer performance.

Downloaded from Laptopmanuals.com

Keyboard

The keyboard has an embedded numerical keypad for easy numeric data input, and features function keys to allow you to change operational features instantly. See *Table 1 - 3, on page 1 - 10* for full function key combination details.

Figure 1 - 4 **- Keyboard**

Special Characters

Some software applications allow the number-keys to be used with **Alt** to produce special characters. These special characters can only be produced by using the numeric keypad. Regular number keys (in the upper row of the keyboard) will not work. Make sure that **NumLk** is on.

Other Keyboards

If your keyboard is damaged or you just want to make a change, you can use any standard USB keyboard. The system will detect and enable it automatically. However special functions/hot-keys unique to the system's regular keyboard may not work.

Num Lk & Scr Lk

Hold down the **Fn Key** and Scr Lk/Num Lk to enable scroll lock/number lock, and check the LED indicator for status.

Downloaded from LpManual.com Manuals

Function Keys & Visual Indicators

The **function keys** (F1 - F12 etc.) will act as **hot keys** when pressed while the **Fn** key is held down. In addition to the basic function key combinations; visual indicators (see the table below) are available when the Hot Key driver is installed (see ***"Hot Key" on page 4 - 6***). After installing the driver an icon will appear in the taskbar.

Keys	Function/Visual Indicators		Keys	Function/Visual Indicators	
Fn + ~	Play/Pause (in Audio/Video Programs)		Fn +F8/F9	Brightness Decrease/Increase	
Fn + F1	Touchpad Toggle		Fn + F10	PC Camera Power Toggle	
Fn + F2	Turn LCD Backlight Off (Press a key to or use Touchpad to turn on)		Fn + F11	WLAN Module Power Toggle	
Fn + F3	Mute Toggle		Fn + F12	Bluetooth Module Power Toggle	
Fn + F4	Sleep Toggle		Fn + NumLk	Number Lock Toggle	
Fn +F5/F6	Volume Decrease/ Increase		Fn + ScrLk	Scroll Lock Toggle	
Fn + F7	Display Toggle		Note: DO NOT use the **Fn + F7** key combination to toggle through display options when SLI is enabled (see ***"SLI Multi GPU Configuration" on page B - 14***).		

Table 1 - 3 **- Function Keys & Visual Indicators**

Download from Www.Somanuals.com Manuals

System Map: Front & Rear Views

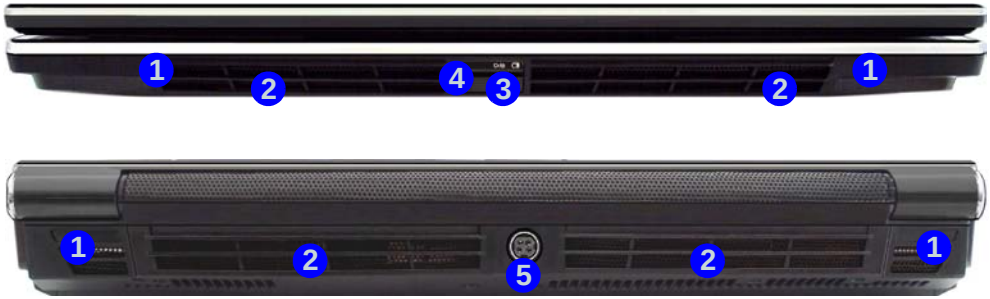

Figure 1 - 5
Front View

1. Color LEDs
2. Speakers
3. LED Power Indicators
4. Consumer Infrared Transceiver (enabled with optional TV Tuner only)
5. DC-In Jack

See ***Appendix A*** for a more detailed description of the ports & jacks etc.

TV Tuner Module Support

Note that the TV Tuner module (factory) option is supported by the **Windows Media Center** software. **Windows Media Center** is not included in **Starter** or **Home Basic** versions of ***Windows 7***.

Downloaded from LpManual.com Manuals

System Map: Right View

Figure 1 - 6
Right View

1. Headphone-In Jack
2. Microphone-In Jack
3. Line-In Jack
4. S/PDIF-Out Jack
5. Cable (CATV) Antenna Jack*
6. Combined eSATA/ USB Port
7. USB 2.0 Port
8. Security Lock Slot
9. Power Button

*Enabled with **Optional** Mini-PCI TV Tuner Only

See ***Appendix A*** for a more detailed description of the ports & jacks etc.

TV Tuner Module Support

Note that the TV Tuner module (factory) option is supported by the **Windows Media Center** software. **Windows Media Center** is not included in **Starter** or **Home Basic** versions of ***Windows 7***.

USB Ports

Note that the connections to the USB ports only fit one way, do not force them.

Downloaded from Service Manuals Online

System Map: Left View

Figure 1 - 7
Left View

1. DVI-Out Port
2. 2 * USB 2.0 Ports
3. RJ-45 LAN Jack
4. HDMI-Out Port
5. 7-in-1 Card Reader
6. ExpressCard 34 Slot
7. HDMI-In Port
8. Mini-IEEE 1394 Port
9. Optical Device Drive Bay

See ***Appendix A*** for a more detailed description of the ports & jacks etc.

Mini-IEEE 1394 Port

The Mini-IEEE 1394 port only supports **SELF POWERED** IEEE 1394 devices.

7-in-1 Card Reader

The card reader allows you to use the most popular digital storage card formats:

MMC (MultiMedia Card) / SD (Secure Digital) / MS (Memory Stick)
MS Pro (Memory Stick Pro) / MS Duo (requires PC adapter)
Mini SD (requires PC adapter) / RS MMC (requires PC adapter)

HDMI Ports

Note that **the** HDMI Ports support video and audio signals to attached external displays (also see ***"HDMI Ports" on page 2 - 9***).

USB Ports

Note that the connections to the USB ports only fit one way, do not force them.

Downloaded from LpManual.com Manuals

Disk Eject Warning

Don't try to eject a CD/DVD while the system is accessing it. This may cause the system to "crash". Stop the disk first then eject it, or press the stop button twice.

CD/DVD Emergency Eject

If you need to manually eject a CD/DVD (e.g. due to an unexpected power interruption) you may push the end of a straightened paper clip into the emergency eject hole. Do not use a sharpened pencil or any object that may break and become lodged in the hole. Don't try to remove a floppy disk/CD/DVD while the system is accessing it. This may cause the system to "crash".

Changing DVD Regional Codes

Go to the **Control Panel** and double-click **Device Manager (Hardware and Sound)**, then click the **+** next to **DVD/CD-ROM drives**. Double-click on the DVD-ROM device to bring up the **Properties** dialog box, and select the **DVD Region** (tab) to bring up the control panel to allow you to adjust the regional code.

DVD region detection is device dependent, not OS-dependent. You can select your module's region code **5** times. The fifth selection is permanent. This cannot be altered even if you change your operating system or you use the module in another computer.

1 - 14 System Map: Left View

Downloaded from Service Manuals Online

System Map: Bottom View

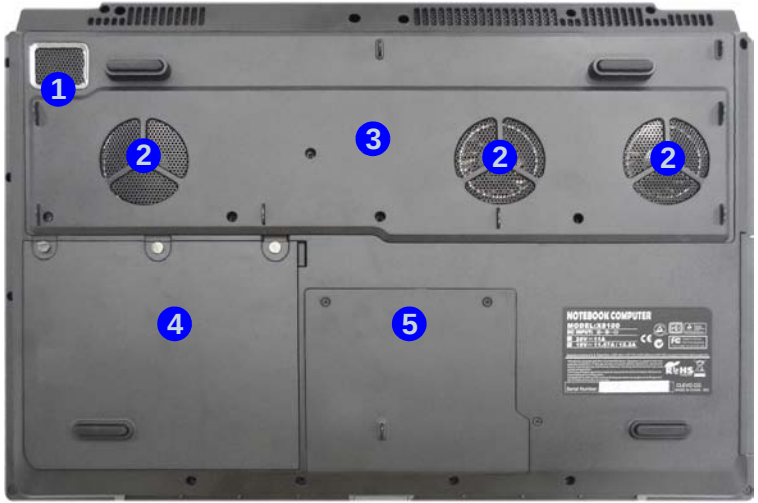

Figure 1 - 8
Bottom View

1. Sub Woofer
2. Fan Outlet/Intake
3. Component Bay Cover
4. Battery (Secondary HDD Bay - HDD3)
5. Primary HDD Bay (HDD1 & 2)

See ***Appendix A*** for a more detailed description of the ports & jacks etc.

Battery Information

Always completely discharge, then fully charge, a new battery before using it. Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges. See ***"Battery Information" on page 3 - 10*** for full instructions.

Overheating

To prevent your computer from overheating make sure nothing blocks the vent(s)/fan intake(s) while the computer is in use.

Downloaded from LpManual.com Manuals

Windows 7 Start Menu & Control Panel

Most of the control panels, utilities and programs within ***Windows 7*** (and most other ***Windows*** versions) are accessed from the **Start** menu. When you install programs and utilities they will be installed on your hard disk drive, and a shortcut will usually be placed in the **Start** menu and/or the desktop. Right-click the **Start menu** icon , and then select **Properties** if you want to customize the appearance of the **Start** menu.

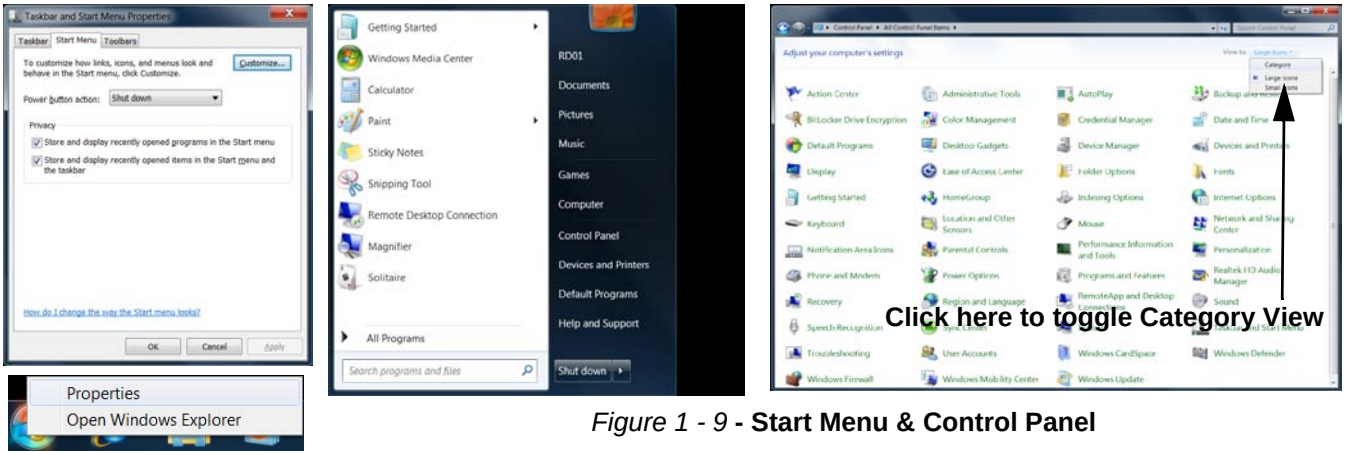

Figure 1 - 9 **- Start Menu & Control Panel**

In many instances throughout this manual you will see an instruction to open the **Control Panel**. The **Control Panel** is accessed from the **Start** menu, and it allows you to configure the settings for most of the key features in ***Windows*** (e.g. power, video, network, audio etc.). ***Windows 7*** provides basic controls for many of the features, however many new controls are added (or existing ones are enhanced) when you install the drivers. To see all controls it may be necessary to toggle off ***Category View*** to view the control panel icons.

1 - 16 System Map: Bottom View

Downloaded from ServiceManuals.com

Video Features

You can configure display options, from the **Display Settings** control panel in ***Windows*** as long as the appropriate **video driver** is installed. For more detailed video information see ***"NVIDIA Video Driver Controls" on page B - 1***.

To access **Display (Control Panel) and Screen Resolution** in ***Windows***:

1. Click **Start** and click **Control Panel**.
2. Click **Display** (icon) - In the **Appearances and Personalization** category.
3. Click **Adjust Screen Resolution/Adjust resolution**.

OR

4. Alternatively you can right-click the desktop and select **Screen resolution** (see right).
5. Use the dropbox to select the screen **Resolution** 1 (***Figure 1 - 10 on page 1 - 18***).
6. Click **Advanced settings** 2 (***Figure 1 - 10 on page 1 - 18***) to bring up the **Advanced** properties tabs.

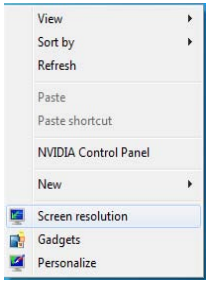

To access the ***NVIDIA Control Panel***:

1. Click **Start**, and click **Control Panel**.
2. Click **NVIDIA Control Panel** 3 (***Figure 1 - 11 on page 1 - 19***) - In the **Appearances and Personalization** category.

OR

3. Click **Start** and click **All Programs > NVIDIA Corporation**.
4. Click to select **NVIDIA Physx Properties** 4 (***Figure 1 - 11 on page 1 - 19***) .

OR

5. Click **Advanced settings** in the **Screen Resolution** control panel in ***Windows***.
6. Click **GeForce....(tab)** and click **Start the NVIDIA Control Panel** 5 (***Figure 1 - 11 on page 1 - 19***).

Downloaded from LpManual.com Manuals

Screen Resolution

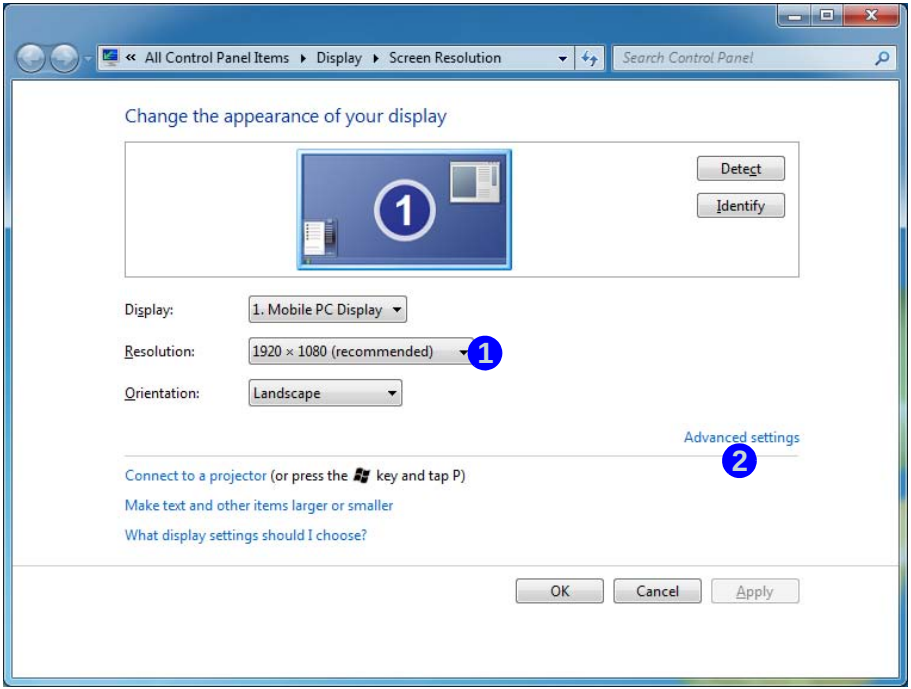

Figure 1 - 10 **- Screen Resolution**

Video Options

Note that card types, specifications and drivers are subject to continual updates and changes. Check with your service center for the latest details on video cards supported.

Downloaded from Laptop Computer Repair Manuals

NVIDIA Control Panel

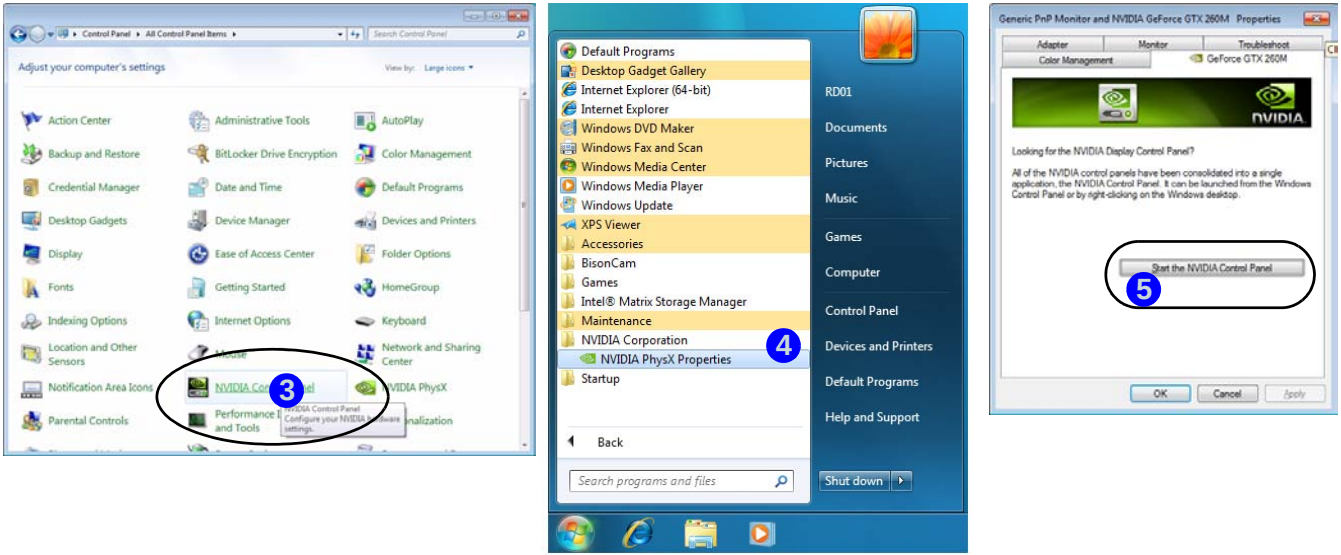

Figure 1 - 11 **- NVIDIA Control Panel**

Downloaded from LpManual.com Manuals

Power Options

The **Power Options** (**Hardware and Sound** menu) control panel icon in ***Windows*** (see page ***1 - 16***) allows you to configure power management features for your computer. You can conserve power by means of **power plans** and configure the options for the **power button**, **sleep button**, **computer lid (when closed)**, **display** and **sleep** mode from the left menu. Note that the **Power saver** plan may have an affect on computer performance.

Click to select one of the existing plans, or click ***Create a power plan*** in the left menu and select the options to create a new plan. Click ***Change plan settings*** and click ***Change advanced power settings*** to access further configuration options.

Pay attention to the instructions on battery care in ***"Battery Information" on page 3 - 11***.

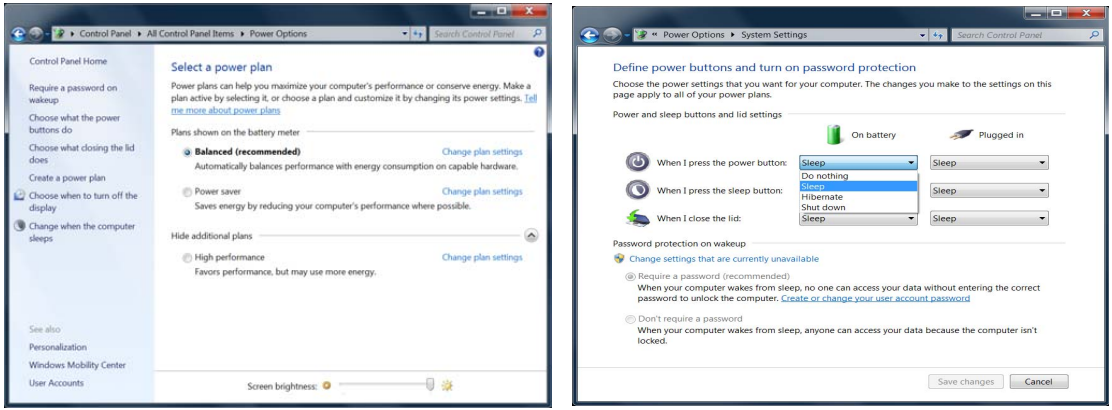
Control Panel ▸ All Control Panel Items ▸ Power Options
Search Control Panel
Control Panel Home
Require a password on wakeup
Choose what the power buttons do
Choose what closing the lid does
Create a power plan
Choose when to turn off the display
Change when the computer sleeps
Select a power plan
Power plans can help you maximize your computer's performance or conserve energy. Make a plan active by selecting it, or choose a plan and customize it by changing its power settings. Tell me more about power plans
Plans shown on the battery meter
Balanced (recommended)
Automatically balances performance with energy consumption on capable hardware.
Change plan settings
Power saver
Saves energy by reducing your computer's performance where possible.
Change plan settings
Hide additional plans
High performance
Favors performance, but may use more energy.
Change plan settings
See also
Personalization
Windows Mobility Center
User Accounts
Screen brightness:
Power Options ▸ System Settings
Search Control Panel
Define power buttons and turn on password protection
Choose the power settings that you want for your computer. The changes you make to the settings on this page apply to all of your power plans.
Power and sleep buttons and lid settings
On battery
Plugged in
When I press the power button:
When I press the sleep button:
When I close the lid:
Sleep
Do nothing
Sleep
Hibernate
Shut down
Password protection on wakeup
Change settings that are currently unavailable
Require a password (recommended)
When your computer wakes from sleep, no one can access your data without entering the correct password to unlock the computer. Create or change your user account password
Don't require a password
When your computer wakes from sleep, anyone can access your data because the computer isn't locked.
Save changes
Cancel

Figure 1 - 12 **- Power Options**

Downloaded from Laptop Computer Service Manuals

Chapter 2: Storage Devices, Mouse, Audio & Printer

Overview

Read this chapter to learn more about the following main features and components of the computer:

- Hard Disk Drive
- Optical Device
- 7-in-1 Card Reader
- ExpressCard Slot
- Game Keys
- HDMI Ports
- Audio Features
- TouchPad and Buttons/Mouse
- Adding a Printer

Downloaded from LpManual.com Manuals

Power Safety

Before attempting to access any of the internal components of your computer please ensure that the machine is not connected to the AC power, and that the machine is turned off. Also ensure that all peripheral cables, including phone lines, are disconnected from the computer.

Hard Disk Drive

The hard disk drive(s) is(are) used to store your data in the computer. The hard disk(s) can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5 mm. The primary hard disk bay 1 is accessible from the bottom of your computer as seen below, and the secondary hard disk bay 2 is located under the battery compartment.

The computer can accommodate up to three hard disks (two in the primary bay, and one in the secondary bay), and these may be configured in **RAID** or **AHCI** modes. Further details on removing and inserting the hard disk are available in ***"Upgrading the Hard Disk Drive(s)" on page 6 - 4***.

Figure 2 - 1
Hard Disk Location

Downloaded from Laptop Manuals

Optical Device

There is a bay for a 5.25" optical (CD/DVD) device (12.7mm height). The actual device will depend on the model you purchased (see *"Storage" on page C - 2*). The optical device is usually labeled "**Drive D:**" and may be used as a boot device if properly set in the **BIOS** (see *"Boot Menu" on page 5 - 12*).

Loading Discs

To insert a CD/DVD, press the open button 1 and carefully place a CD/DVD onto the disc tray with label-side facing up (use just enough force for the disc to click onto the tray's spindle). Gently push the CD/DVD tray in until its lock "clicks" and you are ready to start. The busy indicator 2 will light up while data is being accessed, or while an audio/video CD, or DVD, is playing. If power is unexpectedly interrupted, insert an object such as a straightened paper clip into the emergency eject hole 3 to open the tray.

Sound Volume Adjustment

How high the sound volume can be set depends on the setting of the volume control within ***Windows***. Click the **Volume** icon on the taskbar to check the setting.

Peripherals must be connected before you turn on the system.

Figure 2 - 2
Optical Device

Downloaded from LpManual.com Manuals

CD Emergency Eject

If you need to manually eject a CD (e.g. due to an unexpected power interruption) you may push the end of a straightened paper clip into the emergency eject hole. However please do NOT use a sharpened pencil or similar object that may break and become lodged in the hole.

Disk Eject Warning

Don't try to remove a CD/DVD while the system is accessing it. This may cause the system to "crash".

Handling CDs or DVDs

Proper handling of your CDs/DVDs will prevent them from being damaged. Please follow the advice below to make sure that the data stored on your CDs/DVDs can be accessed.

Note the following:

- Hold the CD or DVD by the edges; do not touch the surface of the disc.
- Use a clean, soft, dry cloth to remove dust or fingerprints.
- Do not write on the surface with a pen.
- Do not attach paper or other materials to the surface of the disc.
- Do not store or place the CD or DVD in high-temperature areas.
- Do not use benzene, thinner, or other cleaners to clean the CD or DVD.
- Do not bend the CD or DVD.
- Do not drop or subject the CD or DVD to shock.

Downloaded from ServiceManuals.com Manuals

DVD Regional Codes

To change the DVD regional codes see *"Changing DVD Regional Codes" on page 1 - 14*.

DVD Regional Coding	
Region	**Geographical Location**
1	USA, Canada
2	Western Europe, Japan, South Africa, Middle East & Egypt
3	South-East Asia, Taiwan, South Korea, The Philippines, Indonesia, Hong Kong
4	South & Central America, Mexico, Australia, New Zealand
5	N Korea, Russia, Eastern Europe, India & Most of Africa
6	China

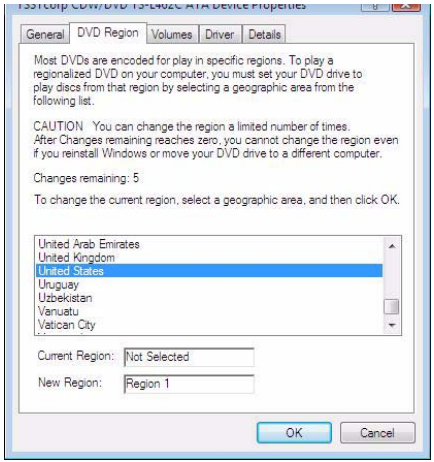
General
DVD Region
Volumes
Driver
Details
Most DVDs are encoded for play in specific regions. To play a regionalized DVD on your computer, you must set your DVD drive to play discs from that region by selecting a geographic area from the following list.
CAUTION You can change the region a limited number of times. After Changes remaining reaches zero, you cannot change the region even if you reinstall Windows or move your DVD drive to a different computer.
Changes remaining: 5
To change the current region, select a geographic area, and then click OK.
United Arab Emirates
United Kingdom
United States
Uruguay
Uzbekistan
Vanuatu
Vatican City
Current Region:
Not Selected
New Region:
Region 1
OK
Cancel

Table 2 - 1
DVD Regional Coding

Downloaded from LpManual.com Manuals

Card Reader Cover

Make sure you keep the cover in the card reader when not in use. This will help prevent foreign objects and/or dust getting in to the card reader.

7-in-1 Card Reader

The card reader allows you to use some of the latest digital storage cards. Push the card into the slot and it will appear as a removable device, and can be accessed in the same way as your hard disk (s). Make sure you install the Card Reader driver (see *"Card Reader/ExpressCard" on page 4 - 6*).

- MMC (MultiMedia Card)
- SD (Secure Digital)
- MS (Memory Stick)
- MS (Memory Stick Pro)
- MS Duo (requires PC adapter*)
- Mini SD (requires PC adapter*)
- RS MMC (requires PC adapter*)

***Note**: The PC adapters are usually supplied with these cards.

Figure 2 - 3
Right View

1. Card Reader

Downloaded from LpManuals Read Manuals

ExpressCard Slot

The computer is equipped with an **ExpressCard/34** slot that reads Express Card/34 and ExpressCard/54 formats. ExpressCards are the successors to PCMCIA (PC Cards).Make sure you install the ExpressCard driver (see ***"Card Reader/ExpressCard" on page 4 - 6***).

Figure 2 - 4
ExpressCard Slot

1. Express Card Slot

Inserting and Removing ExpressCards

- Align the ExpressCard with the slot and push it in until it locks into place (as pictured in the **generic** figure below).
- To remove an ExpressCard, simply press the card to eject it.

ExpressCard Slot Cover

Make sure you keep the cover in the ExpressCard slot when not in use. This will help prevent foreign objects and/or dust getting in to the ExpressCard Slot.

Downloaded from LpManual.com Manuals

Game Keys

The eight game hot keys on the left of the computer allow macros to be configured for common keystrokes used in applications (the keys can assigned macros for any program, not only games). To configure the keys follow the instructions below (make sure you have installed the **GameKey** Utility driver - see ***"GameKey Utility" on page 4 - 6***).

1. Run the **Game Key Configuration** program from the desktop icon (or from C:\Program Files\Chicony\GameKeys\GmKeyCfgUtl.exe).
2. Double-click the button for the appropriate key (it will turn red).
3. When the button is red you may then record the keystrokes to be assigned to the Game Key.

Figure 2 - 5
Game Key Configuration

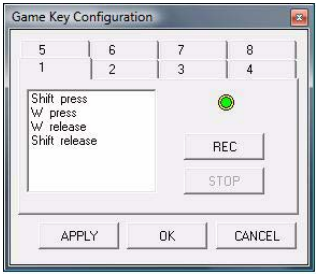

4. Click **OK**.
5. Repeat the procedure for the other Game Key if required.
6. Close the **Game Key Configuration** window.
7. The keystroke order will be repeated with the appropriate button press in any application program.

Downloaded from ElpManual.com Manuals

HDMI Ports

This computer features both HDMI (High-Definition Multimedia Interface) input and output ports. HDMI is a compact audio/video interface for transmitting uncompressed digital data.

- The HDMI-Out port allows you to display and hear video/audio sources from your computer to digital TVs, displays or audio systems that support an HDMI input.
- The HDMI-In port allows you to display external sources such as Blu-ray players, DVDs, set top boxes and games consoles etc. on your computer screen.

See ***"NVIDIA Video Driver Controls" from page B - 1*** for information on setting up external displays connected to the HDMI-Out port.

Make sure you install the HDI-In driver in order to support any HDMI input sources (see ***"HDMI-In Driver" on page 4 - 6***). When the HDMI-In driver is installed the **GameMate Media Player** will be installed.

Downloaded from LpManual.com Manuals

GameMate Media Player (HDMI-In)

The GameMate Media Player allows you to play content from digital sources through the HDMI-In port.

1. Connect your digital source to the HDMI-In port using an HDMI cable.
2. Access the **GameMate Media Player** from the desktop shortcut or from **GameMate** folder in **Program Files**.
3. Press play on any attached digital source player (or use a remote control to navigate the menus of consoles etc.).
4. The picture will appear in the **GameMate Media Player**.

Figure 2 - 6
GameMate Player

Download from Www.Somanuals.com Manuals

Double-click the GameMate screen to toggle through different screen size options. You can also right-click the screen to access the configuration menu to adjust any of the following settings:

RENDERED QUALITY
Select High, Medium or Low quality from this menu item.

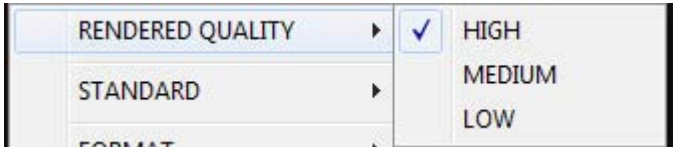

STANDARD
Select NTSC or PAL standard from this item.



FORMAT
Select the screen format here (only supported resolutions will be shown).



Downloaded from LpManual.com Manuals

ASPECT

The Aspect item allows you to select standard or wide screen aspect ratios.



SNAPSHOT

Click either the BMP or JPG items to take a screen shot of the current **GameMate** screen (the file will be placed in the **Pictures** library folder in ***Windows***).

TOPSHOT

If enabled then the **GameMate** screen will remain on top of other windows.



Download from Mp3Players.com Manuals

HDMI Audio Configuration

As HDMI (High-Definition Multimedia Interface) carries both **audio** and video signals you can configure the audio output as per the instructions below.

Audio Setup for HDMI

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Sound** (**Hardware and Sound**).
3. Click **Playback** (tab), and click to select **Realtek Digital Output.**
4. Click **Set Default** (button).
5. Click **OK** to close the **Sound** control panel.
6. Select **Speakers** as the default for standard audio sources.

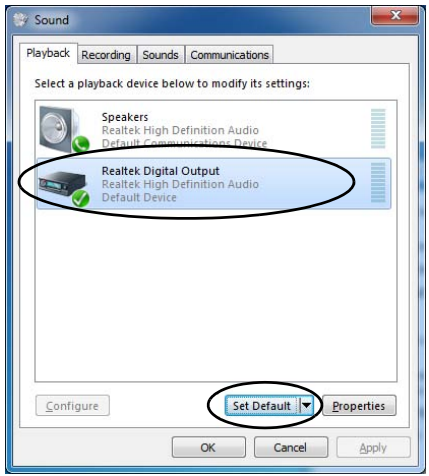

Figure 2 - 7
Sound Playback Options

Downloaded from LpManual.com Manuals

Audio Setup for LCD Monitors/TVs with HDMI Input

Some LCD monitors/TVs support HDMI input, but DO NOT have built-in digital audio decoders. Where this is the case, when playing DVDs in Windows Media Player/CyberLink Power DVD, a background noise can occur. If this situation does arise then please follow the instructions below.

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Sound** (**Hardware and Sound**).
3. Double-click **Realtek Digital Output**.
4. Click **Supported Formats** (tab).
5. Click to disable (remove the check in the box) **DTS Audio** and **Dolby Digital**.
6. Click OK and close the control panels.

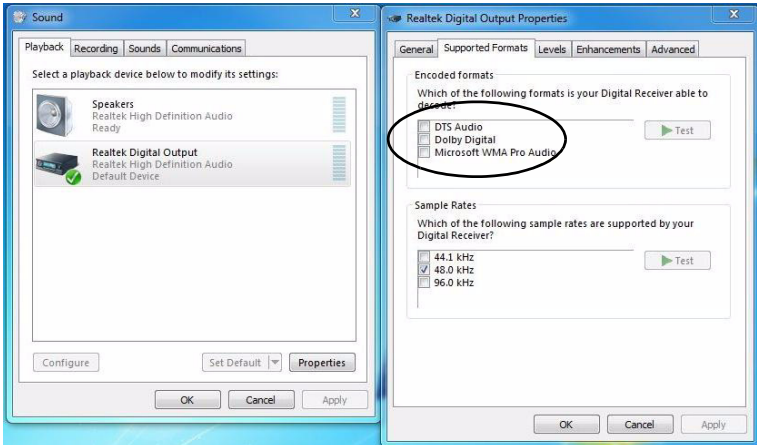

Figure 2 - 8
Sound
Supported Formats

Downloaded from ManualsLib.com Manuals

HDMI Notes

- Connect a device with HDMI support to the HDMI-Out port **BEFORE** attempting to play audio/video sources through the device.
- If you disconnect the HDMI cable the default audio playback device will not revert to speakers until the computer is restarted (if you do not wish to restart the computer then go to the **Sound** control panel and select **Speakers** as the default audio playback device).

HDMI Video Configuration

1. Connect an HDMI cable from the HDMI-Out port to your external display.
2. Configure your external display as per the instructions in ***"Configuring an External Display using the NVIDIA Control Panel" on page B - 7***.
3. Set up your external display (TV or LCD) for HDMI input (see your display device manual).
4. You can now play video/audio sources through your external display.

Other Applications

If you are using a third party application to play DVDs etc. you will need to consult the application's documentation to see the appropriate audio configuration (the application must support digital to analog translation).

Downloaded from LpManual.com Manuals

Sound Volume Adjustment

The sound volume level is set using the volume control within ***Windows*** (and the volume function keys on the computer). Click the volume icon in the taskbar to check the setting.

Figure 2 - 9
Realtek Audio Manager

Audio Features

You can configure the audio options on your computer from the **Sound** control panel in ***Windows***, or from the **Realtek HD Audio Manager** icon in the taskbar/ control panel (right-click the taskbar icon to bring up an audio menu). The volume may also be adjusted by means of the **Fn** + **F5/F6** key combination or by moving your finger slowly along the Touch Sensor volume control slider (see ***Table 1 - 2, on page 1 - 8***).

Right-click the icon to access the menu above.

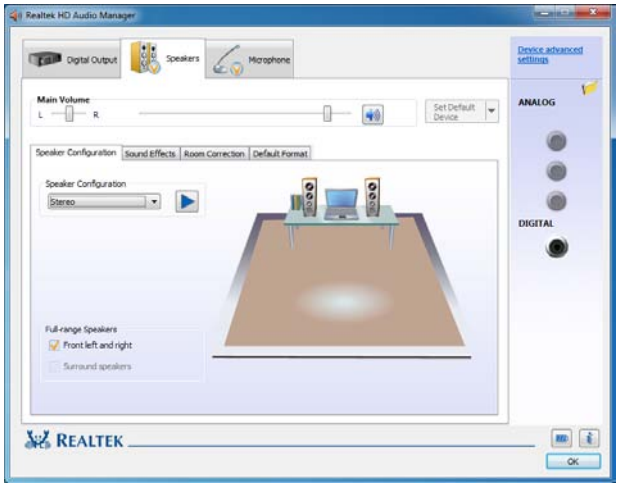

See ***"HDMI Audio Configuration" on page 2 - 13*** for a description of the audio configuration when connecting an HDMI supported display device.

Download from Service Manuals

Suppressing Audio Background Noise

A background noise may occur when audio power management is enabled, and the system resumes from power saving. To solve this problem you can disable Realtek HD Audio Manager Power Management.

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**) and make sure you are in **Classic View**.
2. Click **Realtek HD Audio Manager** (or right-click the taskbar icon and select **Sound Manager**).
3. Click the **Power Management** icon .

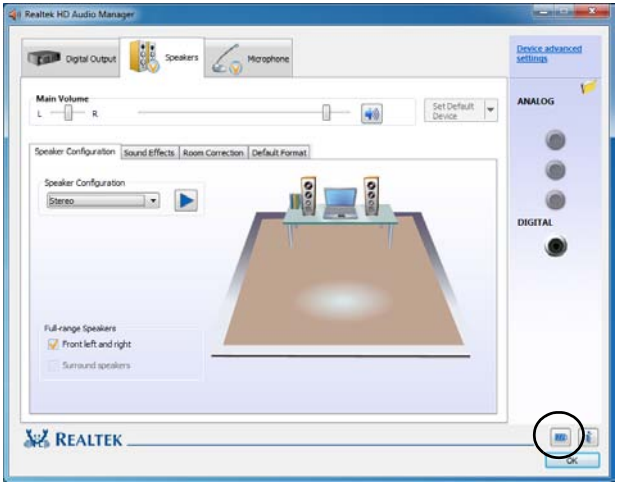

Figure 2 - 10
Realtek Audio Manager

Downloaded from LpManual.com Manuals

4. Make sure that **Power Management** is **disabled** (when disabled the icon will be black ; when enabled the icon will be blue).
5. Click **OK** to save the setting and close the control panel.

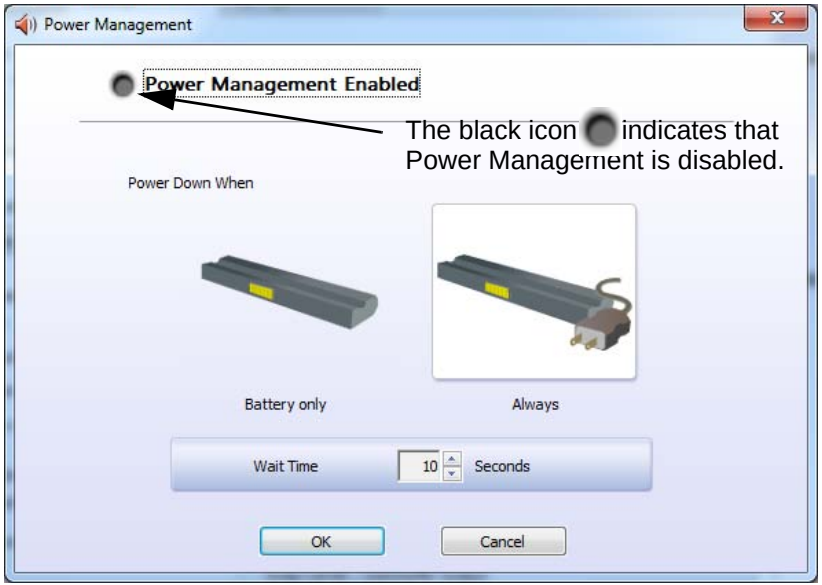

Figure 2 - 11
Realtek Audio Manager Power Management

Download from Www.Somanuals.com. All Manuals

Setup for Audio Recording

To record audio sources on your computer at optimum quality follow the instructions below:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**) and make sure you are in **Classic View**.
2. Click **Realtek HD Audio Manager** (or right-click the taskbar icon and select **Sound Manager**).
3. Click **Microphone Effects** (tab) in **Microphone** (tab), and then click to select **Noise Suppression** (button), or adjust the **Recording Volume** level to around **60**, to obtain the optimum recording quality.
4. Click **OK** to close the control panel and save the settings.

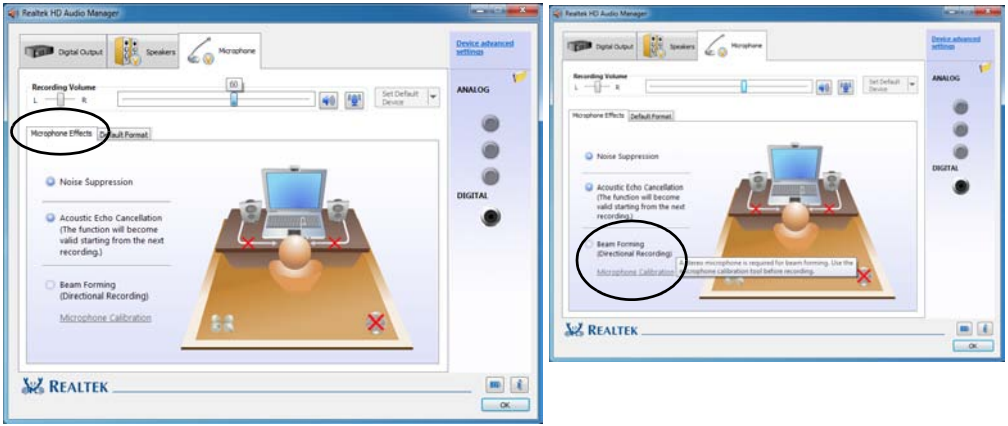

Beam Forming

If your stereo microphone supports Beam Forming (Directional Recording), then click the button to calibrate the stereo microphone before recording.

Figure 2 - 12
Realtek Audio Manager - Recording Setup

Downloaded from LpManual.com Manuals

Setup for 5.1 Surround Sound

To setup your system for 5.1 surround sound you will need to connect the audio cables to the Line-In and Microphone-In jacks.

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**) and make sure you are in **Classic View**.
2. Click **Realtek HD Audio Manager** (or right-click the taskbar icon and select **Sound Manager**).
3. Click **Speakers** (tab) and click **Speaker Configuration** (tab).
4. Select **5.1 Speaker** from the **Speaker Configuration** pull-down menu.

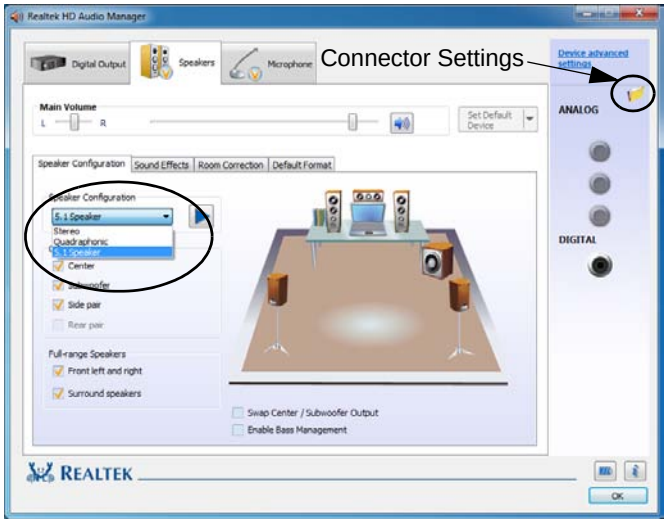

Figure 2 - 13
Speaker Configuration

Auto Popup Dialog

You should enable the auto popup dialog to automatically detect when a device has been plugged-in. If disabled, double-click **connector settings** and click the box to enable the auto popup detection of plugged-n devices.

Download from Service Manuals

5. Plug the **front speaker** cables into the **Headphone-Out Jack**.
6. Plug in the other cables (you may require an adapter to connect each cable to the appropriate jack e.g a stereo mini to dual RCA adapter) from your speakers as follows:

- Line-In Jack = Rear Speaker Out
- Microphone-In Jack = Center/Subwoofer Speaker Out

7. As you plug in each cable a dialog box will pop up (see ***"Auto Popup Dialog" on page 2 - 20***).
8. Click to put a tick in the appropriate box according to the speaker plugged-in (e.g. Rear Speaker Out), and then click **OK** to save the setting.
9. Click **OK** to exit **Realtek HD Audio Manager**.

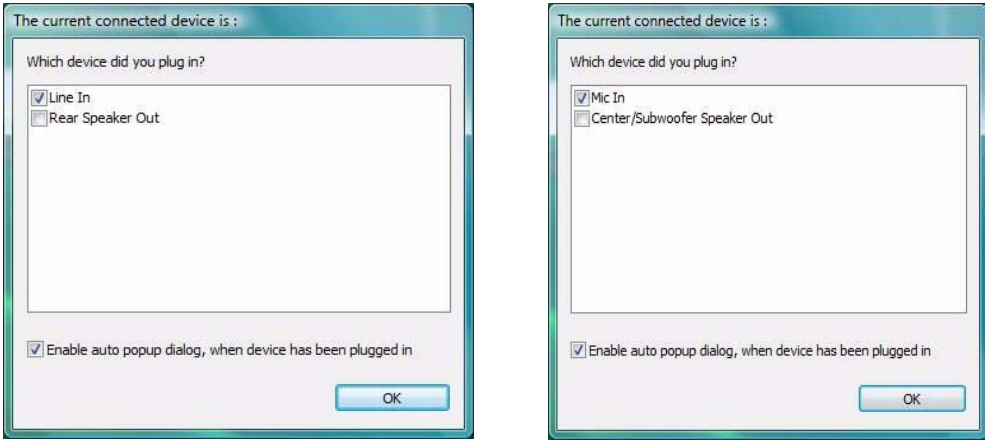
The current connected device is :
Which device did you plug in?
Line In
Rear Speaker Out
Enable auto popup dialog, when device has been plugged in
OK
The current connected device is :
Which device did you plug in?
Mic In
Center/Subwoofer Speaker Out
Enable auto popup dialog, when device has been plugged in
OK

Figure 2 - 14
Connected Device Auto Popup

Downloaded from LpManual.com Manuals

Sound Effects Equalizer

Press the [ ] **Sound Effects Equalizer Mode Toggle** button to toggle through some of the equalizer options (an on-screen icon will appear to show the selected mode). A more comprehensive list of options is available from the **Equalizer** drop-down list.

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**) and make sure you are in **Classic View**.
2. Click **Realtek HD Audio Manager** (or right-click the taskbar icon and select **Sound Manager**).
3. Click **Digital Output** (tab), click **Sound Effects** (tab) and then click to select an option in the **Equalizer** drop-box.
4. Click **OK** to close the control panel and save the settings.

Figure 2 - 15
Realtek Audio Manager - Recording Setup

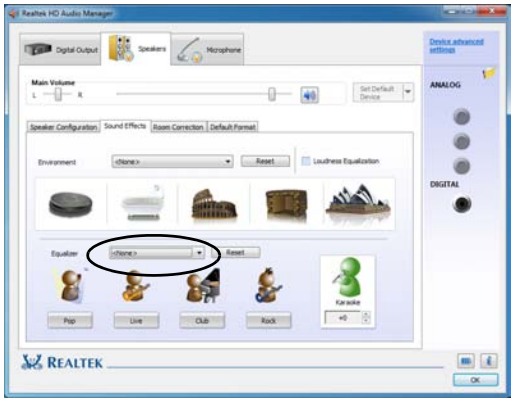

Downloaded from ManualsNet.com Manuals

Dolby Settings

You can adjust the Dolby settings from the Dolby tab in Speakers Properties.

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Sound** (**Hardware and Sound**).
3. Click **Playback** (tab).
4. Double-click **Speakers** (or select **Properties** from the right-click menu).
5. Click **Dolby** (tab)
6. Adjust the settings to your preferences and click OK.

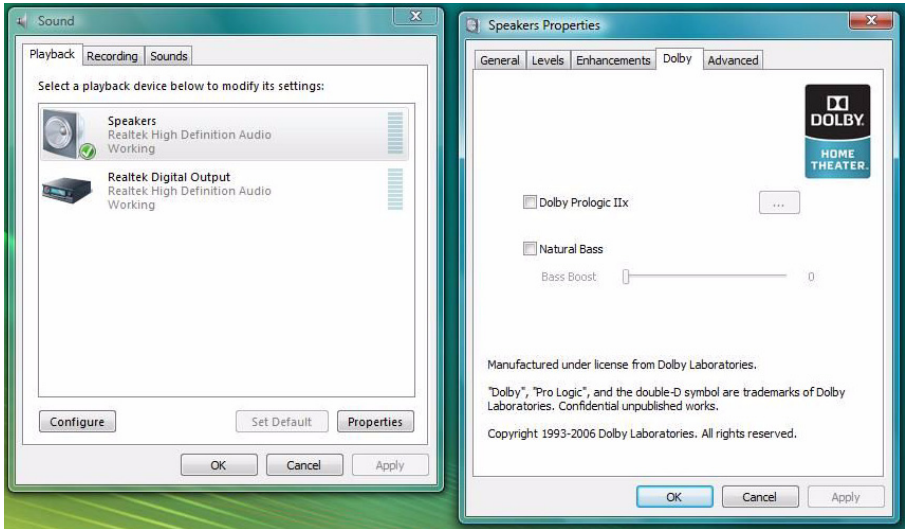

Figure 2 - 16
Speakers Properties Dolby Settings

Downloaded from LpManual.com Manuals

Mouse Driver

If you are using an external mouse your operating system may be able to auto-configure your mouse during its installation or only enable its basic functions. Be sure to check the device's user documentation for details.

TouchPad and Buttons/Mouse

The TouchPad is an alternative to the mouse; however, you can also add a mouse to your computer through one of the USB ports. The TouchPad buttons function in much the same way as a two-button mouse.

Once you have installed the TouchPad driver (see ***"TouchPad" on page 4 - 6***) you can configure the functions from the Mouse control panel in ***Windows***, or by double-clicking the TouchPad driver icon on the **taskbar**. You may then configure the TouchPad tapping, buttons, scrolling, pointer motion and sensitivity options to your preferences. You will find further information at www.synaptics.com.

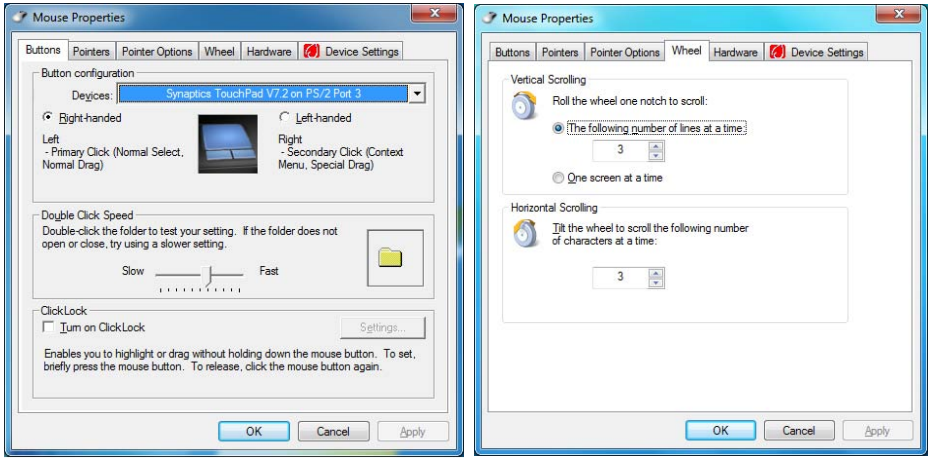

Figure 2 - 17
Mouse Properties

Downloaded from UpFreeManuals.com

Gestures and Device Settings

The Synaptics Gestures Suite application allows you to use a specific gesture (action) on the surface of the TouchPad to perform specific actions to manipulate documents, objects and applications.

You can configure the settings from the Device Settings tab in **Mouse Properties**:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Mouse** (**Hardware and Sound**).
3. Click **Device Settings** (tab) and click **Settings**.
4. Use the menu tree on the left to access the user configurable settings.

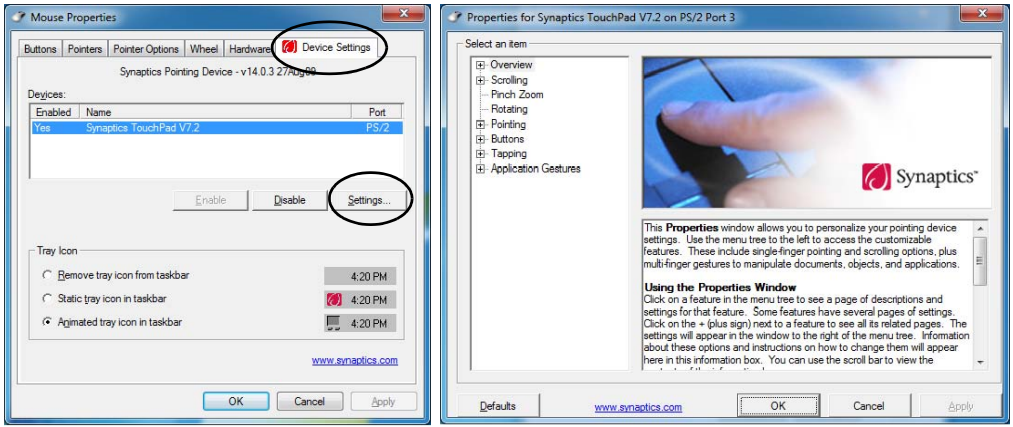
Mouse Properties
Buttons
Pointers
Pointer Options
Wheel
Hardware
Device Settings
Synaptics Pointing Device - v14.0.3 27Aug09
Devices:
Enabled
Name
Port
Yes
Synaptics TouchPad V7.2
PS/2
Enable
Disable
Settings...
Tray Icon
Remove tray icon from taskbar
Static tray icon in taskbar
Animated tray icon in taskbar
4:20 PM
www.synaptics.com
OK
Cancel
Apply
Properties for Synaptics TouchPad V7.2 on PS/2 Port 3
Select an item
Overview
Scrolling
Pinch Zoom
Rotating
Pointing
Buttons
Tapping
Application Gestures
Synaptics
This Properties window allows you to personalize your pointing device settings. Use the menu tree to the left to access the customizable features. These include single-finger pointing and scrolling options, plus multi-finger gestures to manipulate documents, objects, and applications.
Using the Properties Window
Click on a feature in the menu tree to see a page of descriptions and settings for that feature. Some features have several pages of settings. Click on the + (plus sign) next to a feature to see all its related pages. The settings will appear in the window to the right of the menu tree. Information about these options and instructions on how to change them will appear here in this information box. You can use the scroll bar to view the
Defaults
www.synaptics.com
OK
Cancel
Apply

Show Video

You can get a clearer view of the gestures involved by clicking the **Show Video** option for each gesture item.

Select the gesture (**Pinch Zoom, Rotating, Three Fingers Down and Three Finger Flick**) in the **Device Settings > Settings** left tree menu and click the **Show Video** button to see the demonstration video.

For more details on any of the gestures see the **help** in the lower part of the right menu window.

Figure 2 - 18
Mouse Properties - Device Settings

Downloaded from LpManual.com Manuals

Scrolling

The Two-Finger scrolling feature works in most scrollable windows and allows you to scroll horizontally and vertically. Place two fingers, slightly separated, on the TouchPad surface and slide both fingers in the direction required (in a straight continuous motion).

Figure 2 - 19
Scrolling Gesture

Zooming

The Pinch Zoom gesture can be used to perform the same function as a scroll wheel in ***Windows*** applications that support CTRL + scroll wheel zoom functionality. Place two fingers on the TouchPad (for best results use the tips of the fingers) and slide them apart to zoom in, or closer together to zoom out.

Figure 2 - 20
Zooming Gesture

Downloaded from Spiritual Mind Systems

Rotating

Use the Pivot Rotate gesture to rotate objects (e.g. photos) in 90 degree increments. Place a finger down on the left “target” zone and keep it stationary. Place another finger near the middle of the TouchPad and slide it in a circular motion around the stationary finger (clockwise or counterclockwise) to rotate the object.

Figure 2 - 21
Rotating Gesture

Three Finger-Flick/Three Fingers Down (Press)

The Three Finger-Flick gesture may be used to enhance navigation with a variety of applications such as browsing the Internet or scrolling through a photo viewer. The Three Fingers Down gesture may be used to launch user-selectable applications.

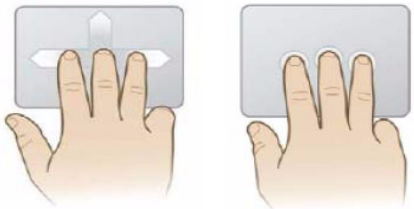

Figure 2 - 22
Flick/Press Gesture

Downloaded from LpManual.com Manuals

Parallel Printer

After setting up the printer attach the parallel cable to the printer.

Connect the printer's parallel cable to the Parallel to USB converter, and then plug the converter into the USB port.

Turn ON the printer, then turn ON the computer.

Windows will identify the printer and either load one of its own drivers or ask you to supply one. Follow the on-screen instructions.

Adding a Printer

The most commonly used peripheral is a printer. The following conventions will help you to add a printer; however it is always best to refer to the printer manual for specific instructions and configuration options.

USB Printer

Most new printers have a USB interface connection. You may use any one of the ports to connect the printer.

Install Instructions:

1. Set up the printer according to its instructions (unpacking, paper tray, toner/ink cartridge etc.).
2. Turn ON the computer.
3. Turn ON the printer.
4. Connect the printer's USB cable to one of the USB ports on the computer.
5. ***Windows*** will identify the printer and either load one of its own drivers or ask you to supply one. Follow the on-screen instructions.

Parallel Printer

This is still a very common type of printer. The install instructions are in the sidebar (you will need to purchase a parallel to USB converter).

Downloaded from Laptopmanuals.com Manuals

Chapter 3: Power Management

Overview

To conserve power, especially when using the battery, your computer power management conserves power by controlling individual components of the computer (the monitor and hard disk drive) or the whole system.

This chapter covers:

- The Power Sources
- Turning On the Computer
- Power Plans
- Power-Saving States
- Configuring the Power Buttons
- Battery Information

The computer uses enhanced power saving techniques to give the operating system (OS) direct control over the power and thermal states of devices and processors. For example, this enables the OS to set devices into low-power states based on user settings and information from applications.

OS Note

Power management functions will vary slightly depending on your operating system. For more information it is best to refer to the user's manual of your operating system.

(**Note**: All pictures used on the following pages are from the ***Windows 7*** OS.)

Downloaded from LpManual.com Manuals

The Power Sources

The computer can be powered by either an AC/DC adapter or a battery pack.

AC/DC Adapter

Use only the AC/DC adapter that comes with your computer. The wrong type of AC/DC adapter will damage the computer and its components (see page *C - 4*).

1. Attach the AC/DC adapter to the DC-In jack at the rear of the computer.
2. Plug the AC power cord into an outlet, and then connect the AC power cord to the AC/DC adapter.
3. Raise the lid/LCD to a comfortable viewing angle.
4. Press the power button to turn “On”.

Battery

The battery allows you to use your computer while you are on the road or when an electrical outlet is unavailable. Battery life varies depending on the applications and the configuration you're using. **To increase battery life, let the battery discharge completely before recharging** (see *“How do I completely discharge the battery?” on page 3 - 14*).

We recommend that you do not remove the battery. For more information on the battery, please refer to *“Battery Information” on page 3 - 10*.

Downloaded from Laptop Manuals - Manuals

Turning On the Computer

Now you are ready to begin using your computer. To turn it on simply press the power button on the front panel.

When the computer is on, you can use the power button as a Stand by/Hibernate/Shutdown hot-key button when it is pressed for less than **4 seconds** (pressing and holding the power button for longer than this will shut the computer down). Use **Power Options** in the ***Windows*** control panel to configure this feature.

Shut Down

Note that you should always shut your computer down by choosing the **Shut Down** command from the bottom right of the **Start** menu in ***Windows***. This will help prevent hard disk or system problems.

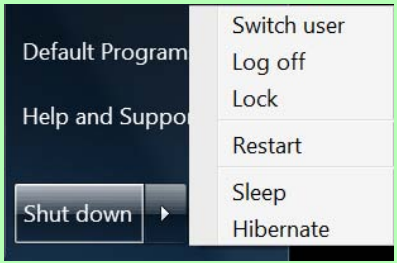

Forced Off

If the system "hangs", and the **Ctrl + Alt + Del** key combination doesn't work, press the power button for **4 seconds**, or longer, to force the system to turn itself off.

Power Button as Stand by or Hibernate Button

You can use the OS's **Power Options** control panel to set the power button to send the system into Stand by or Hibernate mode (see your OS's documentation, or ***"Configuring the Power Buttons" on page 3 - 8*** for details).

Downloaded from LpManual.com Manuals

Resuming Operation

See *Table 3 - 1, on page 3 - 9* for information on how to resume from a power-saving state.

Password

It is recommended that you enable a password on system resume in order to protect your data.

Power Plans

The computer can be configured to conserve power by means of **power plans**. You can use (or modify) an existing **power plan**, or create a new one.

The settings may be adjusted to set the **display** to turn off after a specified time, and to send the computer into **Sleep** after a period of inactivity.

Click ***Change plan settings*** and then click ***Change advanced power settings*** to access further configuration options in **Advanced Settings**.

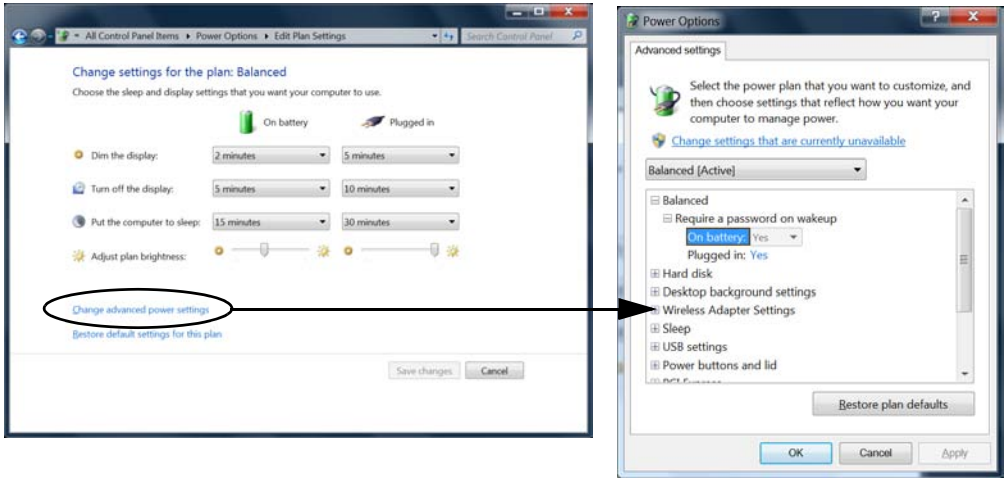

Figure 3 - 1
Power Plan Advanced Settings (Win 7)

Downloaded from ManualsLib.com Manuals

Each ***Windows* power plan** will also adjust the processor performance of your machine in order to save power. This is worth bearing in mind if you are experiencing any reduced performance (especially under DC/battery power).

Choose **High performance** (you may need to click **Show additional plans** to view the High performance plan) for maximum performance when the computer is powered from an AC power source. Choose the **Power saver** (bear in mind that this scheme may slow down the overall performance of the computer in order to save power) for maximum power saving when the computer is battery (DC power) powered.

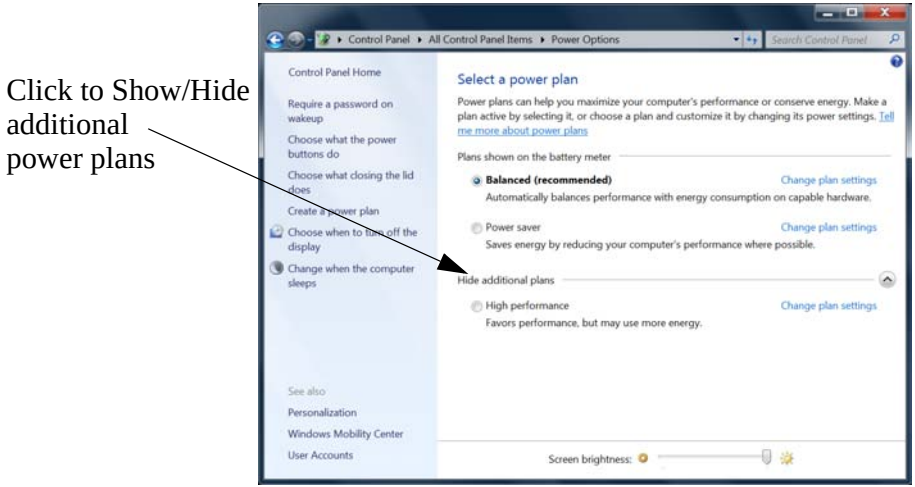
Click to Show/Hide additional power plans
Control Panel ▸ All Control Panel Items ▸ Power Options
Search Control Panel
Control Panel Home
Require a password on wakeup
Choose what the power buttons do
Choose what closing the lid does
Create a power plan
Choose when to turn off the display
Change when the computer sleeps
Select a power plan
Power plans can help you maximize your computer's performance or conserve energy. Make a plan active by selecting it, or choose a plan and customize it by changing its power settings. Tell me more about power plans
Plans shown on the battery meter
Balanced (recommended)
Change plan settings
Automatically balances performance with energy consumption on capable hardware.
Power saver
Change plan settings
Saves energy by reducing your computer's performance where possible.
Hide additional plans
High performance
Change plan settings
Favors performance, but may use more energy.
See also
Personalization
Windows Mobility Center
User Accounts
Screen brightness:

Figure 3 - 2
Power Plans (Win 7)

Downloaded from LpManual.com Manuals

Power-Saving States

You can use power-saving states to stop the computer's operation and restart where you left off. ***Win 7*** uses the **Sleep, Hibernate** and **Shut Down** power-saving states.

Sleep

In **Sleep** all of your work, settings and preferences are saved to memory before the system sleeps. When you are not using your computer for a certain length of time, which you specify in the operating system, it will enter **Sleep** to save power.

The PC wakes from **Sleep within seconds** and will return you to where you last left off (what was on your desktop) without reopening the application(s) and file(s) you last used.

If your mobile PC in **Sleep** is running on battery power the system will use only a minimum amount of power. After an extended period the system will save all the information to the hard disk and shut the computer down before the battery becomes depleted.

Downloaded from Service Manuals

Hibernate

Hibernate uses the least amount of power of all the power-saving states and saves all of your information on a part of the hard disk before it turns the system off. If a power failure occurs the system can restore your work from the hard disk; if a power failure occurs when work is saved only to memory, then the work will be lost. **Hibernate** will also return you to where you last left off within seconds. You should put your mobile PC into **Hibernate** if you will not use the computer for a period of time, and will not have the chance to charge the battery.

Shut down

You should **Shut down** the computer if you plan to install new hardware (don't forget to remove the battery and follow all the safety instructions in **Chapter 6**), plan to be away from the computer for several days, or you do not need it to wake up and run a scheduled task. Returning to full operation from **Shut down** takes longer than from **Sleep** or **Hibernate**.

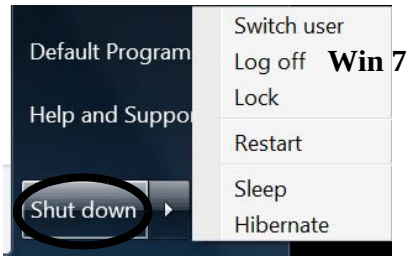

Figure 3 - 3
Start Menu Power

Silent Mode

You can use **Silent Mode** to reduce power consumption and fan noise. Use the **Silent Mode** Touch Sensor Instant Key to toggle this mode on/off.

On screen visual indicators and the Touch Sensor Instant Key will display the **Silent Mode** status (see *Table 1 - 2, on page 1 - 8*).

Note **Silent Mode** may reduce computer performance.

Downloaded from LpManual.com Manuals

Password Protection

It is recommended that you enable a password on wake up in order to protect your data.

However you can disable this setting from the **Power Options** menu by clicking ***Require a password on wakeup*** in the left menu, and selecting the options (click ***Change settings that are currently unavailable***).

Configuring the Power Buttons

The power/sleep button (**Fn + F4** key combo) and closed lid may be set to send the computer in to a power-saving state. Click **Choose what the power buttons do** on the left menu in **Power Options** to bring up the menu.

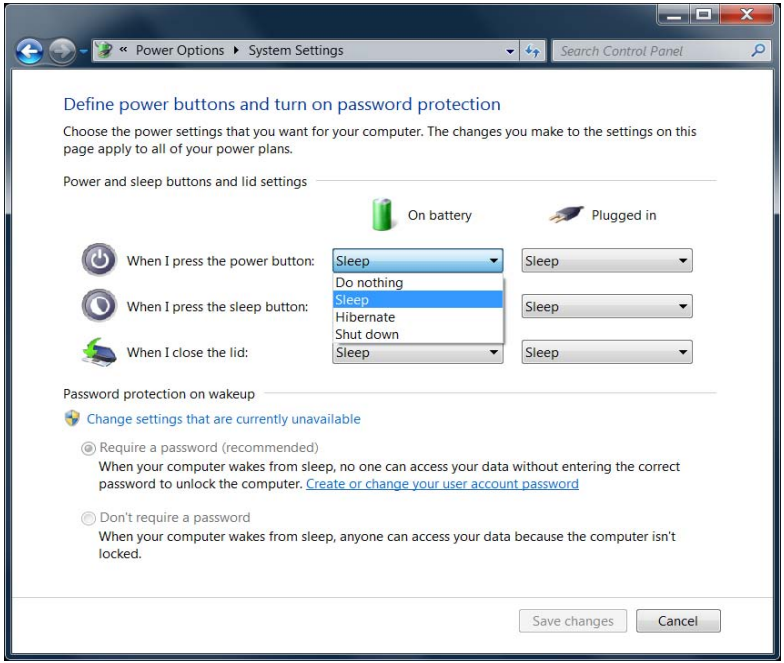
Power Options
System Settings
Search Control Panel
Define power buttons and turn on password protection
Choose the power settings that you want for your computer. The changes you make to the settings on this page apply to all of your power plans.
Power and sleep buttons and lid settings
On battery
Plugged in
When I press the power button:
Sleep
Sleep
Do nothing
Sleep
Hibernate
Shut down
When I press the sleep button:
Sleep
When I close the lid:
Sleep
Sleep
Password protection on wakeup
Change settings that are currently unavailable
Require a password (recommended)
When your computer wakes from sleep, no one can access your data without entering the correct password to unlock the computer. Create or change your user account password
Don't require a password
When your computer wakes from sleep, anyone can access your data because the computer isn't locked.
Save changes
Cancel

Figure 3 - 4
Power Options Define Power Buttons

Downloaded from manualslib.com manuals

Resuming Operation

You can resume operation from power-saving states by pressing the power button, or in some cases pressing the sleep button (**Fn + F4** key combo).

Power Status	Icon Color	To Resume
Power Off	Off	Press the Power Button
Sleep	Blinking Green	Press the Power Button Press the Sleep Button (Fn + F4 Key Combo)
Hibernate	Off (battery) Orange (AC/DC adapter)	Press the Power Button
Display Turned Off	Green	Press a Key or Move the Mouse/Touchpad

Power Button

When the computer is on, you can use the power button as a Sleep/Hibernate/Shut Down hot key button when it is pressed for less than **4 seconds** (pressing and holding the power button for longer than this will force the computer to shut down).

Closing the Lid

If you have chosen to send the computer to **Sleep** when the lid is closed, raising the lid will wake the system up.

Table 3 - 1
Resuming Operation

Downloaded from LpManual.com Manuals

Low Battery Warning

When the battery is critically low, immediately connect the AC/DC adapter to the computer or save your work, otherwise, the unsaved data will be lost when the power is depleted.

Battery Information

Follow these simple guidelines to get the best use out of your battery.

Battery Power

Your computer's battery power is dependent upon many factors, including the programs you are running, and peripheral devices attached. You can set actions to be taken (e.g. Shut down, Hibernate etc.), and set critical and low battery levels from power plan **Change plan settings > Change advanced power settings** (see *Figure 3 - 1 on page 3 - 4*).

Click the battery icon in the taskbar to see the current battery level and charge status.

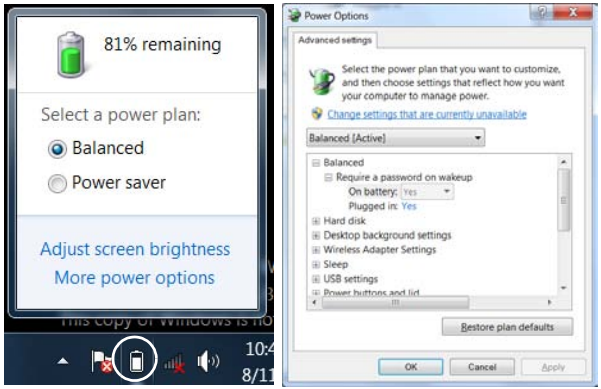

Figure 3 - 5
Battery Icon (Taskbar) & Battery Advanced Settings

Download from Service Manuals

Conserving Battery Power

- Use a **power plan** that conserves power (e.g **Power saver**), however note that this may have an affect on computer performance.
- Lower the brightness level of the LCD display. The system will decrease LCD brightness slightly to save power when it is not powered by the AC/DC adapter.
- Reduce the amount of time before the display is turned off.
- Close wireless, Bluetooth, modem or communication applications when they are not being used.
- Disconnect/remove any unnecessary external devices e.g. USB devices, ExpressCards etc.

Windows Mobility Center

The **Windows Mobility Center** control panel provides an easy point of access for information on battery status, power plans used and wireless device status etc.

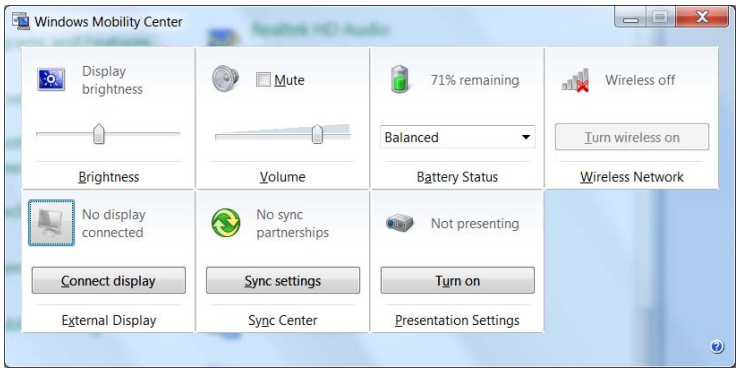

Figure 3 - 6
Windows Mobility Center

Downloaded from LpManual.com Manuals

Battery Life

Battery life may be shortened through improper maintenance. **To optimize the life and improve its performance, fully discharge and recharge the battery at least once every 30 days**.

We recommend that you do not remove the battery yourself. If you do need to remove the battery for any reason (e.g. long term storage) see ***"Removing the Battery" on page 6 - 3***.

New Battery

Always completely discharge, then fully charge, a new battery (see ***"Battery FAQ" on page 3 - 14*** for instructions on how to do this).

Recharging the Battery with the AC/DC Adapter

The battery pack automatically recharges when the AC/DC adapter is attached and plugged into an electrical outlet. If the computer is powered on, and in use, it will take several hours to fully recharge the battery. When the computer is turned off but plugged into an electrical outlet, battery charge time is less. (Refer to ***"LED Indicators" on page 1 - 7*** for information on the battery charge status, and to ***"Battery Information" on page 3 - 10*** for more information on how to maintain and properly recharge the battery pack.)

Download from Service Manuals

Proper handling of the Battery Pack

- DO NOT disassemble the battery pack under any circumstances.
- DO NOT expose the battery to fire or high temperatures, it may explode.
- DO NOT connect the metal terminals (+, -) to each other.

Damaged Battery Warning

Should you notice any physical defects (e.g. the battery is bent out of shape after being dropped), or any unusual smells emanating from the notebook battery, shut your computer down immediately and contact your service center. If the battery has been dropped we do not recommend using it any further, as even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire. It is recommended that you replace your computer battery every two years.

Caution

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Downloaded from LpManual.com Manuals

Battery FAQ

How do I completely discharge the battery?

Use the computer with battery power until it shuts down due to a low battery. Don't turn off the computer even if a message indicates the battery is critically low, just let the computer use up all of the battery power and shut down on its own.

1. Save and close all files and applications.
2. **Create** a **power plan** for discharging the battery and set all the options to **Never**.

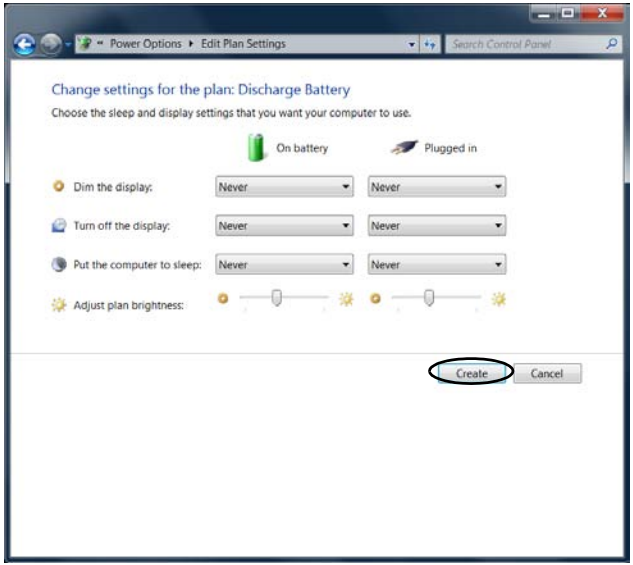

Figure 3 - 7
Power Plan Create

Downloaded from manuals.clubic.com

3. Click ***Change plan settings*** (after creating it) and click ***Change plan settings > Change advanced power settings***.

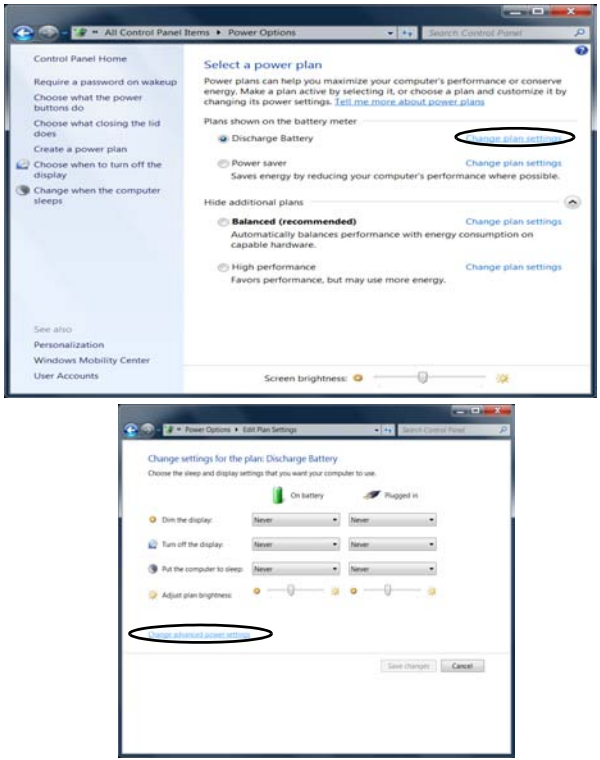
All Control Panel Items ▸ Power Options
Control Panel Home
Require a password on wakeup
Choose what the power buttons do
Choose what closing the lid does
Create a power plan
Choose when to turn off the display
Change when the computer sleeps
Select a power plan
Power plans can help you maximize your computer's performance or conserve energy. Make a plan active by selecting it, or choose a plan and customize it by changing its power settings. Tell me more about power plans
Plans shown on the battery meter
Discharge Battery
Change plan settings
Power saver
Change plan settings
Saves energy by reducing your computer's performance where possible.
Hide additional plans
Balanced (recommended)
Change plan settings
Automatically balances performance with energy consumption on capable hardware.
High performance
Change plan settings
Favors performance, but may use more energy.
See also
Personalization
Windows Mobility Center
User Accounts
Screen brightness:
Power Options ▸ Edit Plan Settings
Change settings for the plan: Discharge Battery
Choose the sleep and display settings that you want your computer to use.
On battery
Plugged in
Dim the display:
Turn off the display:
Put the computer to sleep:
Adjust plan brightness:
Change advanced power settings
Save changes
Cancel

Figure 3 - 8
Change Plan Settings / Change Advanced Power Settings

Downloaded from LpManual.com Manuals

4. Scroll down to **Battery** and click **+** to expand the battery options.
5. Choose the options below (click **Yes** if a warning appears):

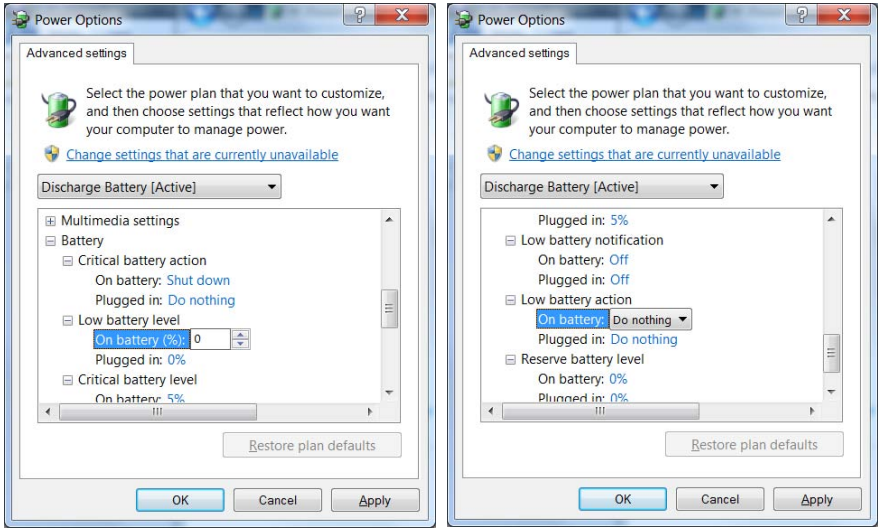

Figure 3 - 9
Power Options Advanced Settings - Battery

- Low battery levels = 0%
- Critical battery Levels = 0%
- Low battery action = Do Nothing
- Critical battery action (On battery) = Shut Down
- Critical battery action (Plugged in) = Do Nothing

Download from Service Manuals

How do I fully charge the battery?

When charging the battery, don't stop until the LED charging indicator light changes from orange to green.

How do I maintain the battery?

Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges.

SLI Multi GPU Configuration & Battery Power

Note that due to the high power and system demands created by enabling SLI Configuration, **you should not enable SLI configuration if your computer is powered by battery only**. If you attempt to run an SLI configuration when the computer is powered by the battery only, then system problems may occur.

If the computer is currently powered by battery only **do not enable SLI configuration**.

If you have currently enabled SLI configuration, and the computer is powered by the AC/DC adapter, **do not switch to battery power only** (or go to the NVIDIA Control Panel and disable SLI configuration before switching to battery power only).

Downloaded from LpManual.com Manuals

Downloaded from LpManual.com Manuals

Chapter 4: Drivers & Utilities

This chapter deals with installing the drivers and utilities essential to the operation or improvement of some of the computer's subsystems. The system takes advantage of some newer hardware components for which the latest versions of most available operating systems haven't built in drivers and utilities. Thus, some of the system components won't be auto-configured with an appropriate driver or utility during operating system installation. Instead, you need to manually install some system-required drivers and utilities.

RAID & AHCI Setup

Note that setting up a RAID, or AHCI mode, needs to be done prior to installing the *Windows OS*, and therefore before installing the other drivers listed here (see ***"Setting Up SATA RAID or AHCI Modes" on page 7 - 36***).

What to Install

The ***Device Drivers & Utilities + User's Manual*** disc contains the drivers and utilities necessary for the proper operation of the computer.

Table 4 - 1, on page 4 - 3 lists what you need to install and **it is very important that the drivers are installed in the order indicated**.

Module Driver Installation

The procedures for installing drivers for the **WLAN**, **PC Camera**, **Consumer Infrared** (for TV tuner remote), and **Fingerprint** modules are provided in ***"Modules" on page 7 - 1***.

Downloaded from LpManual.com Manuals

Driver Installation

Insert the *Device Drivers & Utilities + User's Manual* disc and click ***Install Drivers*** (button), or ***Option Drivers*** (button) to access the **Optional** driver menu.

Figure 4 - 1 **- Drivers Installer Screen 1**

1. Check the driver installation order from ***Table 4 - 1, on page 4 - 3*** (**the drivers must be installed in this order**) which is the same as that listed in the ***Drivers Installer*** menu below.
2. Click to select the driver you wish to install, after installing each driver it will become grayed out. If you need to reinstall any driver, click the **Unlock** button (you should uninstall the driver first).
3. Follow the instructions for each individual driver installation procedure as listed on the following pages.

Figure 4 - 2 **- Drivers Installer Screen 2**

Downloaded from Laptop Installation Manuals

Windows 7 Driver	Page
Video	*Page 4 - 5*
Audio	*Page 4 - 5*
LAN	*Page 4 - 5*
TouchPad	*Page 4 - 6*
Card Reader/ExpressCard	*Page 4 - 6*
GameKey Utility	*Page 4 - 6*
Hot Key	*Page 4 - 6*
HDMI-In Driver	*Page 4 - 6*
Intel® Matrix Driver Installation (for RAID)	*Page 7 - 7*
Wireless LAN Module	*Page 7 - 17*
PC Camera Module	*Page 7 - 22*
TV Tuner Module	*Page 7 - 30*
Fingerprint Reader Module	*Page 7 - 33*

Table 4 - 1 **- Driver Installation**

Manual Driver Installation

Click the **Browse CD/DVD** button in the *Drivers Installer* application and browse to the executable file in the appropriate driver folder.

Windows Update

After installing all the drivers make sure you enable **Windows Update** in order to get all the latest security updates etc. (all updates will include the latest **hotfixes** from Microsoft). See *"Windows Update" on page 4 - 7* for instructions.

Downloaded from LpManual.com Manuals

Updating/Reinstalling Individual Drivers

If you wish to update/reinstall individual drivers it may be necessary to uninstall the original driver.To do this go to the **Control Panel** in the ***Windows OS*** and double-click the **Programs and Features** icon (**Programs > Uninstall a program**). Click to select the driver (if it is not listed see below) and click **Uninstall**, and then follow the on screen prompts (it may be necessary to restart the computer). Reinstall the driver as outlined in this chapter.

If the driver is not listed in the **Programs and Features** menu:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Double-click **Device Manager** (**Hardware and Sound > Device Manager**).
3. Double-click the **device** you wish to update/reinstall the driver for (you may need to click "+" to expand the selection).
4. Click **Driver** (tab) and click the **Update Driver** or **Uninstall** button and follow the on screen prompts.

User Account Control (Win Vista)

If a **User Account Control** prompt appears as part of the driver installation procedure, click **Continue**/**Allow**, and follow the installation procedure as directed.

Windows Security Message

If you receive a ***Windows*** security message as part of the driver installation process. Just click ***"Install this driver software anyway"*** or **Install** to continue the installation procedure.

You will receive this message in cases where the driver has been released after the version of ***Windows*** you are currently using. All the drivers provided will have already received certification for ***Windows***.

New Hardware Found

If you see the message "**New Hardware Found**" during the installation procedure (**other than when outlined in the driver install procedure**), click **Cancel** to close the window, and follow the installation procedure.

Downloaded From Laptop-Manuals.com Manuals

Driver Installation Procedure

Insert the *Device Drivers & Utilities + User's Manual* disc and click ***Install Drivers*** (button), or ***Option Drivers*** (button) to access the **Optional** driver menu.

Driver Installation General Guidelines

The driver installation procedure outlined in this Chapter (and in **Chapter 7 Options & Modules**), are accurate at the time of going to press.

Drivers are always subject to upgrade and revision so the exact procedure for certain drivers may differ slightly. As a general guide follow the default on screen instructions for each driver (e.g. **Next > Next > Finish**) unless you are an advanced user. In many cases a restart is required to install the driver.

RAID Note: Setting up a **RAID**, or **AHCI** mode, needs to be done prior to installing the ***Windows*** *OS*, and therefore before installing the other drivers listed here.

Video

1. Click **1.Install Video Driver > Yes**.
2. Click **Next > Yes > Next**.
3. Click **Finish** to restart the computer.

Audio

1. Click **2. Install Audio Driver > Yes**.
2. Click **Next**.
3. Click **Finish** to restart the computer.

LAN

Make sure you have plugged the network cable in **before** installing the driver.

1. Click **3.Install LAN Driver > Yes**.
2. Click **Next > Install.**
3. Click **Finish** to complete the installation.

Downloaded from LpManual.com Manuals

TouchPad

1. Click **4.Install Touchpad Driver > Yes**.
2. Click **Next**.
3. Click the button to accept the license, and then click **Next**.
4. Click **Finish > Restart Now** to restart the computer.

Card Reader/ExpressCard

1. Click **5.Install Cardreader Driver > Yes**.
2. Click **Install > Finish**.

If you receive the error message "**0x000000D1**"after installing the cardreader driver, see page *8 - 12* for details.

GameKey Utility

1. Click **6.Install GAMEkey Driver > Yes**.
2. Click **Next**.
3. Click **Finish** to restart the computer.
4. See *"Game Keys" on page 2 - 9* for information.

Hot Key

1. Click **7.Install Hotkey Driver > Yes**.
2. Click **Next > Next**.
3. Click **Finish > Finish** to restart your computer.

You should install the HDMI-In driver if you intend to play and audio/video sources through the computer's HDMI-In port.

HDMI-In Driver

1. Click **Back** (button) and then click **Option Drivers** (button).
2. Click **6.Install HDMI In Driver > Yes**.
3. Click **Next**.
4. Click **Finish** (the application will prepare to install).
5. Click **Next > Install**.
6. Click **Finish**.
7. The **GameMate** application will appear on the desktop.

Downloaded From ManualsPlus.com Manuals

Windows Update

After installing all the drivers make sure you enable **Windows Update** in order to get all the latest security updates etc. (all updates will include the latest **hotfixes** from Microsoft).

To enable **Windows Update make sure you are connected to the internet**:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Check for updates** (**Security**), or double-click **Security Center** and click **Windows Update**.
3. Double-click **Check for updates (button)**.
4. The computer will now check for updates (you need to be connected to the internet).
5. Click **Install now** (button) to install the updates.

Optional Drivers

See the pages indicated for the driver installation procedures for any modules included in your purchase option.

Figure 4 - 3 **- Optional Drivers Installer Screen**

Downloaded from LpManual.com Manuals

RAID Setup

Note: Prior to setting up the RAID you will need to use an operable computer to copy the RAID driver to a USB flash drive before installing the ***Windows Vista*** operating system. See ***"Setting Up SATA RAID Mode" on page 7 - 2*** for configuration instructions.

Bluetooth Module

Note: The operating system is the default setting for **Bluetooth** control in ***Windows 7***, and does not require a driver. See ***"Bluetooth Module" on page 7 - 11*** for configuration instructions.

Wireless LAN

See the appropriate install procedure for your WLAN module in ***"Wireless LAN Module" on page 7 - 16***.

PC Camera

See the install procedure in ***"PC Camera Module" on page 7 - 22***.

Consumer Infrared (for TV Tuner Remote)

See the install procedure in ***"TV Tuner Module" on page 7 - 29***.

Fingerprint Reader Module

See the install procedure in ***"Fingerprint Reader Module" on page 7 - 32***.

Downloaded from Laptop Installation Manuals

Chapter 5: BIOS Utilities

Overview

This chapter gives a brief introduction to the computer's built-in software:

Diagnostics: The **POST** (Power-On Self Test)

Configuration: The ***Setup*** utility
If your computer has never been set up, or you are making important changes to the system (e.g. hard disk setup), then you should review this chapter first and note the original settings found in ***Setup***. Even if you are a beginner, keep a record of the settings you find and any changes you make. This information could be useful if your system ever needs servicing.

There is one general rule: *Don't make any changes unless you are sure of what you are doing*. Many of the settings are required by the system, and changing them could cause it to become unstable or worse. If you have any doubts, consult your service representative.

BIOS Screens

Note that the BIOS screens pictured on these pages are intended for guidance in setting up your system's BIOS.

BIOS versions are subject to constant change and revision, therefore your computer's actual screens may appear slightly different from those pictured on these pages.

Downloaded from LpManual.com Manuals

POST Screen

1. **BIOS** information
2. CPU type
3. Memory status
4. Enter **Setup** prompt appears only during **POST**

Note: The **POST** screen as pictured right is for guideline purposes only. The **POST** screen on your computer may appear slightly different. If the **Boot-time Diagnostic Screen is disabled** (see page ***5 - 9*** as per the default setting), the POST screen will not appear.

The Power-On Self Test (POST)

If you enable the **Boot-time Diagnostic Screen** in the Setup Utility, each time you turn on the computer the system takes a few seconds to conduct a **POST**, including a quick test of the on-board RAM (memory).

As the **POST** proceeds, the computer will tell you if there is anything wrong. If there is a problem that prevents the system from booting, it will display a system summary and prompt you to run ***Setup***.

If there are no problems, the ***Setup*** prompt will disappear and the system will load the operating system. Once that starts, you can't get into ***Setup*** without rebooting.

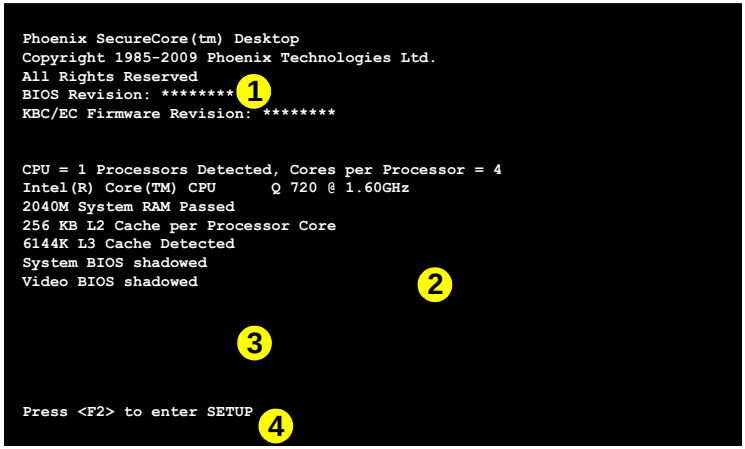

Figure 5 - 1
POST Screen

Downloaded from Laptop-Manuals.com

Failing the POST

Errors can be detected during the **POST**. There are two categories, “fatal” and “non-fatal”.

Fatal Errors

These stop the boot process and usually indicate there is something seriously wrong with your system. Take the computer to your service representative or authorized service center as soon as possible.

Non-Fatal Errors

This kind of error still allows you to boot. You will get a message identifying the problem (make a note of this message!) followed by the prompt:

- Press <F1> to resume
- <F2> to enter Setup

Press **F1** to see if the boot process can continue. It may work, without the correct configuration.

Press **F2** to run the **Setup** program and try to correct the problem. If you still get an error message after you change the setting, or if the “cure” seems even worse, call for help.

Downloaded from LpManual.com Manuals

BIOS Settings Warning

Incorrect settings can cause your system to malfunction. To correct mistakes, return to *Set-up* and restore the ***Set-up Defaults*** with <**F9**>.

The Setup Utility

The **Phoenix Setup** utility tells the system how to configure itself and manage basic features and subsystems (e.g. port configuration).

Entering Setup

To enter ***Setup***, turn on the computer and press **F2** during the **POST**. The prompt (***Press F2 to Enter Setup***) seen in **Figure 5 - 1** on page *5 - 2* is usually present for a few seconds after you turn on the system. If you get a “Keyboard Error”, (usually because you pressed **F2** too quickly) just press **F2** again.

If the computer is already on, reboot using the **Ctrl + Alt + Delete** combination and then hold down **F2** when prompted. The ***Setup*** main menu will appear.

Downloaded from Specialized Laptop Manuals

Setup Screens

The following pages contain additional advice on **portions** of the ***Setup***.

Along the top of the screen is a menu bar with menu headings. When you select a heading, a new screen appears. Scroll through the features listed on each screen to make changes to ***Setup***.

Instructions on how to navigate each screen are in the box along the bottom of the screen. If these tools are confusing, press **F1** to call up a **General Help** screen, and then use the arrow keys to scroll up or down the page.

The **Item Specific Help** on the right side of each screen explains the highlighted item and has useful messages about its options.

If you see an arrow ▶ next to an item, press **Enter** to go to a sub-menu on that subject. The sub-menu screen that appears has a similar layout, but the **Enter** key may execute a command.

Setup Menus

The **Setup** menus shown in this section are for **reference** only. Your computer's menus will indicate the configuration appropriate for your model and options.

Downloaded from LpManual.com Manuals

Main Menu

Figure 5 - 2
Main Menu

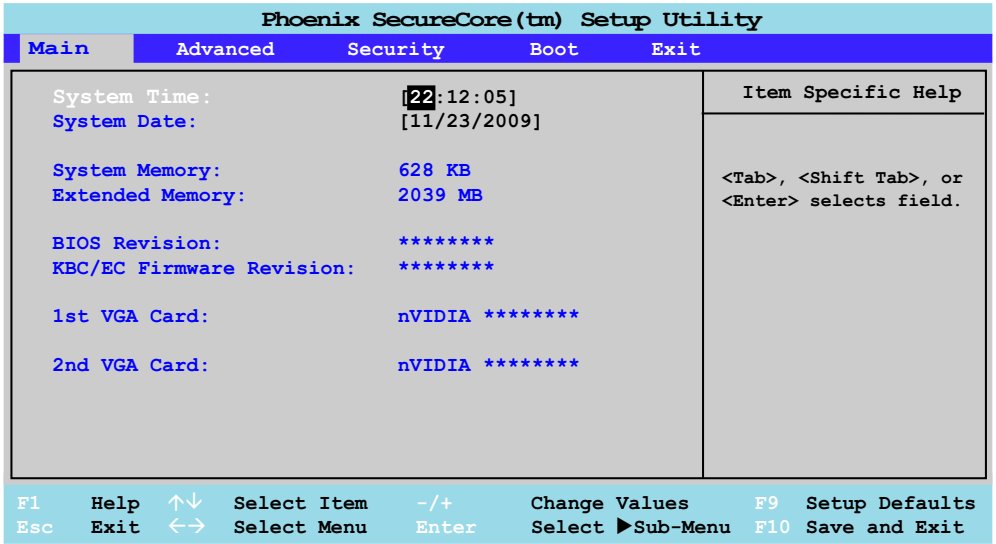

System Time & Date (Main Menu)
The hour setting uses the 24-hour system (i.e., ØØ = midnight; 13 = 1 pm). If you can change the date and time settings in your operating system, you will also change these settings. Some applications may also alter data files to reflect these changes.

Downloaded from Laptopmanual.com Manuals

System/Extended Memory: (Main Menu)
This item contains information on the system memory, and is not user configurable. The system will auto detect the amount of memory installed.

BIOS Revision/VGA Card etc. (Main Menu)
This item contains information on the BIOS version and video card etc., and is not user configurable.

Downloaded from LpManual.com Manuals

SATA Mode

If you have installed the ***Windows 7*** operating system with either **AHCI or RAID** mode enabled, **DO NOT** disable the set mode (if you wish to disable the set mode you will need to reinstall the ***Windows 7*** OS).

Advanced Menu

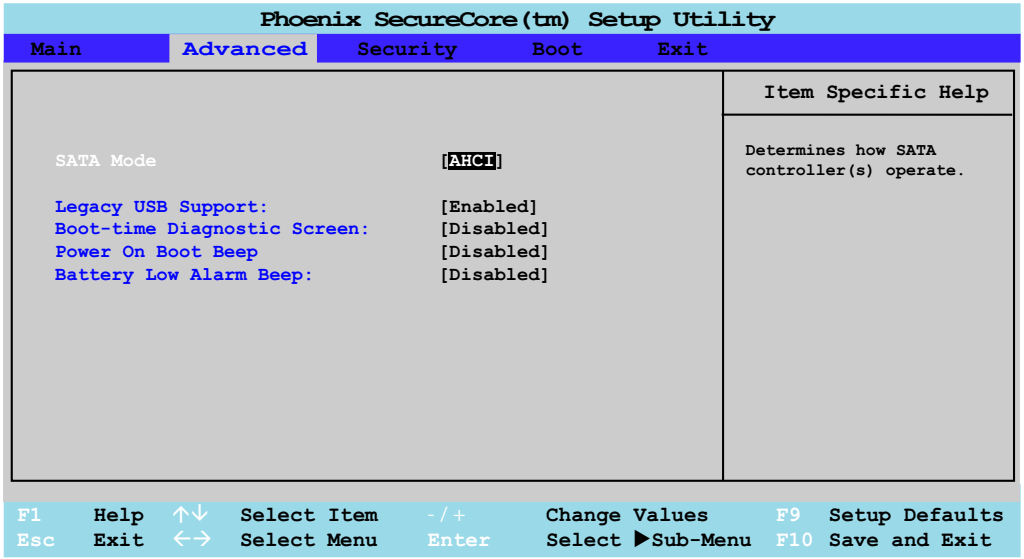

SATA Mode (Advanced Menu)

You may **enable/disable SATA RAID or AHCI** mode for your hard disks, however **you should only enable/disable SATA RAID or AHCI BEFORE installing an operating system**, and after you have backed up all necessary files and data (see sidebar).

Downloaded from Laptop-Manuals.com Manuals

Legacy USB Support: (Advanced Menu)
Choose "**Enabled**" if you intend to use **USB** devices in systems which do not normally support USB functionality (e.g. DOS). The default setting is "**Enabled**" and does not need to be changed if you intend to use your USB devices in **Windows**.

Boot-time Diagnostic Screen: (Advanced Menu)
Use this menu item to enable/disable the Boot-time Diagnostic Screen. Enable this item to display the POST screen (see ***"The Power-On Self Test (POST)" on page 5 - 2***).

Power On Boot Beep (Advanced Menu)
Use this menu item to enable/disable the beep as the computer starts up.

Battery Low Alarm Beep: (Advanced Menu)
Use this menu item to enable/disable the battery low alarm beep.

Downloaded from LpManual.com Manuals

Security Menu

The changes you make here affect the access to the **Setup** utility itself, and also access to your machine as it boots up after you turn it on. These settings do not affect your machine or network passwords which will be set in your software OS.

Security Menu

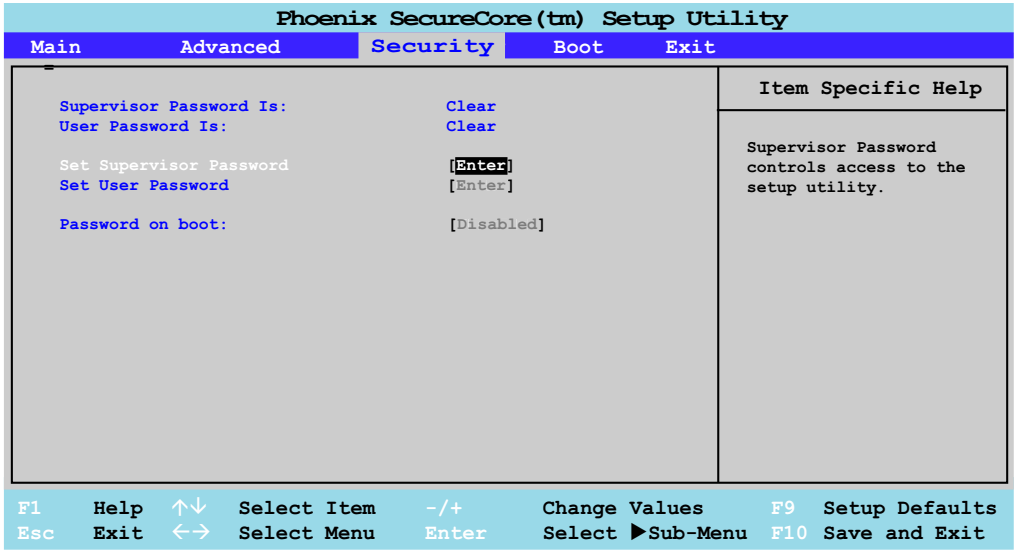
Phoenix SecureCore(tm) Setup Utility
Main
Advanced
Security
Boot
Exit
Item Specific Help
Supervisor Password Is: Clear
User Password Is: Clear
Set Supervisor Password [Enter]
Set User Password [Enter]
Password on boot: [Disabled]
Supervisor Password controls access to the setup utility.
F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults
Esc Exit ←→ Select Menu Enter Select ▶Sub-Menu F10 Save and Exit

Figure 5 - 4
Security Menu

Set Supervisor Password (Security Menu)

You can set a password for access to the **Phoenix SecureCore Setup Utility**. This will not affect access to the computer OS (only the **Phoenix SecureCore Setup Utility**).

Download from Service Info Manuals Manuals

Set User Password (Security Menu)
You can set a password for user mode access to the **Phoenix SecureCore Setup Utility**. This will not affect access to the computer OS, (only the ***Setup*** utility) unless you choose to set a ***Password on Boot*** (see below). Many menu items in the **Phoenix SecureCore Setup Utility** cannot be modified in user mode. You can only set the user password after you have set the supervisor password.

Password on boot (Security Menu)
Specify whether or not a password should be entered to boot the computer (**you may only set a password on boot if a supervisor password is enabled**). If "***Enabled***" is selected, only users who enter a correct password can boot the system (**see the warning in the sidebar**). The default setting is "***Disabled***".

Note: To clear existing passwords press **Enter** and type the existing password, then press **Enter** for the new password (without typing any password entry) and **Enter** again to confirm the password clearance.

Password Warning

If you set a boot password (Password on boot is "Enabled"), **NEVER** forget your password.

The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.

Downloaded from LpManual.com Manuals

Boot Menu

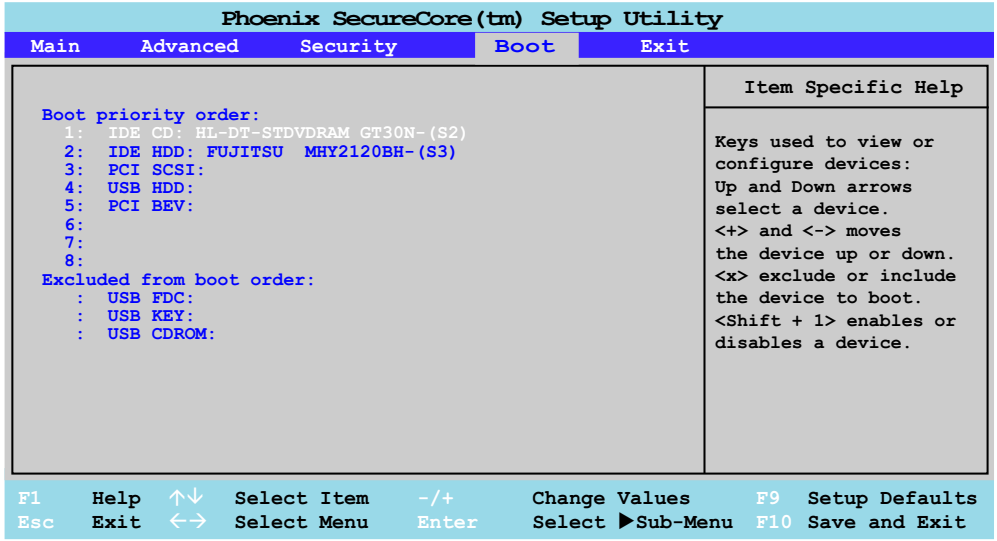

Figure 5 - 5
Boot Menu

5

BIOS Screens

Note that the BIOS screens pictured on these pages are intended for guidance in setting up your system's BIOS.

BIOS versions are subject to constant change and revision, therefore your computer's actual screens may appear slightly different from those pictured on these pages.

When you turn the computer on it will look for an operating system (e.g. ***Windows 7***) from the devices listed in this menu, and **in this priority order**. If it cannot find the operating system on that device, it will try to load it from the next device in the order specified in the **Boot priority order**. Item specific help on the right is available to help you move devices up and down the order.

Downloaded from Clevo.com Manuals

Exit Menu

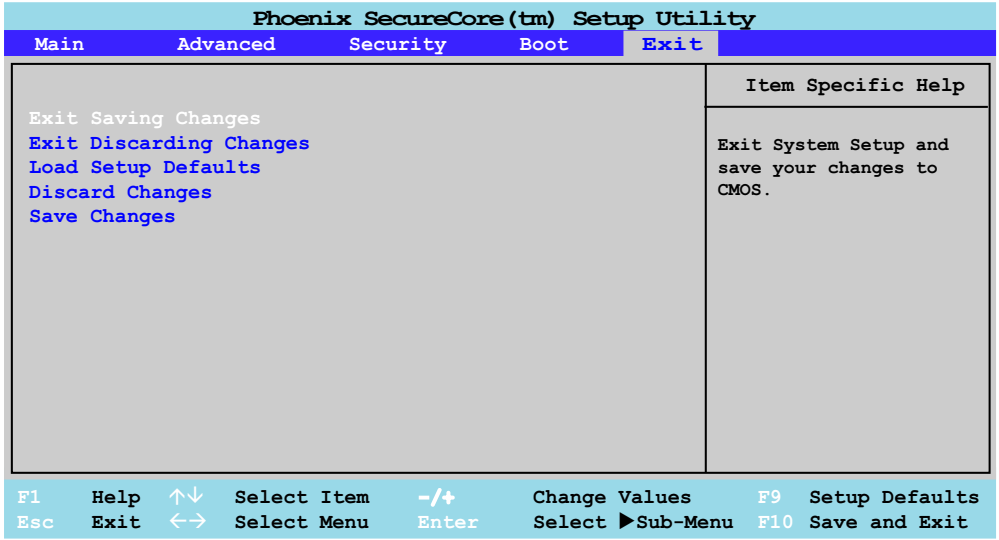

Figure 5 - 6
Exit Menu

Choosing to ***Discard Changes***, or ***Exit Discarding Changes***, will wipe out any changes you have made to the ***Setup***. You can also choose to restore the original ***Setup*** defaults that will return the ***Setup*** to its original state, and erase any previous changes you have made in a previous session.

Downloaded from LpManual.com Manuals

Downloaded from LpManual.com Manuals

Chapter 6: Upgrading The Computer

Overview

This chapter contains information on upgrading the computer. Follow the steps outlined to make the desired upgrades. If you have any trouble or problems you can contact your service representative for further help. Before you begin you will need:

- A small crosshead or Phillips screwdriver
- A small regular slotted (flathead) screwdriver
- An antistatic wrist strap

Before working with the internal components you will need to wear an antistatic wrist strap to ground yourself because static electricity may damage the components.

Warranty Warning

Please check with your service representative before undertaking any upgrade procedures to find out if this will VOID your warranty.

The chapter includes:

- Removing the Battery
- Upgrading the Hard Disk Drive(s)
- Upgrading the System Memory (RAM) - 1
- Upgrading the System Memory (RAM) - 2
- Upgrading the Optical (CD/DVD) Device

Please make sure that you review each procedure before you perform it.

Downloaded from LpManual.com Manuals

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

When Not to Upgrade

These procedures involve opening the system's case, adding and sometimes replacing parts.You should **not** perform any of these upgrades if:

- Your system is still under warranty or a service contract
- You don't have all the necessary equipment
- You're not in the correct environment
- You doubt your abilities

Under any of these conditions, contact your service representative to purchase or replace the component(s).

Removal Warning

When removing any cover(s) and screw(s) for the purposes of device upgrade, remember to replace the cover(s) and screw(s) before turning the computer on.

Upgrading the Processor

If you want to upgrade your computer by replacing the existing processor with a faster/new one you will need to contact your customer service representative. We recommend that you do not do this yourself, since if it is done incorrectly you may damage the processor or mainboard.

Downloaded from Service Manual.com Manuals

Removing the Battery

If you are confident in undertaking upgrade procedures yourself, for safety reasons it is best to remove the battery.

1. Turn the computer off and turn it over.
2. Loosen screws 1 - 3 and carefully lift the battery 4 up.
3. Remove the battery from the battery bay.

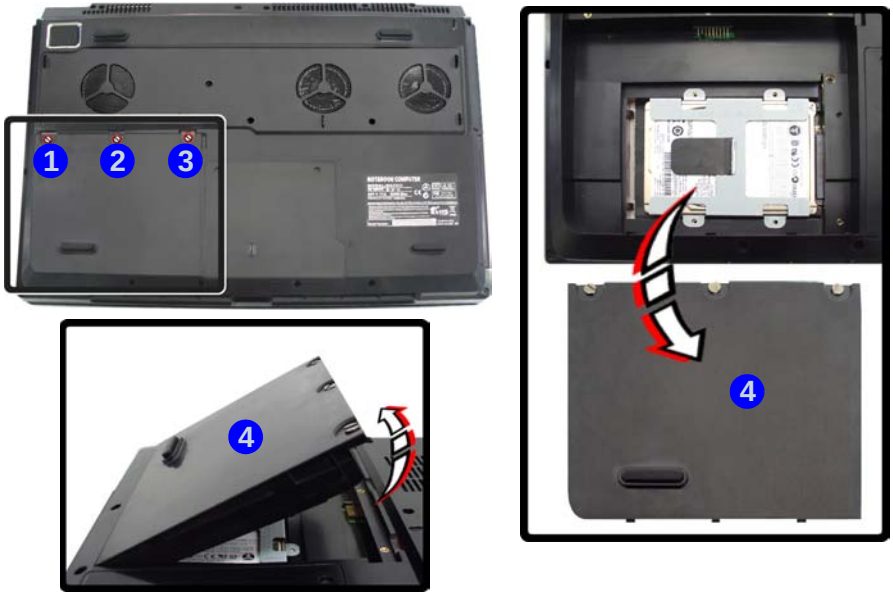

Warranty Warning

Please check with your service representative before undertaking any upgrade procedures to find out if this will VOID your warranty.

Figure 6 - 1
Battery Removal

Downloaded from LpManual.com Manuals

HDD System Warning

New HDD's are blank. Before you begin make sure:
You have backed up any data you want to keep from your old HDD.
You have all the CD-ROMs and FDDs required to install your operating system and programs.
If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

Upgrading the Hard Disk Drive(s)

The hard disk drive(s) can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm (h) (see *"Storage" on page C - 2*). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in *"Drivers & Utilities" on page 4 - 1*), when setting up a new hard disk.

1. Turn **off** the computer, and turn it over and remove the battery.
2. Locate the hard disk bay cover and remove screws 1 & 2.

Figure 6 - 2
Component Bay Cover Screws

Downloaded from manualslib.com manuals

3. Remove the hard disk bay cover 3.
4. Remove screws 4 - 9 from the hard disk assembly.
5. Remove the hard disk assembly by pulling the tab to disconnect it from the connector 10.

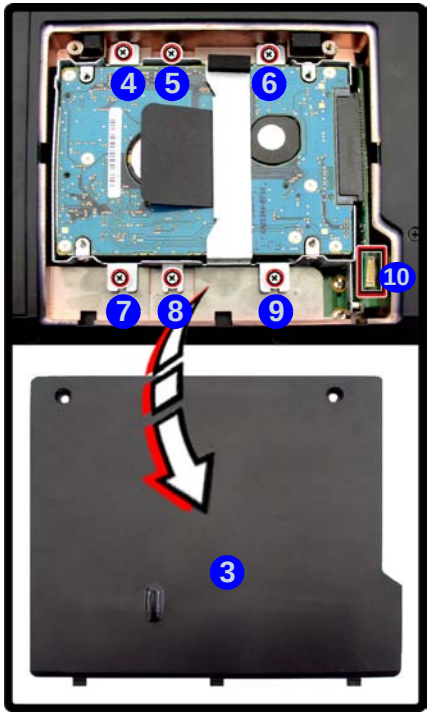

Figure 6 - 3
Bay Cover Removal & Hard Disk Assembly Screws

Downloaded from LpManual.com Manuals

6. Remove screws 11 - 20 (depending on how many hard disks you have installed in the assembly).
7. Separate the hard disk board 21 from the case 22.
8. Separate the hard disk(s) 23 & 24 from the case.
9. Reverse the process to install any new hard disk(s).

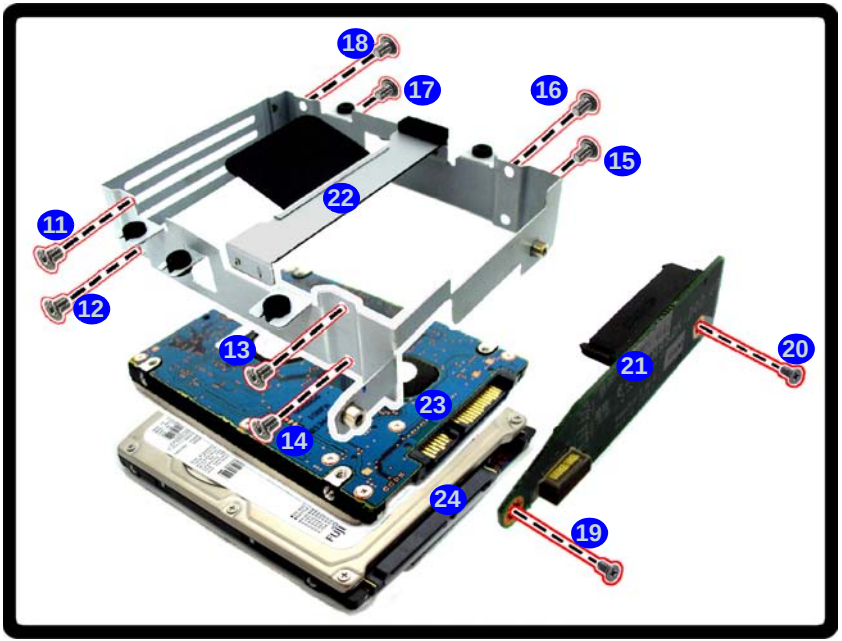

Figure 6 - 4
Hard Disk(s) Removal

Downloaded from Laptopmanuals.com

Removing the Hard Disk in the Secondary HDD Bay

1. Turn **off** the computer, and turn it over and remove the battery.
2. The secondary hard disk bay is located under the battery compartment.
3. Remove screws 25 - 28.
4. Slide the hard disk assembly in the direction of the arrow 29.
5. Lift the hard disk assembly 30 out of the compartment.
6. Remove the screws 31 - 34 to release the hard disk from the case 35.
7. Reverse the process to install any new hard disk(s).

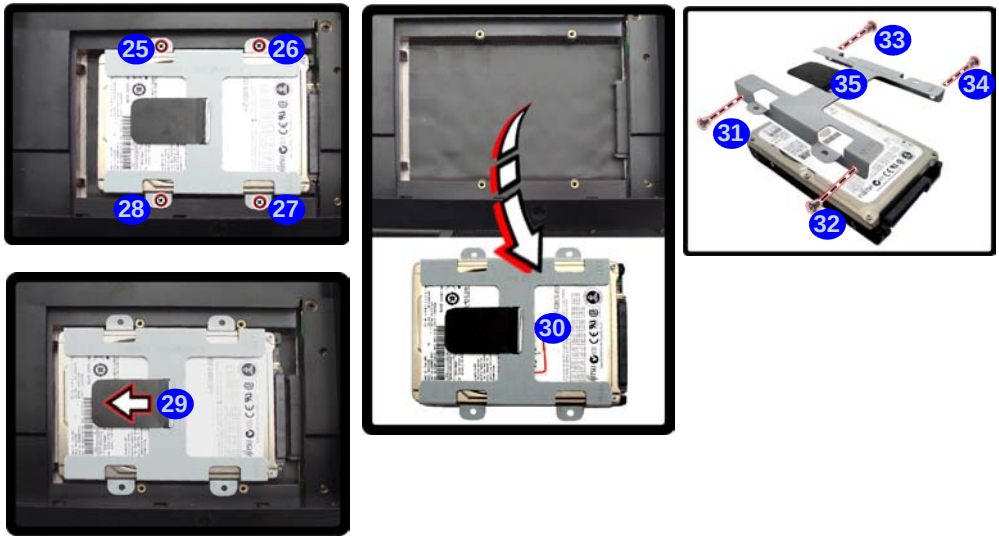

Figure 6 - 5
Secondary HDD Removal

Downloaded from LpManual.com Manuals

Upgrading the System Memory (RAM) - 1

The computer has **two** memory sockets for 204 pin Small Outline Dual In-line (SO-DIMM) **DDR III (DDR3)** type memory modules (see *"Memory" on page C - 2*). The total memory size is automatically detected by the POST routine once you turn on your computer.

1. Turn **off** the computer, and turn it over and remove the battery.
2. Locate the component bay cover and remove screws 1 - 5

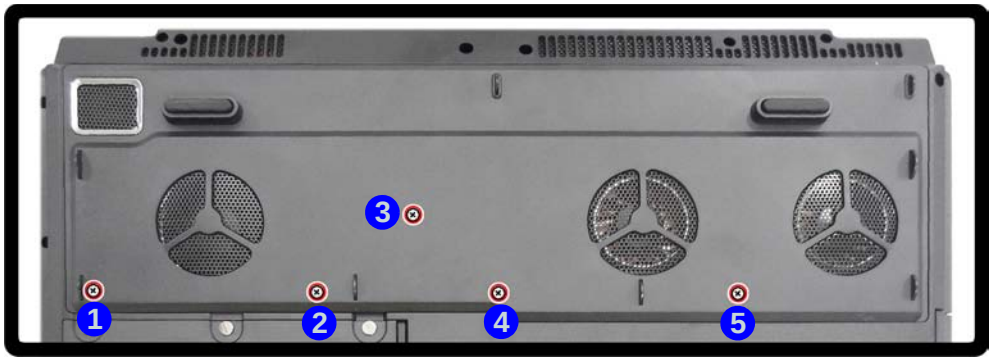

Figure 6 - 6
Component Bay Cover Screws

Downloaded from Laptopmanuals.com

3. Carefully (**a fan and cable are attached to the under side of the cover**) lift up the bay cover.
4. Carefully disconnect the fan cable 6, and remove the cover 7.

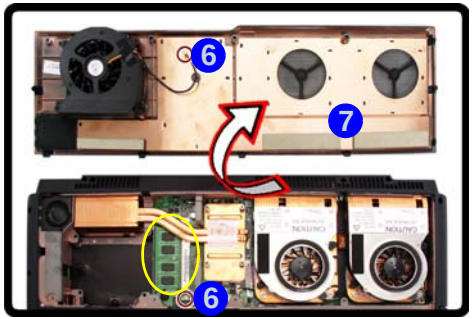

Figure 6 - 7
Component Bay Cover Removal

5. Loosen the heat sink screws in the order indicated 8 - 11.

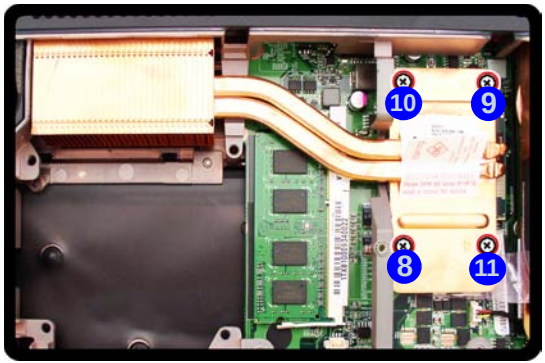

Figure 6 - 8
Heat Sink Screws

Downloaded from LpManual.com Manuals

6. Carefully (it may be hot) remove the heat sink 12.

Figure 6 - 9
Heat Sink Removal

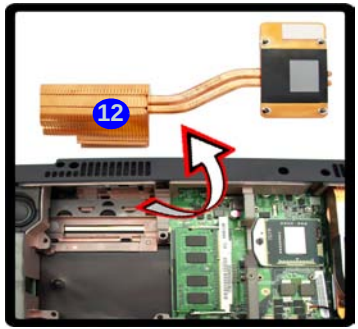

Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.

7. Gently pull the two release latches (13 & 14) on the sides of the memory socket in the direction indicated below.
8. The RAM module 15 will pop-up, and you can remove it.

Figure 6 - 10
RAM Module Removal

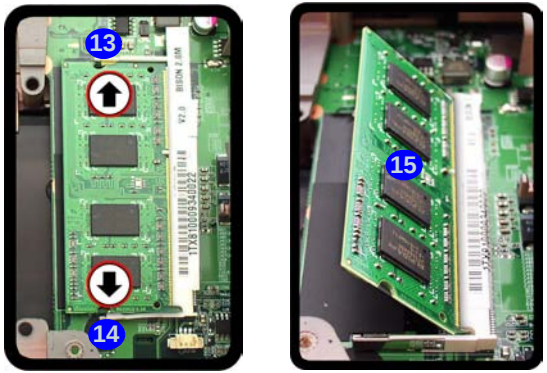

Download Upgrade Documents from Mysitec

9. Pull the latches to release the second module if necessary.
10. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory socket.
11. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the socket as it will go. DO NOT FORCE the module; it should fit without much pressure.
12. Press the module in and down towards the mainboard until the socket levers click into place to secure the module.
13. Replace the heat sink (make sure you tighten the screws in the order indicated on the label as below).

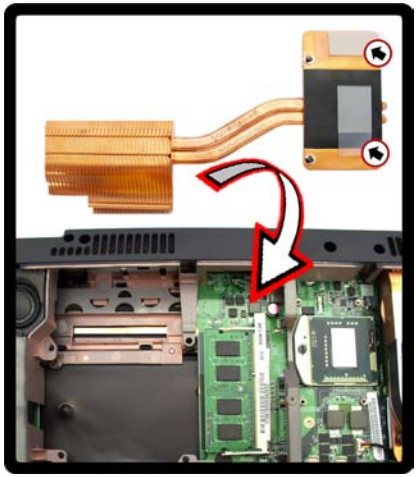

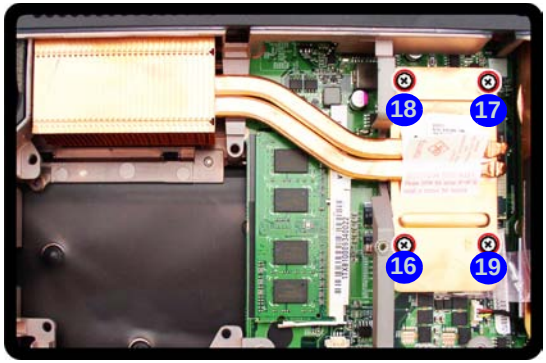

Figure 6 - 11
Heat Sink Insertion

Downloaded from LpManual.com Manuals

14. Replace the component bay cover and make sure you reconnect the fan cable (see ***Figure 6 - 7 on page 6 - 9***).
15. Replace all the component bay cover screws.
16. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

Download Upgrading Laptop Computer Systems

Upgrading the System Memory (RAM) - 2

The computer has **two** memory sockets for 204 pin Small Outline Dual In-line (SO-DIMM) **DDR III (DDR3)** type memory modules (see ***"Memory" on page C - 2***). The total memory size is automatically detected by the POST routine once you turn on your computer.

1. Turn **off** the computer, and turn it over and remove the battery.
2. Remove screws 1 & 2 from the bottom of the computer.

Figure 6 - 12
Bottom LED Cover Module Screws

Downloaded from LpManual.com Manuals

3. Turn the computer over, open the Lid/LCD, and carefully (a cable is connected to the underside of the LED cover module) unsnap up the LED cover module from point 3 on the right.

Figure 6 - 13
LED Cover Module Removal

4. Lift up the LED cover module 4 and disconnect cable 5.

Figure 6 - 14
LED Cover Module Cable Disconnect

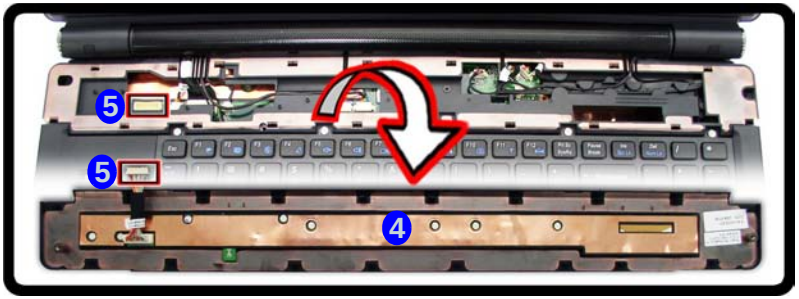

Download Upgrading From Manuals

5. Remove screws 6 - 10 from the keyboard.

Figure 6 - 15
Keyboard Screws

6. Carefully lift the keyboard up, being careful not to bend the keyboard ribbon cable.
7. Disconnect the keyboard ribbon cable 11 from the locking collar socket 12.

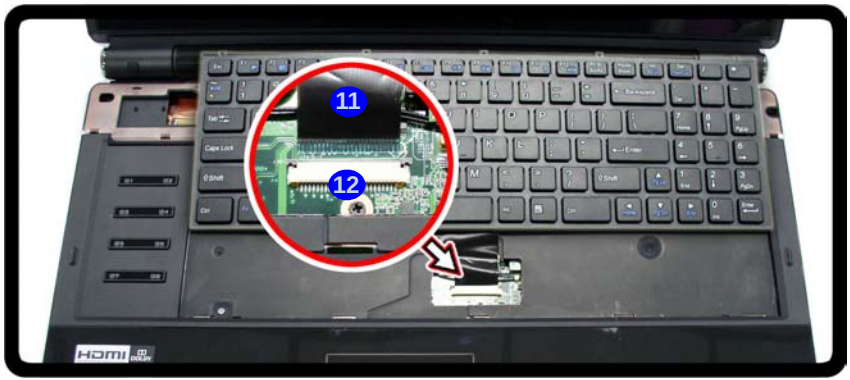

Figure 6 - 16
Disconnect the Keyboard Locking Collar

Downloaded from LpManual.com Manuals

8. Remove the keyboard 13.

Figure 6 - 17
Keyboard Removal

9. Remove screws 14 - 17 from the keyboard shielding plate 18.

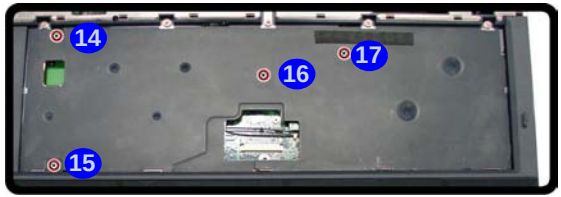

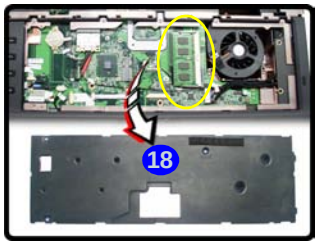

Figure 6 - 18
Keyboard Shielding Plate Removal

Download Upgrading From Manuals

10. Gently pull the two release latches (19 & 20) on the sides of the memory socket in the direction indicated below.
11. The RAM module 21 will pop-up, and you can remove it.

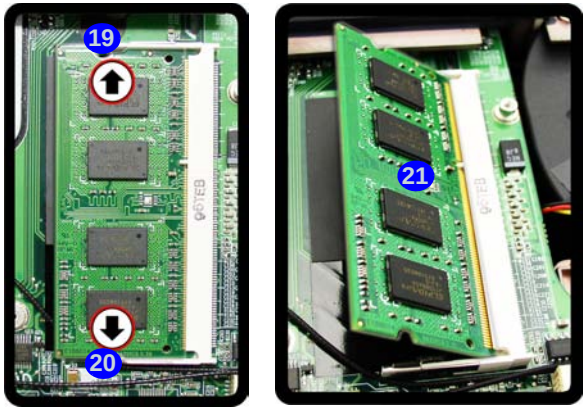

Figure 6 - 19
RAM Module Removal

12. Pull the latches to release the second module if necessary.
13. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory socket.
14. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the socket as it will go. DO NOT FORCE the module; it should fit without much pressure.
15. Press the module in and down towards the mainboard until the socket levers click into place to secure the module.
16. Replace the screws, shielding plate and keyboard (make sure you reconnect the keyboard cable).

Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.

LED Module Cable

Make sure you reconnect the LED Module cable 5 (see ***Figure 6 - 14***).

Downloaded from LpManual.com Manuals

17. Snap the LED cover module down at the top of the module at points 22 & 23.
18. Push the LED cover module down on the left side at point 24, and then slide the module to the right (as illustrated) and snap down to secure it in place.

Figure 6 - 20
LED Cover Module Slide to the Right & Snap Down

19. Replace the screws on the bottom of the computer (see ***Figure 6 - 12***).
20. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

Download Upgrading From Manuals

Upgrading the Optical (CD/DVD) Device

1. Locate the hard disk bay cover and remove screws 1 & 2.
2. Remove the hard disk bay cover 3.
3. Remove the screw at point 4, and use a screwdriver to carefully push out the optical device at point 5.
4. Reverse the process to install any new optical device.

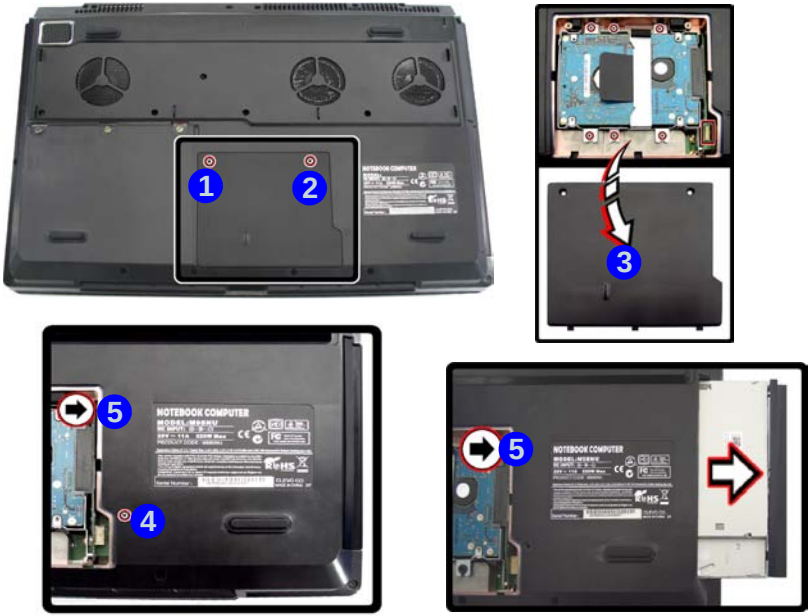

Figure 6 - 21
Removing the CD/ DVD Device

Downloaded from LpManual.com Manuals

Warranty Warning

Please check with your service representative before undertaking any upgrade procedures to find out if this will VOID your warranty.

Upgrading the Video Card

If you intend to upgrade or add another VGA card follow the procedures outlined here. However please check with your service representative first to make sure your computer can support more than one video card, and that you are not going to void your warranty. Pay careful attention to the alignment of any video card into the slot on the mainboard.

1. Turn **off** the computer, and turn it over and remove the battery.
2. Locate the component bay cover and remove screws 1 - 5
3. Carefully (**a fan and cable are attached to the under side of the cover**) lift up the bay cover.
4. Carefully disconnect the fan cable 6, and remove the cover 7.

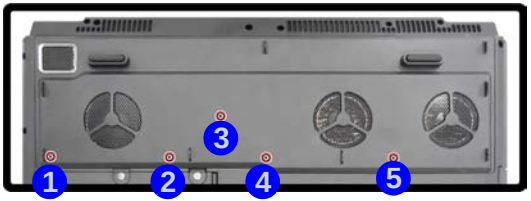

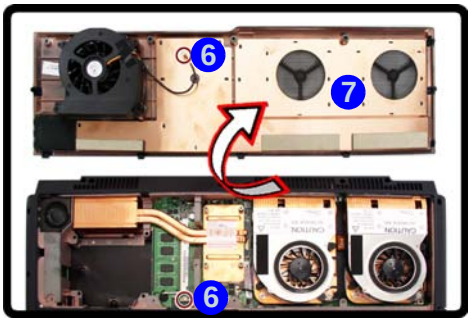

Figure 6 - 22
Component Bay Cover Screws & Cover Removal

Fan Cable

Make sure you reconnect the fan cable 6 before screwing down the bay cover.

Download from Service Manuals Videos

5. Remove screws 8 - 10 (two video cards are pictured here) from the video card fan(s) and disconnect the fan cable(s) 11 (if two cards are present).
6. Remove the RAM fan(s) 12.

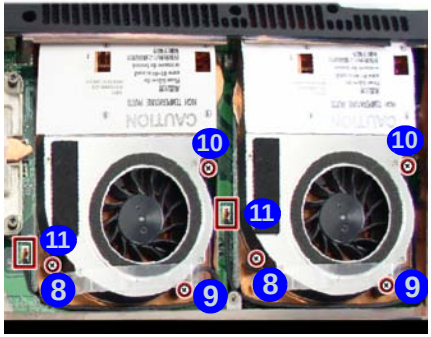

Figure 6 - 23
Video Card Fan Screws

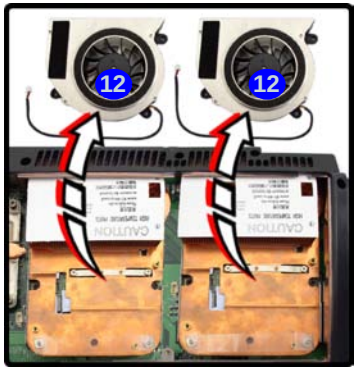

Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.

Figure 6 - 24
Video Card Fan Removal

Downloaded from LpManual.com Manuals

Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.

7. Remove screws 13 - 16 from the heatsink **in the order indicated on the label** (two video cards are pictured here).
8. Grip the handle 17 and carefully remove the heatsink 18.
9. Remove screws 19 - 20 from the video card.

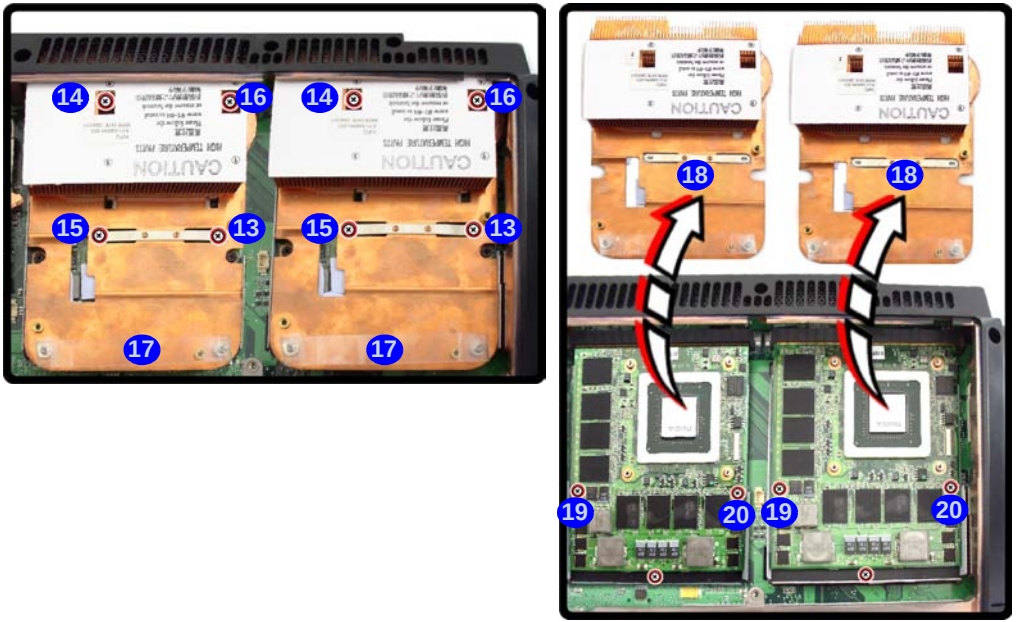

Figure 6 - 25
Heatsink Removal

Downloaded from Clevo Upgrading Video Cards

10. Carefully remove the video card 21.

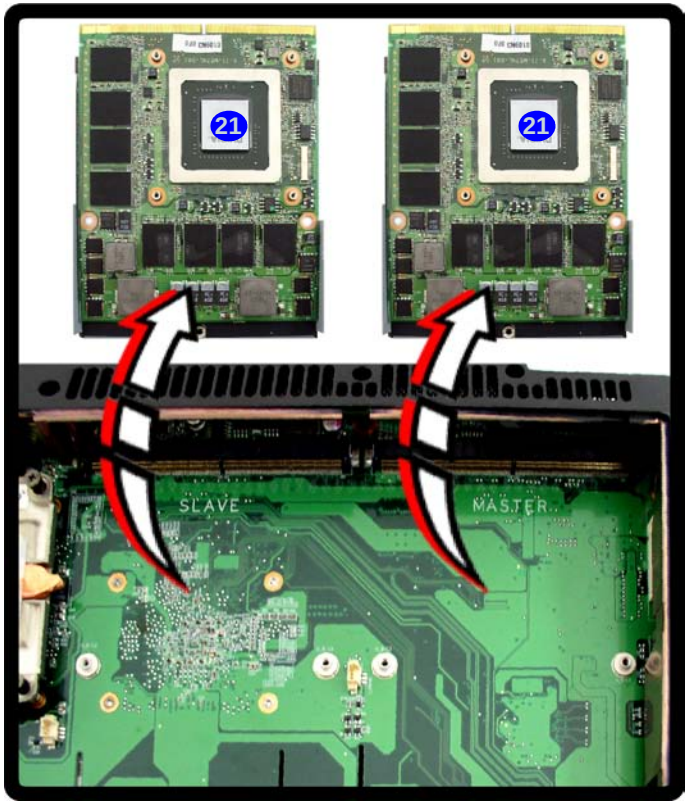

Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.

Figure 6 - 26
Video Card Removal

Downloaded from LpManual.com Manuals

Contact Warning

Be careful not to touch the metal pins on the VGA card's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.

Figure 6 - 27
Video Card Insertion

Installing a New Video Card

1. Prepare to fit the video card into the slot by holding it at about a 30° angle.

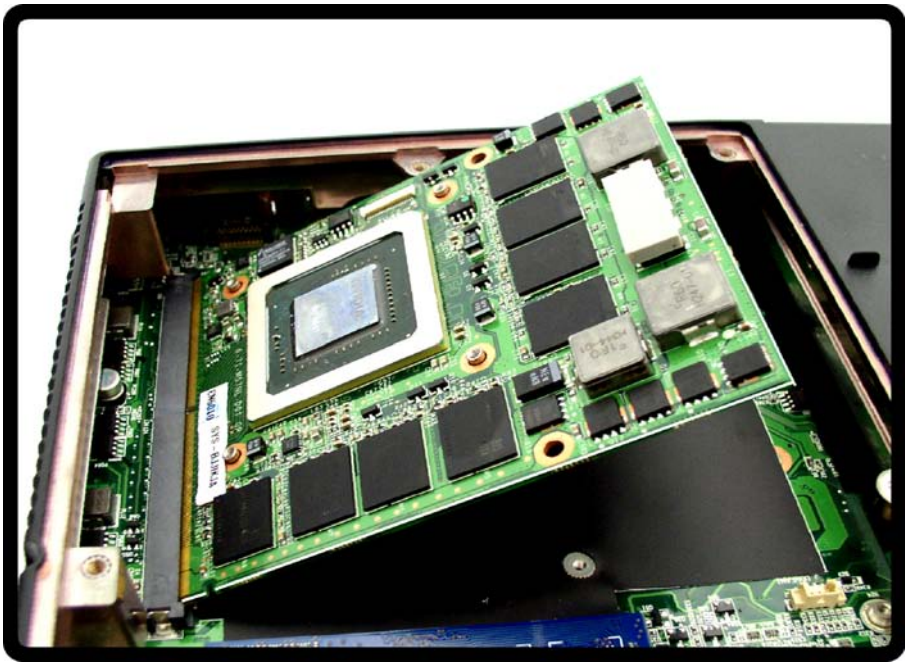

2. The card needs to be fully into the slot, and the video card and socket have a guide-key and pin which align to allow the card to fit securely.

Download from Service Manual-Free Videos

3. Fit the connectors firmly into the socket, straight and evenly.
4. DO NOT attempt to push one end of the card in ahead of the other.

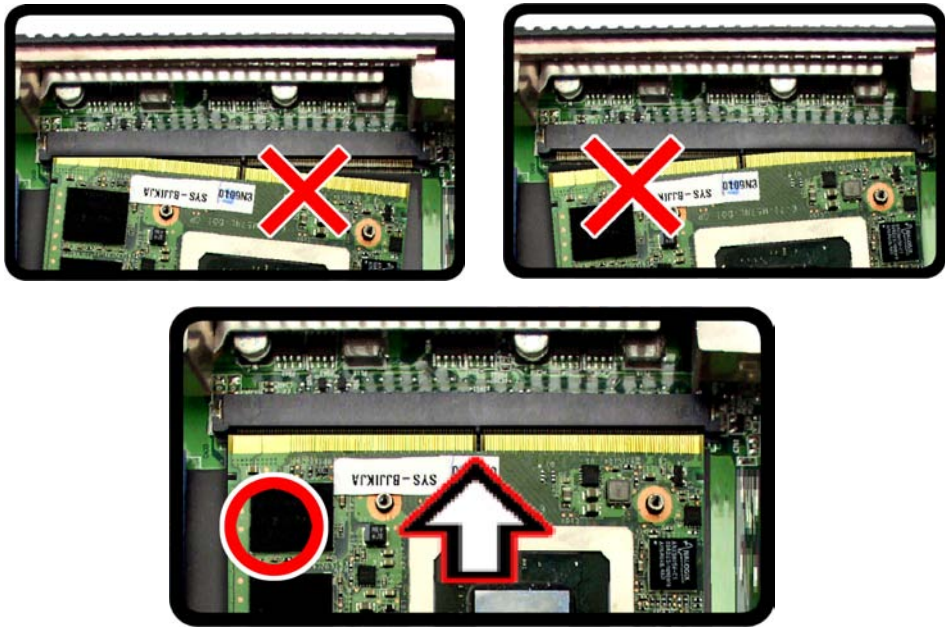

Figure 6 - 28
Video Card Insertion Procedure

5. The card's pin alignment will allow it to only fit one way. **Make sure the module is seated as far into the socket as it will go** (none of the gold colored contact should be showing). DO NOT FORCE the card; it should fit without much pressure.

Downloaded from LpManual.com Manuals

6. Secure the card with screws 19 - 20 (*Figure 6 - 25 on page 6 - 22*).
7. Place the heatsink back on the card, and secure the screws in the order indicated in *Figure 6 - 25 on page 6 - 22*.
8. Attach the video card fan and secure with the screws as indicated in *Figure 6 - 23 on page 6 - 21*.
9. Reinsert the component bay cover, and secure with the screws as indicated in *Figure 6 - 22 on page 6 - 20* (make sure you reconnect the fan cable before screwing down the bay cover).

Download Upgrade Documents From Videos

Chapter 7: Modules

Overview

This chapter contains the information on the various modules (some of which are **optional**) which may come with your computer, depending on the configuration purchased. If you are unsure please contact your service representative.

The chapter includes information on the following:

- Setting Up SATA RAID Mode
- Bluetooth Module
- Wireless LAN Module
- PC Camera Module
- TV Tuner Module
- Fingerprint Reader Module

Downloaded from LpManual.com Manuals

RAID Hard Disks

All hard disks in a RAID should be identical (the same size and brand) in order to prevent unexpected system behavior.

Setting Up SATA RAID Mode

To configure your system in Striping (RAID 0) or Mirroring (RAID 1) modes (see *Table 7 - 1, on page 7 - 3*) you will require **at least two identical** (see sidebar) hard disks.

Intel® Matrix Storage Manager

Make sure you install the Intel Matrix driver and application if you have set up your hard disk(s) in **RAID** mode (see *"Intel® Matrix Driver Installation" on page 7 - 7*).

Downloaded Setting Manuals from Mexuals

RAID Level	Description
RAID 0	Identical drives reading and writing data in parallel to **increase performance**. RAID 0 implements a striped disk array and the data is broken into blocks and each block is written to a separate disk drive.
RAID 1	Identical drives in a mirrored configuration used to **protect data**. Should a drive that is part of a mirrored array fail, the mirrored drive (which contains identical data) will handle all the data. When a new replacement drive is installed, data to the new drive is rebuilt from the mirrored drive to restore fault tolerance.

Table 7 - 1
RAID Levels

Prepare the following before setting up your serial ATA hard disks in **RAID** mode:

1. The ***Microsoft Windows 7 OS DVD***.
2. A **second** (identical) hard disk installed in the Primary HDD bay.
   OR
   A **second** (identical) hard disk installed in the Primary HDD bay, and a **third** (identical) hard disk in the Secondary HDD bay if required.
3. The ***Device Drivers & Utilities + User's Manual*** disc.

Array Types

A **Mirrored Array** (**RAID 1**) provides full data protection, as data can simply be copied from a healthy disk to a replacement for any failed disk.

A **Striped Array** (**RAID 0**) is **NOT** fault-tolerant. The failure of one drive will result in the loss of all data in the array. It is de-signed to increase disk performance by spreading the I/O load across the channels and drives.

Downloaded from LpManual.com Manuals

SATA RAID Setup Procedure (BIOS)

1. Start-up your notebook computer and press <**F2**> to enter the **BIOS**.
2. Go to the **Advanced** menu, select "**SATA Mode**" and press Enter (see page ***5 - 8***).

- Select "**RAID**".

3. Press **Esc** and go to the **Boot** menu.
4. Set the ***DVD-ROM Drive*** (make sure the ***Microsoft Windows 7 OS DVD*** is inserted) as the first device in the boot order from the **Boot** menu.
5. Select ***Exit Saving Changes*** from the **Exit** menu (or press **F10** and Enter) and press Enter to exit the BIOS and reboot the computer.
6. See the instructions in ***"RAID Setup (Intel Matrix)" on page 7 - 5***.

Downloaded Setting Manuals from Mixvale

RAID Setup (Intel Matrix)

1. As the computer starts up press **Ctrl + i** to enter RAID configuration menu.

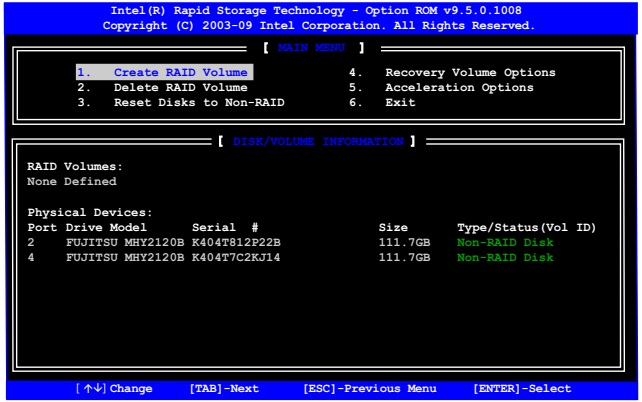
Intel(R) Rapid Storage Technology - Option ROM v9.5.0.1008
Copyright (C) 2003-09 Intel Corporation. All Rights Reserved.
[MAIN MENU]
1. Create RAID Volume
2. Delete RAID Volume
3. Reset Disks to Non-RAID
4. Recovery Volume Options
5. Acceleration Options
6. Exit
[DISK/VOLUME INFORMATION]
RAID Volumes:
None Defined
Physical Devices:
Port Drive Model Serial # Size Type/Status(Vol ID)
2 FUJITSU MHY2120B K404T812P22B 111.7GB Non-RAID Disk
4 FUJITSU MHY2120B K404T7C2KJ14 111.7GB Non-RAID Disk
[↑↓] Change
[TAB]-Next
[ESC]-Previous Menu
[ENTER]-Select

Figure 7 - 1
Intel(R) Rapid Storage Technology Option ROM

2. Select **1.Create RAID Volume** and press Enter.
3. Type the **RAID volume name** and then press Tab or Enter to advance to the next field.
4. Specify (use the up and down arrow keys) the **RAID level** (**RAID 0 or RAID 1** - see ***Table 7 - 1, on page 7 - 3***) and then press Tab or Enter to advance to the next field.
5. Press Enter and the system will select the physical disks to use.
6. Press Enter and select (if applicable) the Strip Size (best set to default).
7. Press Enter and select the Capacity size (best set to default).
8. Press Enter to select **Create Volume**.
9. Press Enter to create the volume, and confirm the selection by pressing **Y**.

Downloaded from LpManual.com Manuals

10. This will now return to the main menu.

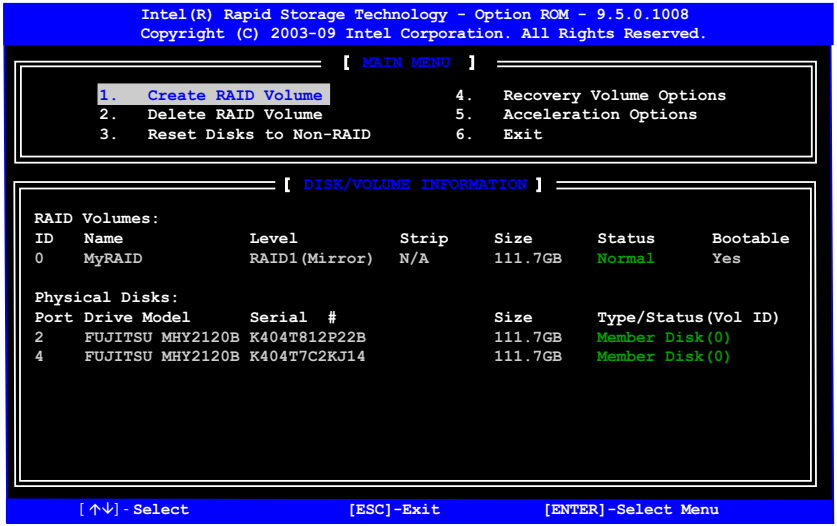
Intel(R) Rapid Storage Technology - Option ROM - 9.5.0.1008
Copyright (C) 2003-09 Intel Corporation. All Rights Reserved.
[MAIN MENU]
1. Create RAID Volume
2. Delete RAID Volume
3. Reset Disks to Non-RAID
4. Recovery Volume Options
5. Acceleration Options
6. Exit
[DISK/VOLUME INFORMATION]
RAID Volumes:
ID Name Level Strip Size Status Bootable
0 MyRAID RAID1(Mirror) N/A 111.7GB Normal Yes
Physical Disks:
Port Drive Model Serial # Size Type/Status(Vol ID)
2 FUJITSU MHY2120B K404T812P22B 111.7GB Member Disk(0)
4 FUJITSU MHY2120B K404T7C2KJ14 111.7GB Member Disk(0)
[↑↓]-Select
[ESC]-Exit
[ENTER]-Select Menu

Figure 7 - 2
RAID Created

11. Select **6.Exit** and press Enter, then press **Y** to exit the RAID configuration menu.
12. Make sure the ***Windows 7*** OS DVD is in the DVD drive. and as the computer starts up it will automatically boot from the ***Windows 7*** OS DVD.
13. Click **Next** to continue installing the operating system as normal (see your ***Windows*** documentation if you need help on installing the ***Windows*** OS).
14. Install the ***Windows*** drivers from the ***Device Drivers & Utilities + User's Manual*** disc as per ***Table 4 - 1, on page 4 - 3*** (make sure you install the Intel Matrix driver - see ***"Intel® Matrix Driver Installation" on page 7 - 7***).

Downloaded from ManualsLib.com Manuals

Intel® Matrix Driver Installation

1. Insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **5.Install Matrix Driver > Yes**.
4. Click **Next > Next > Yes > Next**.
5. Click **Finish** to restart the computer.

The **Intel Matrix Storage Console** displays status information on your RAID configuration. Run the **Intel® Matrix Storage Console** from the **Intel® Matrix Storage Manager** in the Programs/All Programs menu. The **Intel® Matrix Storage Manager** provides information on the RAID status.

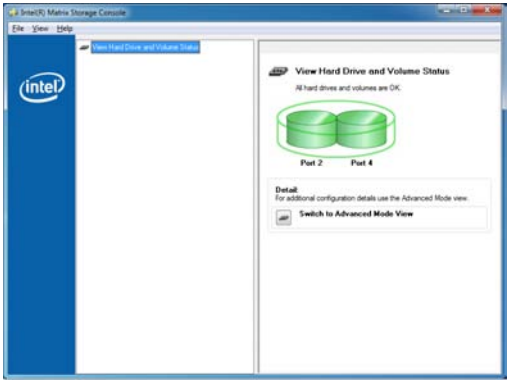

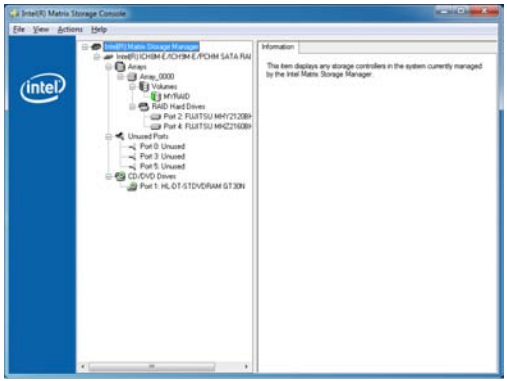

e-SATA Port

Install the **Intel Matrix Storage** driver to display the safe removal icon for e-SATA devices in the taskbar

Figure 7 - 3
Intel Matrix Storage Console (Basic & Advanced Views)

Downloaded from LpManual.com Manuals

Intel® Matrix Storage Manager

If a hard drive member of a RAID volume is reported as "**Degraded**" or "**Failed**" it may be possible to recover the volume. If the volume cannot be restored then you will need to recreate the RAID volume and restore the data from a back up. The **Help** menu (press **F1** or select **Contents and Index** from the **Help** menu) provides instructions on how to recover or recreate RAID Volumes.

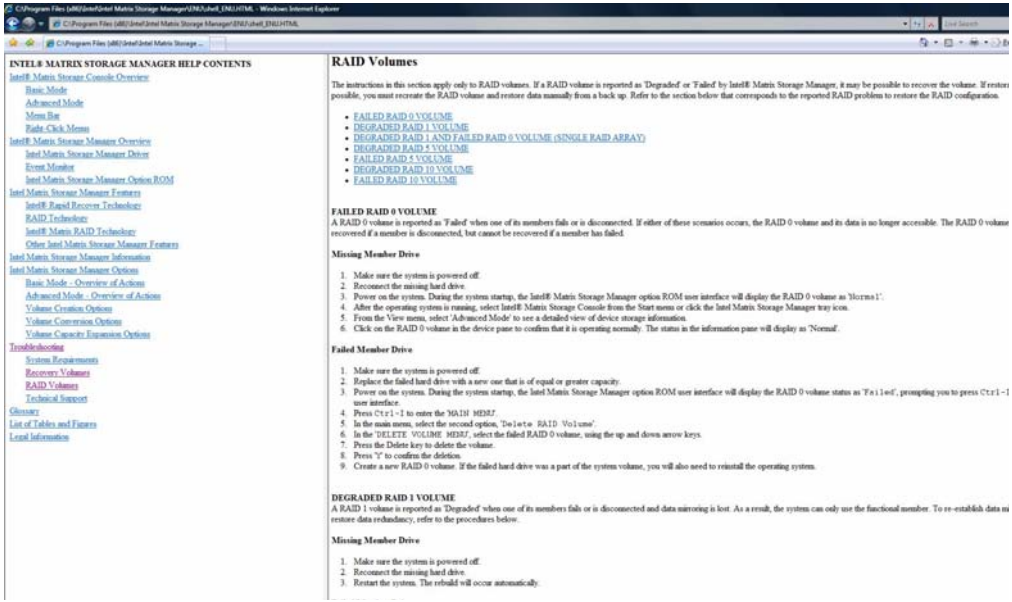

Figure 7 - 4
Intel Matrix Storage Manager Help

Downloaded Setting Manuals from Mixmods

RAID Volume Data Verification and Repair

The RAID volume data verification process identifies any inconsistencies or bad data on a RAID 0 or RAID 1 volume. The table outlines what occurs for each RAID level:

RAID Level	Verify	Verify & Repair
RAID 0	Bad blocks are identified.	N/A
RAID 1	Bad blocks are identified. Data on the mirrored drive is compared to data on the source drive.	Bad blocks are reassigned. If the data on the mirrored drive does not match the data on the source drive, the data on the mirrored drive is overwritten by the data on the source.

Table 7 - 2
RAID Verification & Repair Status

Replacing and Reverting Recovery and Master Volumes

If a master or recovery drive fails you will need to add a new identical drive and re-build the recovery volume to the drive. You can also revert the master drive to the state of the previous volume update. For details on how to do this see ***"Intel Matrix Storage Manager Help" on page 7 - 8***.

See over for details on how to verify and repair RAID volume data.

Downloaded from LpManual.com Manuals

Verifying and Repairing RAID Volume Data

1. Run the **Intel® Matrix Storage Console** from the **Intel® Matrix Storage Manager** in the **Programs/All Programs** menu.
2. Click **View > Advanced Mode**.
3. Right-click on the RAID volume and select either **Verify Volume Data** or **Verify and Repair Volume Data**.

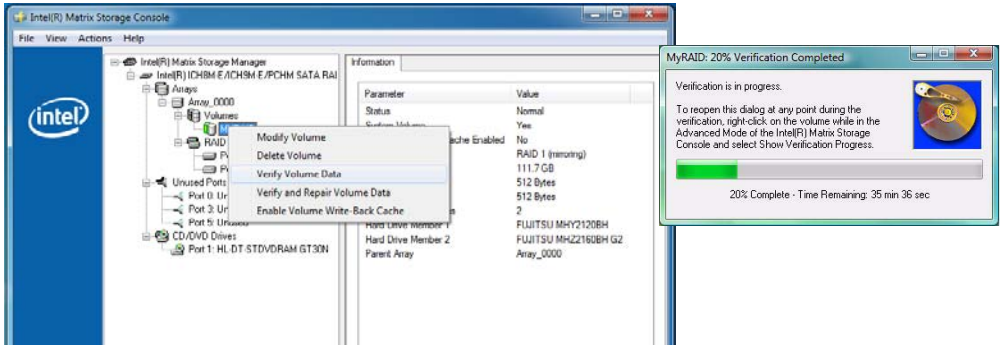
Intel(R) Matrix Storage Console
File View Actions Help
Intel(R) Matrix Storage Manager
Information
Modify Volume
Delete Volume
Verify Volume Data
Verify and Repair Volume Data
Enable Volume Write-Back Cache
MyRAID: 20% Verification Completed
Verification is in progress.
To reopen this dialog at any point during the verification, right-click on the volume while in the Advanced Mode of the Intel(R) Matrix Storage Console and select Show Verification Progress.
20% Complete - Time Remaining: 35 min 36 sec

Figure 7 - 5
RAID Verification (Intel® Matrix Storage Console)

4. The verification or verification and repair process will run and display progress.
5. A dialog box will display the final status of the verification or verification and repair status.

Verification Status
The verification was completed successfully.
- Number of verification errors found: 0.
- Number of blocks reassigned due to media errors: 0.
OK

Figure 7 - 6
Verification Status

Download from Service Repair Manuals

Bluetooth Module

The **optional** Bluetooth module allows you to connect your computer to Bluetooth enabled devices such as other computers, desktop computers, mobile phones, printers, digital cameras, PDAs, headsets etc. using a short-range radio frequency.

Use the Fn + F12 key combination or **Touch Sensor Instant Key** to toggle power to the Bluetooth module**.** When the Bluetooth module is powered on, the LED will be highlighted and the indicator will briefly be displayed. The operating system's **Bluetooth Devices** control panel is used to configure the Bluetooth settings in ***Windows Vista***, and therefore does not require a driver.

Bluetooth Data Transfer

Note that the transfer of data between the computer and a Bluetooth enabled device is supported **in one direction only (simultaneous data transfer is not supported)**. Therefore if you are copying a file from your computer to a Bluetooth enabled device, you will not be able to copy a file from the Bluetooth enabled device to your computer until the file transfer process from the computer has been completed.

Bluetooth Module & Resuming From Sleep Mode

The Bluetooth module's default state will be off after resuming from the **Sleep** power-saving state. Use the key combination (**Fn + F12**) to power on the Bluetooth module after the computer resumes from Sleep.

Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are OFF if you are using the computer aboard aircraft.

Use the **Fn + F12** key combination/Touch Sensor Key to toggle power to the Bluetooth module, and check the LED to see if the module is powered on or not (see ***Table 1 - 3, on page 1 - 10***/ ***Table 1 - 2, on page 1 - 8***).

Downloaded from LpManual.com Manuals

Add a Device

Click **Start**, and click **Control Panel** and then click **Devices and Printers (Hardware and Sound)**. Click **Add a device** to search for any available Bluetooth devices.

Bluetooth Configuration in Windows 7

Setup your Bluetooth Device so the Computer Can Find it

1. Turn your Bluetooth device (e.g. PDA, mobile phone etc.) on.
2. Make the device discoverable (to do this check your device documentation).

To Turn the Bluetooth Module On

1. Press the **Fn + F12** key combination to power on the Bluetooth module.
2. A Bluetooth icon will appear in the taskbar.
3. You can then do any of the following to access the **Bluetooth Devices** control panel.

- **Double-click** the taskbar icon to access the **Bluetooth Devices** control panel.
- **Click/Right-click** the taskbar icon and choose an option from the menu.

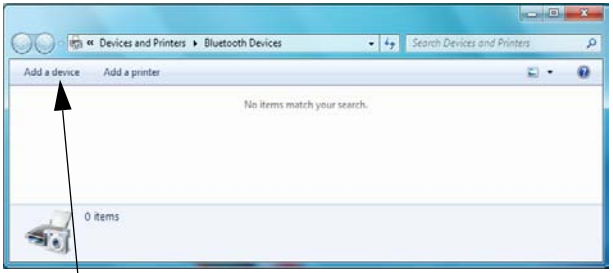

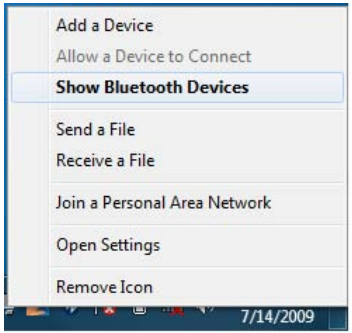

Right-Click Taskbar Icon

Figure 7 - 7
Bluetooth Devices & Click Icon Menu

Download from Service Manuals - Manuals

To Add a Bluetooth Device

1. Access the **Bluetooth Devices** control panel and click **Add a device**.
2. Double-click the device you want to pair with the computer.

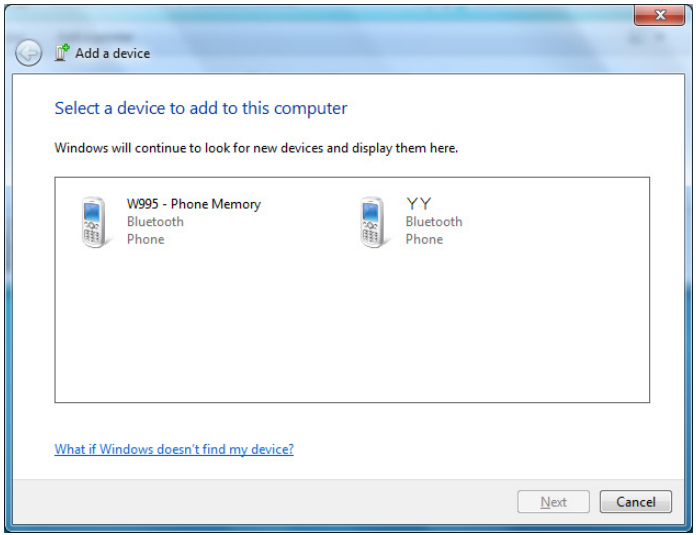

3. On first connection the computer will provide you with a pairing code to be entered onto the device.

Pairing Options

If a device has been previously connected then the pairing option menu will appear when you attempt subsequent connections. You can choose to have the computer create a pairing code for you, use the device's existing pairing code or you can pair certain devices without using a code.

Figure 7 - 8
Add a Device

Downloaded from LpManual.com Manuals

4. Enter the code into your Bluetooth enabled device and follow any on-screen instructions to complete the pairing.

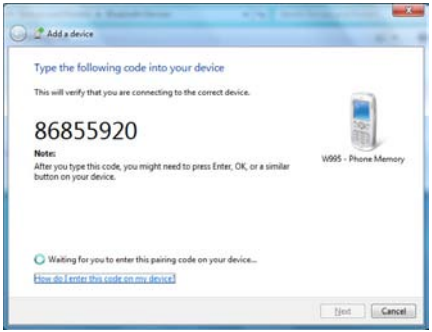
Add a device
Type the following code into your device
This will verify that you are connecting to the correct device.
86855920
Note:
After you type this code, you might need to press Enter, OK, or a similar button on your device.
W995 - Phone Memory
Waiting for you to enter this pairing code on your device...
How do I enter this code on my device?
Next
Cancel

Figure 7 - 9
Pairing Code Example

Pairing Codes

The example outlined here shows a connection to a mobile device. Other devices e.g. computers, may have a slightly different connection procedure, and may require you to confirm a pairing code is correct on both devices. Follow the on-screen instructions to complete the pairing.

5. ***Windows*** will check to see if any drivers are required to complete the pairing.
6. Follow any on-screen instructions on the computer if device drivers are required to be installed.
7. Click **Close**.

Add a device
This device has been successfully added to this computer
Windows is now checking for drivers and will install them if necessary. You may need to wait for this to finish before your device is ready to use.
To verify if this device finished installing properly, look for it in Devices and Printers.
W995 - Phone Memory
Close

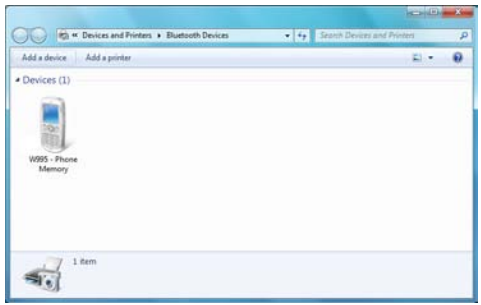

Figure 7 - 10
Pairing Complete & Bluetooth Device Enabled

Downloaded from eXpert Manuals - eXpert Manuals

To Change Settings for the Bluetooth Device

1. Click the taskbar icon and select **Show Bluetooth Devices**.
2. Right-click on the device you want to change and click **Properties** to:

- Change the **name** of the device (click **Bluetooth**, type a new name and click **OK**).
- Enable/Disable a **service** (click **Services**, clear/tick the check box next to the service and click **OK**).

To Make your Computer Discoverable to Bluetooth Devices

1. Click the taskbar icon and select **Open Settings**.
2. Click **Options**, and make sure that ***Allow Bluetooth devices to find this computer*** check box (**Discovery**) has a tick inside it.
3. Make sure that the ***Alert me when a new Bluetooth device wants to connect*** check box (**Connections**) has a tick inside it, if you want to be notified when a Bluetooth device wants to connect.

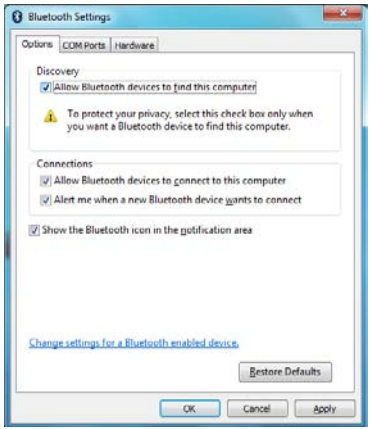
Bluetooth Settings
Options
COM Ports
Hardware
Discovery
Allow Bluetooth devices to find this computer
To protect your privacy, select this check box only when you want a Bluetooth device to find this computer.
Connections
Allow Bluetooth devices to connect to this computer
Alert me when a new Bluetooth device wants to connect
Show the Bluetooth icon in the notification area
Change settings for a Bluetooth enabled device.
Restore Defaults
OK
Cancel
Apply

Bluetooth Help

To get help on Bluetooth configuration and settings, select **Help and Support** from the **Start** menu. Type Bluetooth in the **Search Help** box, and select an item from the returned search results to get more information.

Figure 7 - 11
Bluetooth Settings - Options

Downloaded from LpManual.com Manuals

Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are OFF if you are using the computer aboard aircraft.

Use the **Fn + F11** key combination/Touch Sensor Key to toggle power to the WLAN module, and check the LED to see if the module is powered on or not (see ***Table 1 - 3, on page 1 - 10***/ ***Table 1 - 2, on page 1 - 8***).

Wireless LAN Module

If you have included an **Intel® Wi-Fi Link 5300 Series, Intel® Advanced N Wi-Fi Link 6200, Intel® Ultimate N Wi-Fi Link 6300** module or **3rd Party 802.11b/g/n WLAN module** in your purchase option, make sure that the Wireless LAN module is on before installing the driver.

Use the Fn + F11 key combination or **Touch Sensor Instant Key** to toggle power to the Wireless LAN module. When the WLAN module is powered on, the LED will be highlighted and the indicator will briefly be displayed. Make sure you install the drivers in the order indicated in ***Table 4 - 1, on page 4 - 3***. The operating system is the default setting for Wireless LAN control in ***Windows 7***.

Downloaded from Laptopmanuals.com manuals

Intel® Wi-Fi Link Series Driver Installation

If you see the message "**Found New Hardware**" click **Cancel** to close the window.

1. Make sure the module is powered on, then insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **1.Install Wireless Lan Driver > Yes**.
4. An on-screen message will appear to show the progress of the WLAN installation.
5. When the message disappears the driver will be installed.

Note: The operating system is the default setting for Wireless LAN control in ***Windows 7*** (see overleaf).

802.11b/g/n Driver Installation

1. Make sure the module is powered on, then insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **1.Install Wireless Lan Driver > Yes**.
4. Choose the language you prefer and click **Next**.
5. Click **Next > Install**.
6. Click **Finish** to restart the computer.

Note: The operating system is the default setting for Wireless LAN control in ***Windows 7*** (see overleaf).

Downloaded from LpManual.com Manuals

Network and Sharing Center

You can also use the **Network and Sharing Center** control panel in Windows (**Network and Internet**) to connect to any available wireless networks.

Connecting to a Wireless Network in Windows 7

Make sure the Wireless LAN module is turned on.

1. **Click** the taskbar wireless icon, and then double-click an access point to connect to or click to **Open Network and Sharing Center** if you do not see a network you want to connect to in the taskbar menu (a list of options will appear allowing setting changes, and creating a new network).

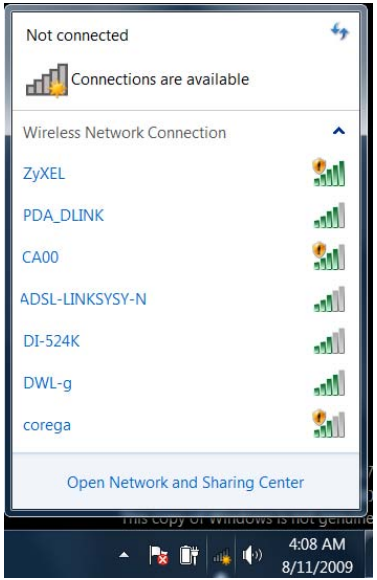

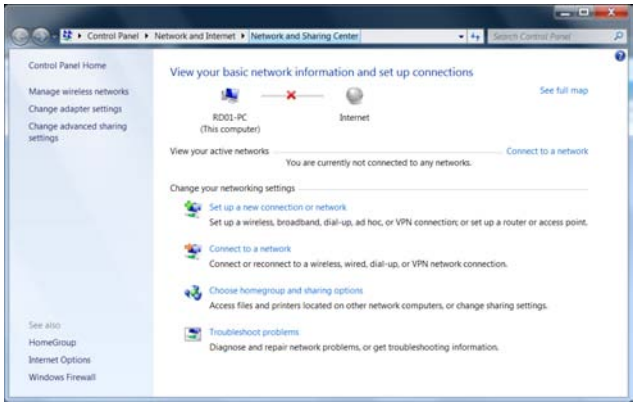

Figure 7 - 12
Click Taskbar Icon Menu & Network and Sharing Center

Downloaded from Specialist Service Manuals

2. You may need to enter a security key for any access point to which you are trying to connect.
3. Click to select a network location (e.g. **Home, Work or Public**).
4. Click "**View or change settings in Network and Sharing Center"** to access further options for the connection.

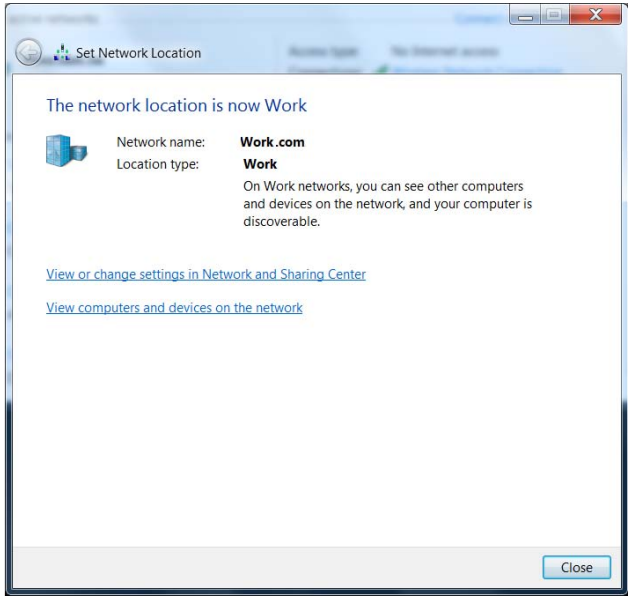
Set Network Location
The network location is now Work
Network name: Work.com
Location type: Work
On Work networks, you can see other computers and devices on the network, and your computer is discoverable.
View or change settings in Network and Sharing Center
View computers and devices on the network
Close

Figure 7 - 13
Network Location Set

Downloaded from LpManual.com Manuals

Security Enabled Networks

You should try to make sure that any network you are connecting to is a secure network.

Connecting to unsecure networks may allow unauthorized access to your computer, documents, websites and files etc.

5. Click the taskbar icon to see any currently connected networks.
6. To disconnect from the wireless network you can click the taskbar wireless icon, click the active connection and then click **Disconnect** (button).

Figure 7 - 14
Click Taskbar Icon Menu - Disconnect

Download from Laptopmanuals.com manuals

Windows Mobility Center

The **Windows Mobility Center** control panel provides an easy point of access for information on battery status, power plans used and wireless device status etc.

To access the Windows Mobility Center:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Double-click **Windows Mobility Center** (**Mobile PC**).
3. Click the button to **Turn wireless off/on**, or click the icon to access the network menu.

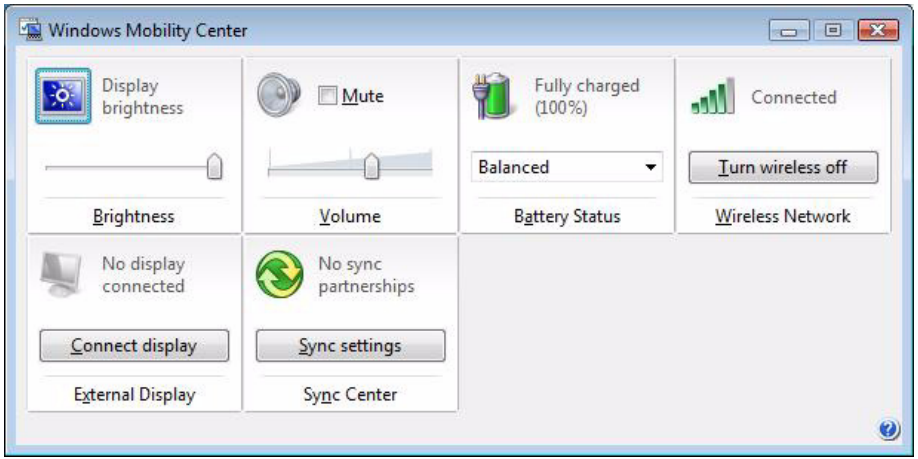

Figure 7 - 15
Windows Mobility Center

Downloaded from LpManual.com Manuals

PC Camera Module

Before installing the driver, make sure the PC Camera is on. **Use the Fn + F11 key combination** or **Touch Sensor Instant Key** to toggle power to the to the PC Camera module. When the PC Camera module is powered on, the [camera] LED will be highlighted and the indicator will briefly be displayed. Make sure you install the drivers in the order indicated in ***Table 4 - 1, on page 4 - 3***.

PC Camera Driver Installation

1. Insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **2.Install WebCam Driver > Yes**.
4. Choose the language you prefer and click **Next > Next**.
5. Click **Finish** to restart the computer.
6. Run the camera application program from the shortcut on the desktop (if the hardware is turned off use the **Fn + F10** key combination to turn it on again).

Latest PC Camera Driver Information

Check the ***Device Drivers & Utilities + User's Manual disc*** and any accompanying insert pages, for the latest updated information on the PC Camera driver, which may override the information provided here.

PC Camera Display

The PC Camera application software needs to be run while the ***default notebook LCD*** is the selected display device.

After a camera picture is obtained on the default notebook LCD, you may then use the **Fn + F7** to toggle through the display modes (give the screen time to refresh).

Downloaded from Laptop-Manuals.com

PC Camera Audio Setup

If you wish to capture video & **audio** with your camera, it is necessary to setup the audio recording options in ***Windows***.

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Sound** (**Hardware and Sound**).
3. Click **Recording** (tab).
4. Right-click **Microphone** (Realtek High Definition Audio) and make sure the item is not disabled.
5. Double-click **Microphone** (or select **Properties** from the right-click menu).
6. Click **Levels** (tab), and adjust the **Microphone** and **Microphone Boost** sliders to the level required.
7. Click **OK** and close the control panels.
8. Run the camera application program from the desktop shortcut.
9. Go to the **Devices** menu heading and select **Microphone** (**Realtek....**) (it should have a tick alongside it).
10. Go to the **Capture** menu heading and select **Capture Audio** (it should have a tick alongside it).

Downloaded from LpManual.com Manuals

Figure 7 - 16
Audio Setup for PC Camera

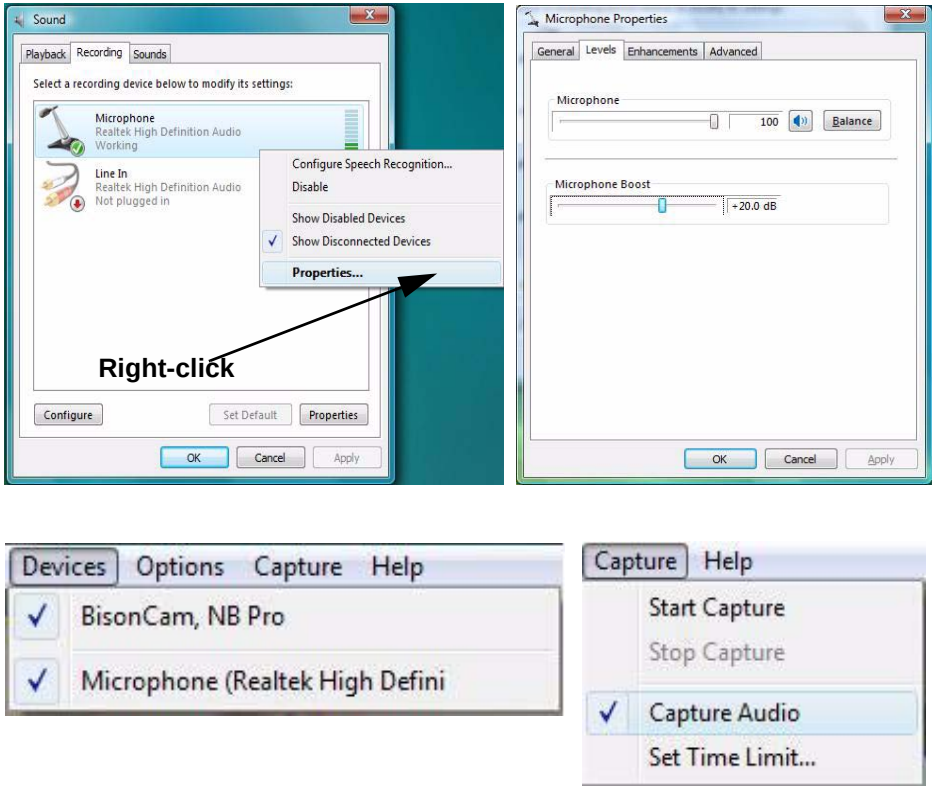

Downloaded from Laptopmanuals.com Manuals

Camera Application

The WebCam application is a video viewer for general purpose video viewing and testing, and for capturing video files to .avi format.

1. Run the camera application from the desktop shortcut (it is recommended that you **set the capture file** before the capture process - **see below**).
2. Go to the **Capture** menu heading (if you wish to capture audio check *"PC Camera Audio Setup" on page 7 - 23*) and select **Start Capture**.
3. Click **OK/Yes** (the file location will be displayed in the pop-up box) to start capturing the video, and press **Esc** to stop the capture (you can view the file using the **Windows Media Player**).

Set Capture File

Prior to capturing video files you may select the **Set Capture File...** option in the **File** menu, and set the file name and location before capture (this will help avoid accidentally overwriting files). Set the name and location then click **Open**, then set the **"Capture file size:"** and click **OK**. You can then start the capture process as on the previous page.

Note the important information in *"Reducing Video File Size" on page 7 - 26* in order to save file space, and help prevent system problems.

Pre-Allocating File Size/Space

You may pre-allocate the file size (**File > Allocate File Size/Space**) for the capture file in the camera program (you may need to set a folder location first).

Pre-allocating space on the hard disk can improve the capture quality (particularly of large capture files), by reducing the amount of work the hard disk has to do in finding space for the video data as it is being captured.

See also *"Reducing Video File Size" on page 7 - 26*.

Downloaded from LpManual.com Manuals

Reducing Video File Size

Note that capturing high resolution video files requires a substantial amount of disk space for each file. After recording video, check the video file size (right-click the file and select **Properties**) and the remaining free space on your hard disk (go to **My Computer**, right-click the hard disk, and select **Properties**). If necessary you can remove the recorded video file to a removable medium e.g. CD, DVD or USB Flash drive.

Note that the ***Windows*** system requires a minimum of **15GB** of free space on the **C: drive** system partition. In order to prevent system problems it is recommended that you save the captured video file to a location other than the **C: drive** (see ***"Set Capture File" on page 7 - 25***), limit the file size of the captured video (see ***"Pre-Allocating File Size/Space" on page 7 - 25***) or reduce video resolution (see below).

To Reduce Video Resolution Output Size:

1. Run the camera application program from the desktop shortcut.
2. Go to **Options** and scroll down to select **Video Capture Pin...**.
3. Click the **Output Size** drop box and select a lower resolution size in order to reduce the captured file size.
4. Click **OK**.

Downloaded from Laptopmanuals.com

Eliminating Screen Flicker

If you find that the video screen in the camera program is flickering, you can try to adjust the setting in the **Video Capture Filter** options.

1. Run the camera program from the desktop shortcut.
2. Go to **Options** and scroll down to select **Video Capture Filter...**.
3. Click either **50Hz** or **60Hz** under **Frequency** in **Property Page** (tab).

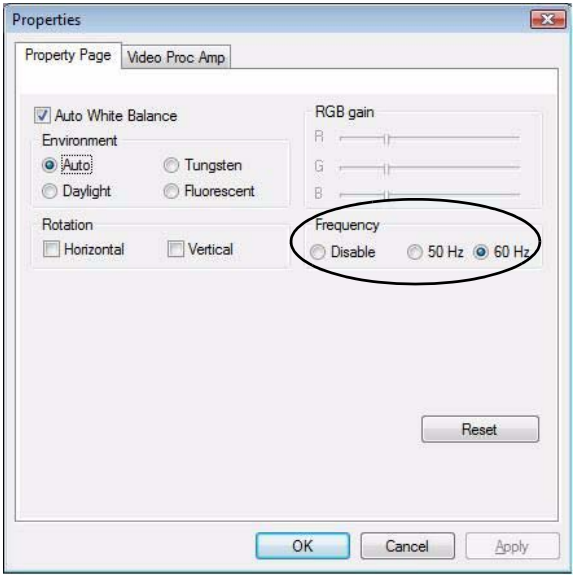

Figure 7 - 17
Video Capture Filter (Property Page)

Downloaded from LpManual.com Manuals

Zoom

The WebCam program allows you to zoom the camera in and out.

1. Run the camera application from the desktop shortcut.
2. Go to **Zoom** and select **Zoom Out/Zoom In.**

Figure 7 - 18
Zoom/Setting

Snapshot Folder

The Snapshot folder's default location is on the desktop. Do not move this folder or an error may appear when you try to take a still picture.

If you accidentally delete or move the folder, you can create a new Snapshot folder on the desktop in order to capture the files.

Taking Still Pictures

The WebCam program allows you to take still pictures.

1. Run the camera application from the desktop shortcut.
2. Go to **Options** and select **Take Picture**.
3. The picture (in JPEG format) will be placed in the **Snapshot** folder on the desktop.

Downloaded from Laptopmanuals.com

TV Tuner Module

If your purchase configuration includes the **optional Hybrid** (Analog & Digital) USB Mini-Card TV Tuner module, you will be supplied with a remote control unit and appropriate antenna and fittings for the module. Software support for the TV Tuner module is provided by ***Windows Media Center*** in ***Windows 7 (not included in Starter or Home Basic versions)***. A driver is provided on the ***Device Drivers & Utilities + User's Manual*** disc for the remote control supplied with the TV Tuner.

The optional TV Tuner allows you to watch TV, play music CDs, video conference and capture still images and video on your PC.

The Cable (CATV) antenna will only be enabled when a TV Tuner module is installed. Make sure you connect the TV antenna.

TV Antenna

The TV antenna supplied with any TV Tuner module is intended for indoor use only. Please do not use your TV Tuner module outdoors.

TV Tuner Remote

Point the remote at the consumer **IR transceiver** to change channels etc.

Figure 7 - 19
TV Tuner Ports/ Jacks

1. Consumer Infrared Transceiver
2. CATV Antenna Jack

Downloaded from LpManual.com Manuals

TV Tuner Module Support

Note that the TV Tuner module options in ***Windows 7*** is supported by the **Windows Media Center** software which comes built-in to all the ***Windows 7 versions except Starter and Home Basic***.

If your purchase includes a TV Tuner option, and you are reconfiguring your system for a different system, you should install any ***Windows 7*** version except ***Starter*** and ***Home Basic***.

Consumer Infrared Driver

1. Insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **3.Install CIR Driver > Yes**.
4. Choose the language you prefer and click **Next > Next**.
5. Click **Finish** to restart the computer.

Windows Media Center

1. This TV Tuner module is fully supported by ***Windows Media Center*** in ***Windows 7 (not included in Starter or Home Basic versions)***.
2. Run ***Windows Media Center*** directly from the **Start** menu (**Start > Programs > Windows Media Center**).
3. ***Windows Help and Support*** provides information on the **Windows Media Center** functions. Click **Start** and select **Help and Support**, and then type "***Media Center***" in the **Search Help** box and click the magnifying glass icon to bring up the results.

Downloaded from Laptopmanuals.com Laptop Manuals

Digital TV Broadcast Signal

The antenna is the most crucial factor in receiving a clear digital terrestrial TV broadcast signal. The **passive** antenna provided should provide a clear signal when placed beside a window. If the signal is not clear then you can purchase an **active** antenna (it should also be placed beside a window) to improve the signal. You should also check with any related government website which provides information on digital terrestrial TV coverage for your area. Note that (unlike standard analog TV) if the digital signal is weak then no picture will appear on the TV at all.

TV Recording and Power Plans

If you intend to use the **optional** TV Tuner to record live TV, then go to the **Power Options** control panel and create a power plan (see ***"Power Plans" on page 3 - 4***) to prevent the power saving options from adjusting the computer's performance level.

Remote Control Unit

The remote control unit allows you to remotely start and send the system into a power saving state, to run ***Windows Media Center*** and to navigate the ***Media Center*** menus etc. The remote control unit also gives full control over all TV and video functions.

CATV Cable Safety

Make sure that your CATV system installer has connected the Coaxial cable shield to the grounding system of the building, as close to the point of cable entry as practical.

This reminder is provided to call the CATV system installer's attention to Article 820-93 of the NEC (Section 54, Part I of the Canadian Electrical Code).

Downloaded from LpManual.com Manuals

Password Warning

If you set passwords for any of the security modules, **NEVER** forget your password.

The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.

Fingerprint Reader Module

The **optional fingerprint reader Protector Suite Software** provides a high level of security for your computer. A further level of security and control is provided in the BIOS (see ***"Security Menu" on page 5 - 10***).

The **fingerprint reader** and **Protector Suite Software** allow you to:

- Access or Lock your computer
- Protect sensitive files
- Display and file your favorite web pages
- Fill in frequently used dialogs
- Run your favorite applications

If you have included the fingerprint reader in your purchase option you will need to install the driver as per the instructions below.

Make sure you have administrator's rights to your computer, and have a ***Windows*** password enabled for full security protection.

Before beginning the enrollment process it is recommended that you go through the fingerprint tutorial. To run the tutorial click **Start > Programs/All Programs > Protector Suite QL > Fingerprint Tutorial** after installing the driver.

Downloaded from p4print.com/manuals

Fingerprint Reader Driver Installation

1. Insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive.
2. Click **Option Drivers**.
3. Click **4.Install FingerPrint Driver > Yes**.
4. ***Windows*** will configure **Protector Suite 2009** and automatically **restart** the computer.
5. Click the tray icon , scan a finger or click **Start > Programs/All Programs > Protector Suite > Control Center and** then begin the enrollment process (see over).

Downloaded from LpManual.com Manuals

Fingerprint Enrollment

Note that it is strongly recommended that you **enroll more than one finger in case of injury etc.**

User Enrollment

1. Click **Start > Programs/All Programs > Protector Suite > Control Center**, or double click the taskbar icon (click **Initialize**).
2. On the first run of the program you will be asked to click the **Accept** button to accept the license.
3. If you have not set a ***Windows*** password you will be prompted to do so (**note**: If you have not set a password **Protector Suite** cannot secure access to your computer).
4. Click **Submit** when you have entered password.
5. You will then be prompted to enroll your fingerprints (you can click **Tutorial** to get help with fingerprint enrollment at any time).

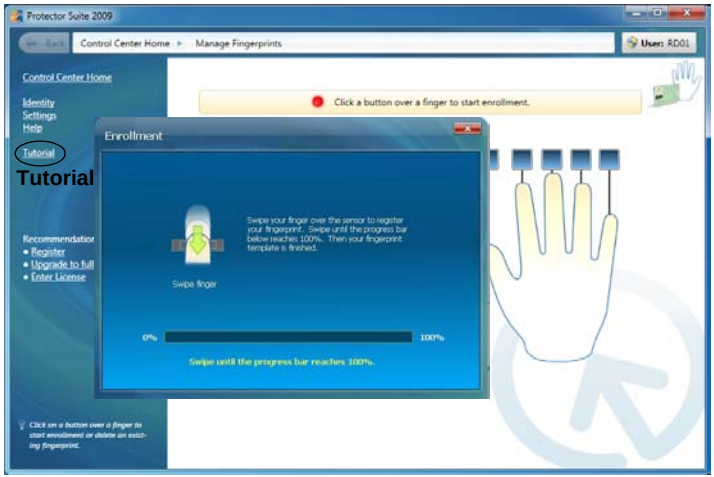

Figure 7 - 20
Fingerprint Enrollment

Downloaded From p-fingerprint.com Manuals

6. Click the button above any of the fingers to begin the enrollment process for that finger.
7. Swipe the finger until the progress bar reaches **100%** to enroll that finger.

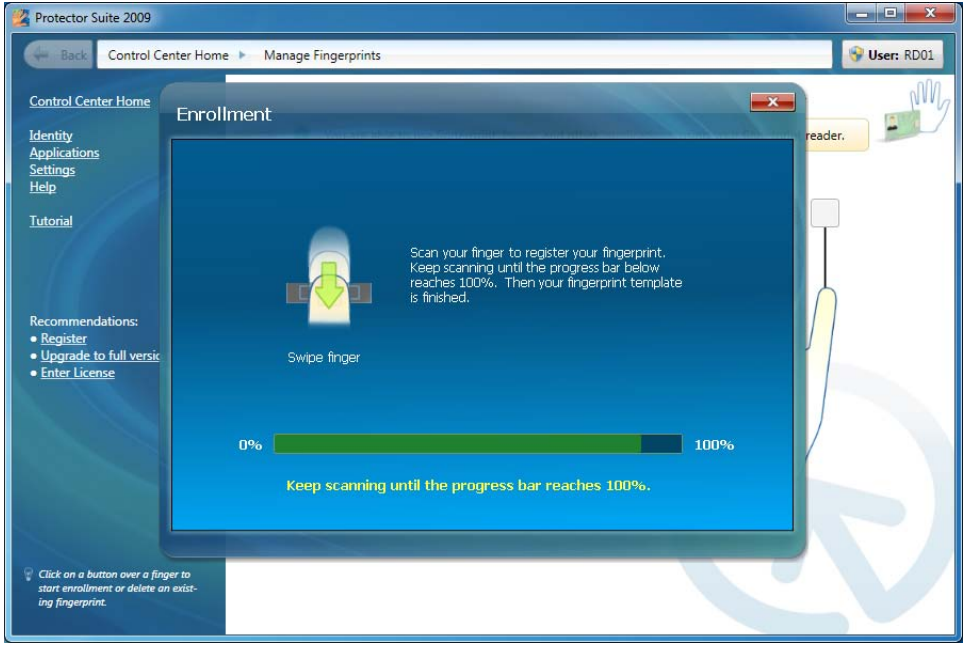

8. Close the **Protector Suite 2009** window.

Fingerprint Enrollment

Note that it is strongly recommended that you **enroll more than one finger in case of injury etc.**

Figure 7 - 21
Fingerprint Enrollment Progress

Downloaded from LpManual.com Manuals

9. Right-click the taskbar icon and select **Start Control Center** (and then swipe a finger) to allow you to **Edit Fingerprints**, register **Applications**, edit **Settings** and access the **Help** menu etc. You can also run the **Control Center** etc. from the **Protector Suite** item in the **Programs/All Programs** menu
10. Click "**Help**" to get more information on any topic.
11. You can also run the **Tutorial**, or **Product Tour** video to get more information.

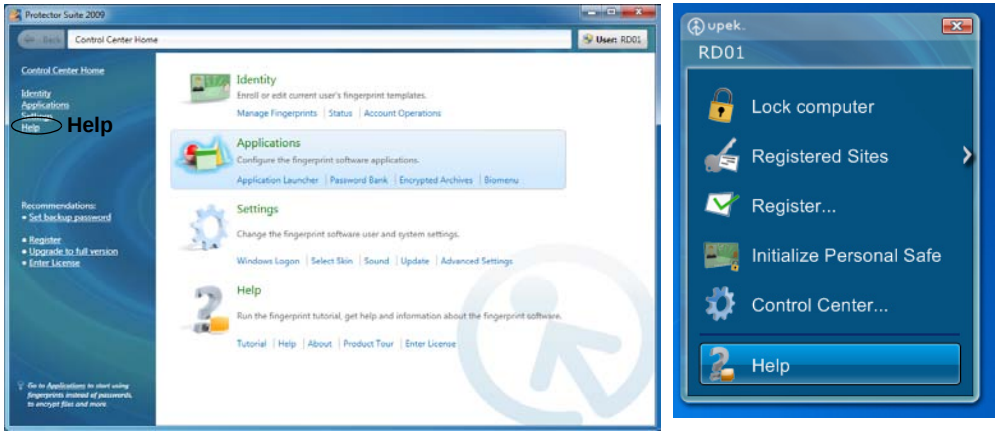

Figure 7 - 22
Control Center & Biomenu

12. If you swipe your finger over the reader at any time you can access the **Biomenu** to **lock the computer**, **register websites**, access the **Personal Safe,** open the **Control Center** and access the **Help** menu.

Downloaded from p4print.com/manuals

Fingerprint Control Center Features

Application Launcher

The **Application Launcher** allows you to register applications to be launched when assigned to a particular finger. Simply copy the application icon on to one of the registered fingers and ten click OK to close the application window. Once registered the application will launch when you swipe the appropriate finger across the sensor.

Password Bank

The **Password Bank** stores registrations of user names, passwords and other settings for web sites etc.

Personal Safe

The **Personal Safe** is an encrypted area assigned on your hard drive that allows you to store files and folders to be protected by fingerprint protection.

Help

For more information on these and other features simply access "**Help**" in the **Fingerprint Control Center** and select the item from the menu on the left.

Downloaded from LpManual.com Manuals

Downloaded from LpManual.com Manuals

Chapter 8: Troubleshooting

Overview

Should you have any problems with your computer, before consulting your service representative, you may want to try to solve the problem yourself. This chapter lists some common problems and their possible solutions. This can't anticipate every problem, but you should check here before you panic. If you don't find the answer in these pages, make sure you have followed the instructions carefully and observed the safety precautions in the preface. If all else fails, talk to your service representative. You should also make a record of what happened and what remedies you tried.

Of course, if something goes wrong, it will happen at the most inconvenient time possible, so you should preview this section just in case. If, after you've tried everything, and the system still won't cooperate, try turning it off for a few minutes and then rebooting. You will lose any unsaved data, but it may start working again. Then call your service representative.

Downloaded from LpManual.com Manuals

Basic Hints and Tips

Many of the following may seem obvious but they are often the solution to a problem when your computer appears not to be working.

- **Power** - Is the computer actually plugged into a working electrical outlet? If plugged into a **power strip**, make sure it is actually working. Check the **LED Power Indicators** (see *"LED Indicators" on page 1 - 7*) to see the computer's power status.
- **Connections** - Check all the **cables** to make sure that there are no **loose connections** anywhere.
- **Power Savings** - Make sure that the system is not in **Hibernate** or **Sleep** mode by pressing the keys configured in your P*ower Options* (see *"Configuring the Power Buttons" on page 3 - 8*), the **Fn + F4** key combination, or power button to wake-up the system.
- **Brightness** - Check the brightness of the screen by pressing the **Fn** + **F8 and F9** keys to adjust the brightness (see *Table 1 - 3, on page 1 - 10*).
- **Display Choice** - Press **Fn** + **F7** to make sure the system is not set to "external only" display.
- **Boot Drive** - Make sure there are no **optical media and/or USB storage devices** in any connected drive when you start up your machine (this is a common cause of the message "***Invalid system disk - Replace the disk, and then press any key***" / "***Remove disks or other media. Press any key to restart***").

Downloaded from Service Manuals and Manuals

Backup and General Maintenance

- Always **backup** your important data, and keep copies of your OS and programs safe, but close to hand. Don't forget to note the **serial numbers** if you are storing them out of their original cases, e.g. in a CD wallet.

- Run **maintenance programs** on your hard disk and OS as often as you can. You may schedule these programs to run at times when you are not using your computer. You can use those that are provided free with your OS, or buy the more powerful dedicated programs to do so.

- Write down your passwords and keep them safe (away from your computer). This is especially important if you choose to use a **Boot** password for the SCU (see ***"Security Menu" on page 5 - 10***).

- Keep copies of vital **settings files** such as network, dialup settings, mail settings etc. (even if just brief notes).

Warranty

The CPU is not a user serviceable part. Opening this compartment, or accessing the CPU in any way, may violate your warranty.

Downloaded from LpManual.com Manuals

Viruses

- Install an **Anti-Virus** program and keep the **definitions file** (the file which tells your program which viruses to look for) up to date. New computer viruses are discovered daily, and some of them may seriously harm your computer and cause you to lose data. **Anti-Virus** programs are commercially available and the **definitions file updates** are usually downloadable directly from the internet.

- Be careful when opening e-mail from sources you don't know. **Viruses** are often triggered from within **e-mail attachments** so take care when opening any attached file. You can configure most **Anti-Virus** programs to check all **e-mail attachments**. **Note**: You should also beware of files from people you know as the virus may have infected an **address book** and been automatically forwarded without the person's knowledge.

- Keep a "**Bootable CD-ROM/DVD-ROM/USB storage device**" (this CD/DVD/USB device provides basic information which allows you to startup your computer) handy. You may refer to your OS's documentation for instructions on how to make one, and many **Anti-Virus** programs will also provide such a disk (or at least instructions on how to make one).

Downloaded from ServiceManual.com Manuals

Upgrading and Adding New Hardware/Software

- Do not be tempted to make changes to your **Windows Registry** unless you are very sure of what you are doing, otherwise you will risk severely damaging your system.

- Don't open your computer or undertake any repair or upgrade work if you are not comfortable with what you are doing.

- Read the **documentation**. We can assume, since you are reading this that you are looking at the computer's manual, but what about any new peripheral devices you have just purchased? Many problems are caused by the installation of new hardware and/or software. Always refer to the documentation of any new hardware and/or software, and pay particular attention to files entitled "**READ ME**" or "**READ ME FIRST**".

- When installing a new device always make sure the device is powered on, and in many cases you will need to restart the computer. Always check that all the cables are correctly connected.

- Make sure you have installed the **drivers** for any new hardware you have installed (latest **driver files** are usually available to download from vendor's websites).

- Thoroughly check any **recent changes** you made to your system as these changes may affect one or more system components, or software programs. If possible, go back and undo the change you just made and see if the problem still occurs.

Downloaded from LpManual.com Manuals

- Don’t over complicate things. The less you have to deal with then the easier the source of the problem may be found; **Example** - if your computer has many devices plugged into its ports, and a number of programs running, then it will be difficult to determine the cause of a problem. Try disconnecting all of the devices and restarting the computer with all the peripheral devices unplugged. A process of elimination (adding and removing devices and restarting where necessary) will often find the source of a problem, although this may be time consuming.

Downloaded from Laptopmanuals.com Academy

Problems & Possible Solutions

Problem	Possible Cause - Solution
You turned the **power on** but it doesn't work.	*Battery missing / incorrectly installed.* Check the battery bay, make sure the battery is present and seated properly (the design of the battery only allows it to go in one way). Make sure there's nothing interfering with the battery contacts.
The **Battery LED power** indicator , is blinking orange.	*Low Battery.* Plug in the AC power source. If the computer doesn't start up immediately, turn it off then on again.
You are losing **battery power** too quickly.	*The system is using too much power.* If your *OS* has a *Power Options* scheme (see ***"Power Plans" on page 3 - 4***) check its settings. You may also be using an ExpressCard device/USB device/external device that is drawing a lot of power. *You are attempting to run an SLI configuration on battery power.* Due to the high power and system demands created by enabling SLI Configuration, **you should not enable SLI configuration if your computer is powered by battery only**.
Actual **battery operating time** is shorter than expected.	*The battery has not been fully discharged before being recharged.* Make sure the battery is fully discharged and recharge it completely before reusing (see ***"Battery Information" on page 3 - 10***). Check the settings of any active power plan (see ***"Power Plans" on page 3 - 4***). *A peripheral device/USB device is consuming a lot of power.* Turn off/remove the unused device to save power.

Downloaded from LpManual.com Manuals

Problem	Possible Cause - Solution
The **computer feels too hot**.	Make sure the computer is properly ventilated and the vents/fan intakes are not blocked. If this doesn't cool it down, put the system into **Hibernate** mode or turn it off for an hour. Make sure the computer isn't sitting on a thermal surface (see ***"Overheating" on page 1 - 15***). Make sure you're using the correct adapter. Make sure that your notebook is completely powered off before putting it into a travel bag (or any such container). Putting a notebook which is powered on in a travel bag may cause the vents/fan intakes to be blocked.
Nothing appears on screen.	*The system is in a power saving mode*. Toggle the **Fn + F4** (see ***"Configuring the Power Buttons" on page 3 - 8***). *The screen controls need to be adjusted.* Toggle the screen control **Fn + F8/F9** key combinations. If you're connected to an external monitor, make sure it's plugged in and turned on. You should also check the monitor's own brightness and contrast controls. *The computer is set for a different display.* Toggle the screen display key **Fn + F7** combination. If an external monitor is connected, turn it on. *The **screen saver** is activated.* Press any key or touch the **TouchPad**.
No image appears on the **external monitor** I have plugged in and powered on.	*You haven't installed the video driver and configured it appropriately from the **Control Panel**.* See ***"NVIDIA Video Driver Controls" on page B - 1*** for instructions on installing and configuring the video driver.

Downloaded from LapManuals.com Manuals

Problem	Possible Cause - Solution
You forget the **boot password**.	*If you forget the password, you may have to discharge the battery of the CMOS.* Contact your service representative for help.
Password Warning If you choose to set a boot password, **NEVER** forget your password. The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.	
The **sound** cannot be heard or the volume is very low.	*The volume might be set too low.* Check the volume control in the ***Volume Control Panel*** in the *Windows* taskbar, use the key combination **Fn + F5** and **F6 or** move your finger slowly along the volume control slider to adjust the system volume (see ***"Audio Features" on page 2 - 16***/ ***"Touch Sensor Instant Keys" on page 1 - 8***) to adjust.
The **compact disc** cannot be read.	*The compact disc is dirty.* Clean it with a CD-ROM cleaner kit.
The **compact disc tray** will not open when there is a disc in the tray.	*The compact disc is not correctly placed in the tray.* Gently try to remove the disc using the eject hole (see ***"Loading Discs" on page 2 - 3***).
The **DVD regional codes** can no longer be changed.	*The code has been changed the maximum **5** times.* See ***"DVD Regional Codes" on page 2 - 5***.

Downloaded from LpManual.com Manuals

Problem	Possible Cause - Solution
The **TouchPad** doesn't work.	*The Touchpad has been disabled*. Press the Touchpad toggle (**Fn + F1**) key combination (make sure you have installed the Touchpad driver.
The **system freezes** or the screen goes dark.	*The system's power saving features have timed-out*. Use the AC/DC adapter, press a key on the keyboard, or press the sleep (**Fn + F4**) key combination, or press the power button if no LEDs are lit.
The system never goes into a **power saving mode**.	Power Options features are not enabled. Go to the ***Windows*** Power Options menu and enable the features you prefer (see ***"Power-Saving States" on page 3 - 6***). Make sure you have enabled **Hibernate** mode from the control panel.
The **Wireless LAN/ Bluetooth/PC Camera modules** cannot be **detected**.	*The modules are off.* Check the appropriate Touch Sensor indicator to see if the modules are on or off (see ***"Touch Sensor Instant Keys" on page 1 - 8***). If the LED indicator is not illuminated, then press the appropriate touch sensor instant key/function key combination in order to enable the modules.
The **Wireless LAN/ Bluetooth/PC Camera modules** cannot be **configured**.	*The driver(s) for the module(s) have not been installed*. Make sure you have installed the driver for the appropriate module (see the instructions in ***Chapter 7 "Modules"*** for the appropriate module).

Download from Diagmanuals.com

Problem	Possible Cause - Solution
When a **DVD** is played in **Windows Media Player/ Media Center**, the **audio track** in other languages (commentaries etc.) **is not clear** if connected to the S/PDIF-Out Jack.	*This is an issue with Windows Media Player/Media Center and audio output through the S/PDIF-Out Jack.* We recommend that you use the **Power DVD** application to play DVDs.
Nothing appears on the screen when the **PC Camera** software is run.	*You have selected an external display as the default display device*. The PC Camera application software needs to be run while the ***default notebook LCD*** is the selected display device. After a camera picture is obtained on the default notebook LCD, you may then use the **Fn + F7** to toggle through the display modes (give the screen time to refresh). If you have selected an external display as your display device do not run the PC Camera software application until you have switched back to the notebook LCD.
A file cannot be copied to/from a connected **Bluetooth** device.	*The transfer of data between the computer and a Bluetooth enabled device is supported **in one direction only (simultaneous data transfer is not supported)***. If you are copying a file from your computer to a Bluetooth enabled device, you will not be able to copy a file from the Bluetooth enabled device to your computer until the file transfer process from the computer has been completed
The **Bluetooth** module is **off** after resuming from Sleep.	*The Bluetooth module's default state will be off after resuming from the Sleep power-saving state*. Use the key combination (**Fn + F12**) to power on the Bluetooth module after the computer resumes from Sleep.

Downloaded from LpManual.com Manuals

Problem	Possible Cause - Solution
No sound can be heard through an **HDMI** connected display device.	*You have not configured the HDMI audio output*. See ***"HDMI Audio Configuration" on page 2 - 13***.
After installing the cardreader driver you receive the error message "**0x000000D1**" and the computer may restart.	Where this is the case, install the beta cardreader driver version provided on the ***Device Drivers & Utilities +User's Manual disc***. 1. ***Insert the Device Drivers & Utilities + User's Manual disc*** and click **Browse CD/DVD**. 2. The driver is located in the following location on the disc: **Driver\07_CReader(Beta)**. 3. Double-click the executable setup file and follow the on-screen instructions to install the driver.
You are experiencing problems with an external **display connected to the DVI-Out port**.	Where this is the case, install the beta video driver version provided on the ***Device Drivers & Utilities +User's Manual disc***. 1. ***Insert the Device Drivers & Utilities + User's Manual disc*** and click **Browse CD/DVD**. 2. The driver is located in the following location on the disc: **Driver\02_Video(Beta)**. 3. Double-click the executable setup file and follow the on-screen instructions to install the driver.

Downloaded from Laptopmanuals.com Schematics

Problem	Possible Cause - Solution
After using the **Fn + F11** key combination to switch the WLAN module off and have, restarted the computer, shut the computer down and started up again, or recovered from hibernate mode, you experience problems with powering the WLAN module on again.	This is a known problem and Intel have provided a beta WLAN driver to address this issue. The beta WLAN driver is provided on the ***Device Drivers & Utilities +User's Manual disc***. 1. ***Insert the Device Drivers & Utilities + User's Manual disc*** and click **Browse CD/DVD**. 2. The driver is located in the following location on the disc: **Others\01_WLan\Shirley(Beta)** 3. Use the **Fn + F11** key combination to **power ON** the WLAN module **before installing the driver** (check the LED indicator to make sure the WLAN module is ON). 4. Double-click the executable setup file and follow the on-screen instructions to install the driver.

Downloaded from LpManual.com Manuals

Problem	Possible Cause - Solution
You have a RAID enabled and the system will not boot to ***Windows***.	You may need to recover the RAID volumes. 1. As the computer starts up press **Ctrl + i** to enter RAID configuration menu 2. If the RAID volume's **Physical disks** are marked in red, then press **4.Recovery Volume Options**. 3. If you cannot access **4.Recovery Volume Options** (i.e. it is grayed out) then press **5.Acceleration Options**. 4. Press **Enter** and return to the main menu, then press **4.Recovery Volume Options**. 5. Follow the on screen instructions to recover the **Physical disks**. 6. If only one of the physical disks now appears green, then press **6.Exit** to save the changes and exit and boot to ***Windows***. 7. When Windows is loaded run the **Intel® Matrix Storage Console** from the **Intel® Matrix Storage Manager** in the **Programs/All Programs** menu. 8. Click **View > Advanced Mode**. 9. Right-click on the RAID volume and select either **Verify Volume Data** or **Verify and Repair Volume Data**. 10. The verification or verification and repair process will run and display progress. 11. A dialog box will display the final status of the verification or verification and repair status.

Downloaded from Laptopmanuals.com Schematics

Appendix A: Interface (Ports & Jacks)

Overview

The following chapter will give a quick description of the ports & jacks which allow your computer to communicate with external devices, connect to the internet etc.

Downloaded from LpManual.com Manuals

Ports and Jacks

Item	Description
Card Reader MMC / SD / MS	The card reader allows you to use the following digital storage cards: MMC (MultiMedia Card) SD (Secure Digital) MS (Memory Stick) MS (Memory Stick Pro) RS MMC (requires PC adapter) Mini SD (requires PC adapter) MS Duo (requires PC adapter)
Cable (CATV) Antenna Jack CATV	Use this jack to connect a CATV cable if you have included the **optional** Mini-PCI TV Tuner in your purchase.
Consumer Infrared Transceiver	The **consumer infrared** transceiver at the **front** of the computer allows the computer to communicate with the remote control unit supplied with the **optional** Mini-PCI TV Tuner.
DC-In Jack	Plug the supplied AC/DC adapter into this jack to power your computer.
DVI-Out Port	The DVI-Out (**Digital Visual Interface**) Port is a video connector interface. This allows you to connect an external monitor, TV or Flat Panel Display etc. as a display device (see ***"Configuring an External Display using the NVIDIA Control Panel" on page B - 7***) by means of a DVI cable. If you are using an older type of monitor you will need to use a converter to convert the signal from DVI to VGA.

Download from Service Manuals Manuals

Item	Description
e-SATA/USB Port e-SATA /	This is a combined **e-SATA** (**external Serial Advanced Technology Attachment**)/ USB 2.0 compatible port. Plug external Serial ATA hard drives into this **e-SATA** (**external Serial Advanced Technology Attachment**) port. See *"USB 2.0/1.1 Ports" on page A - 5* for USB port information.
HDMI-Out Port HDMI	The HDMI-Out (**High-Definition Multimedia Interface**) port is an audio/video connector interface for transmitting uncompressed digital streams. This allows you to connect an external monitor, TV or Flat Panel Display etc. as a display device (see *"Configuring an External Display using the NVIDIA Control Panel" on page B - 7*) by means of a HDMI cable. **Note that HDMI carries both audio and video signals** (see *"HDMI Audio Configuration" on page 2 - 13*).
HDMI-IN Port HDMI-IN	The HDMI-In (**High-Definition Multimedia Interface**) port allows you to display external sources such as Blu-ray players, DVDs, set top boxes and games consoles etc. on your computer screen (see *"GameMate Media Player (HDMI-In)" on page 2 - 10*).
Headphone-Out Jack	**Headphones** or **speakers** may be connected through this jack. **Note**: Set your system's volume to a reduced level before connecting to this jack.
Line-In Jack	The Line-In jack allows you to play audio sources through the computer's speakers. Note that audio input through Line-in will default to the **mute** setting. To set up your audio sources to play through the Line-in jack go to the **Sound** control panel and make sure the Mute box is not ticked.

Downloaded from LpManual.com Manuals

Interface (Ports & Jacks)

Item	Description
Microphone-In Jack	Plug an external microphone in to this jack to record on your computer.
Mini-IEEE 1394 Port	This allows high-speed connection to various peripheral devices, e.g. external disk drives and digital cameras (**see note below**). **IEEE 1394** The Mini-IEEE 1394 ports only support **SELF POWERED** IEEE 1394 devices.
RJ-45 LAN Jack	This port supports LAN (Network) functions. **Note**: Broadband (e.g. ADSL) modems usually connect to the LAN port.
S/PDIF-Out Jack	This S/PDIF (**Sony/Philips Digital Interface Format**) Out Port allows you to connect your DVD-capable PC to a Dolby AC-3 compatible receiver for “5.1” or ‘dts’ surround sound.
Security Lock Slot	To prevent possible theft, a Kensington-type lock can be attached to this slot. Locks can be purchased at any computer store.

A

Downloaded from Laptopmanuals.us Manuals

Item	Description
USB 2.0/1.1 Ports	These USB (**Universal Serial Bus**) 2.0 compatible ports (USB 2.0 is fully USB 1.1 compliant) are for low-speed peripherals such as keyboards, mice or scanners, and for high-speed peripherals such as external HDDs, digital video cameras or high-speed scanners etc. Devices can be plugged into the computer, and unplugged from the computer, without the need to turn the system off (if the power rating of your USB device is 500mA or above, make sure you use the power supply which comes with the device).

Downloaded from LpManual.com Manuals

Downloaded from LpManual.com Manuals

Appendix B: NVIDIA Video Driver Controls

The basic settings for configuring the LCD are outlined in *"Video Features" on page 1 - 17*.

NVIDIA Video Driver Installation

Make sure you install the drivers in the order indicated in *Table 4 - 1, on page 4 - 3*.

1. Insert the *Device Drivers & Utilities + User's Manual* disc and click ***Install Drivers*** (button).
1. Click **1.Install Video Driver > Yes**.
2. Click **Next > Yes > Next**.
3. Click **Finish** to restart the computer.

Video Card Options

Note that card types, specifications and drivers are subject to continual updates and changes. Check with your service center for the latest details on video cards supported.

Downloaded from LpManual.com Manuals

NVIDIA Control Panel

To access the **GeForce.....** control panel from the desktop; right-click the **desktop**, then click **NVIDIA Control Panel**.

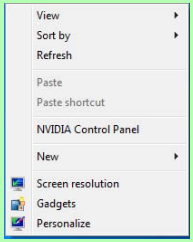

Figure B - 1

NVIDIA GeForce..... Control Panel

NVIDIA Control Panel (Win 7)

More advanced video configuration options are provided in the **NVIDIA Control Panel** tab.

1. Open the **Display Settings** (see page *1 - 17*) control panel.
2. Click **Advanced Settings** (button).
3. Click **GeForce.....** (tab).
4. Click **Start the NVIDIA Control Panel** to make any video adjustments.

OR

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Double-click **NVIDIA Control Panel** (click "**Classic View"** from the left of the menu if you are in **Control Panel Home**).

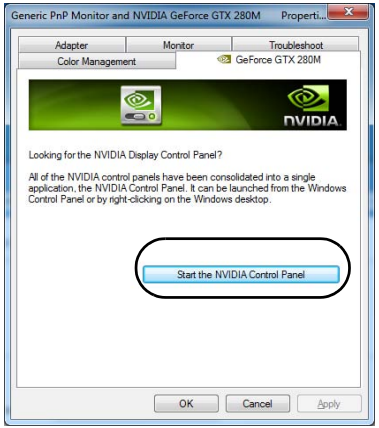
Generic PnP Monitor and NVIDIA GeForce GTX 280M
Adapter
Monitor
Troubleshoot
Color Management
GeForce GTX 280M
NVIDIA
Looking for the NVIDIA Display Control Panel?
All of the NVIDIA control panels have been consolidated into a single application, the NVIDIA Control Panel. It can be launched from the Windows Control Panel or by right-clicking on the Windows desktop.
Start the NVIDIA Control Panel
OK
Cancel
Apply

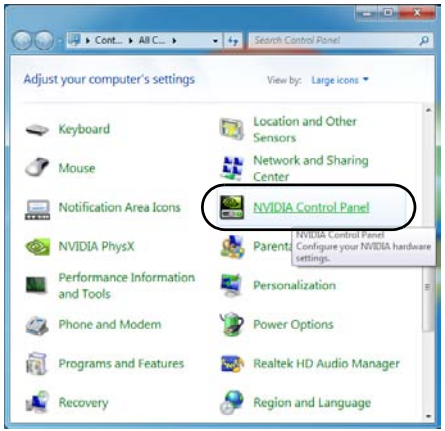

Downloaded from LapMedication Manuals

The **NVIDIA Control Panel** provides additional video configuration controls and tools which allow quick access to features such as display configuration, 3D Settings and Help menus etc.

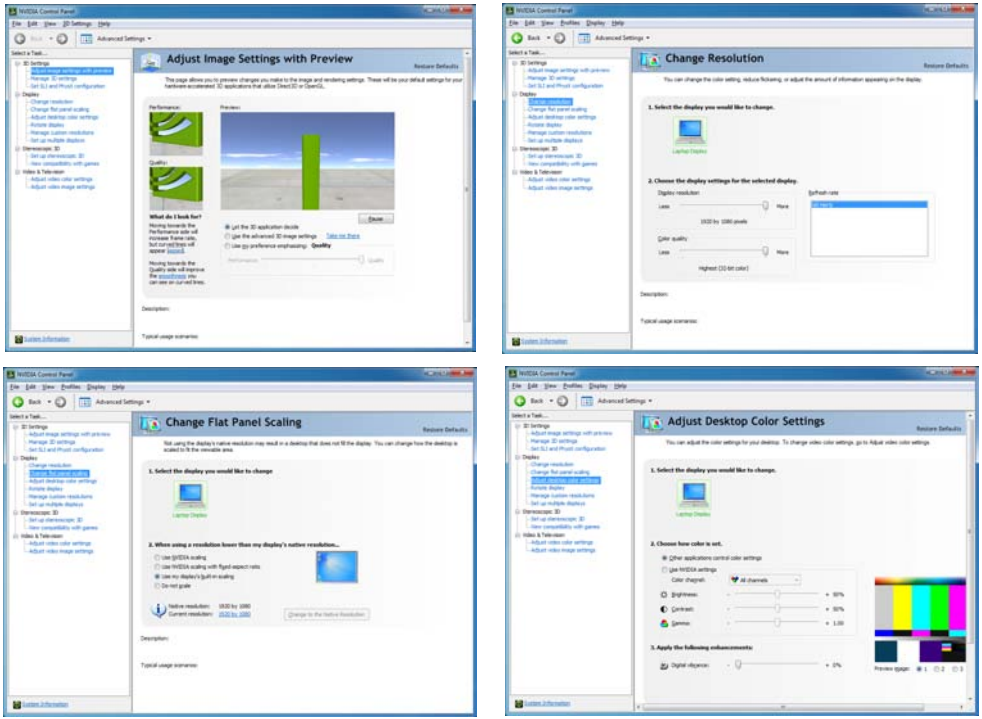

Navigating the Control Panel

Navigate through the control panels in much the same way as you would a web page. Click on the sub-heading tasks in the left menu (and on the highlighted links) for information. Use the buttons on the top left to go back, forward etc.

Figure B - 2
NVIDIA Control Panels

B

Downloaded from LpManual.com Manuals

The **Help** menus provide index and search features, and direct links to the NVIDIA website etc.

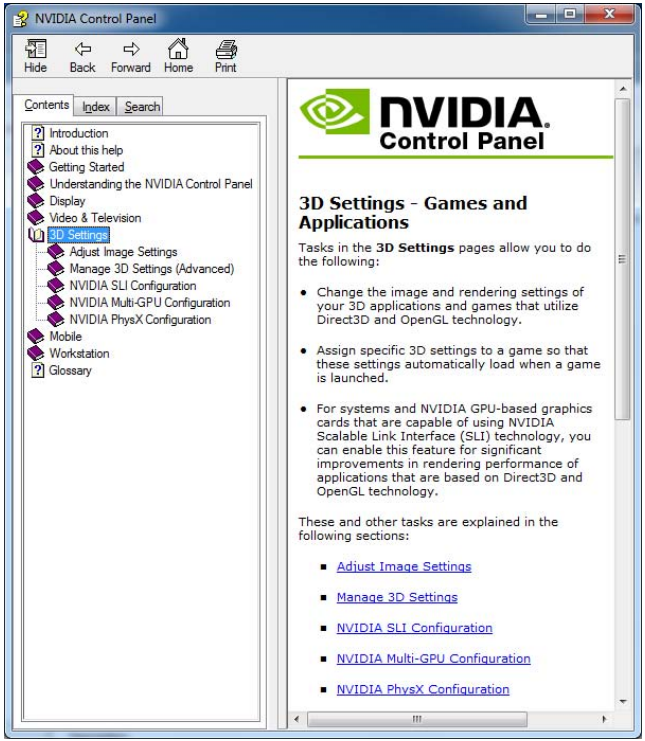
NVIDIA Control Panel
Hide
Back
Forward
Home
Print
Contents
Index
Search
Introduction
About this help
Getting Started
Understanding the NVIDIA Control Panel
Display
Video & Television
3D Settings
Adjust Image Settings
Manage 3D Settings (Advanced)
NVIDIA SLI Configuration
NVIDIA Multi-GPU Configuration
NVIDIA PhysX Configuration
Mobile
Workstation
Glossary
NVIDIA Control Panel
3D Settings - Games and Applications
Tasks in the 3D Settings pages allow you to do the following:
Change the image and rendering settings of your 3D applications and games that utilize Direct3D and OpenGL technology.
Assign specific 3D settings to a game so that these settings automatically load when a game is launched.
For systems and NVIDIA GPU-based graphics cards that are capable of using NVIDIA Scalable Link Interface (SLI) technology, you can enable this feature for significant improvements in rendering performance of applications that are based on Direct3D and OpenGL technology.
These and other tasks are explained in the following sections:
Adjust Image Settings
Manage 3D Settings
NVIDIA SLI Configuration
NVIDIA Multi-GPU Configuration
NVIDIA PhysX Configuration

Figure B - 3
Help Menu

B - 4 NVIDIA Control Panel (Win 7)

Downloaded from ManualsDirectory.com Manuals

Display Devices

Note that you can use a DVI cable connected to the DVI-Out port, or an HDMI (High-Definition Multimedia Interface) cable connected to the HDMI-Out port to connect an external display (if you are using an older type of monitor you can use a converter to convert the signal from DVI to VGA). See your display device manual to see which formats are supported.

1. The built-in LCD.
2. An external display connected to the DVI-Out Port.
3. An external display/TV (if the TV supports an HDMI connection) connected to the HDMI-Out Port.

Monitor and TV Tuner

If you are connecting both a monitor/flat panel display to the DVI-Out Port, and a cable/aerial to the optional TV Tuner module, **make sure you attach the cable/aerial to the TV Tuner first**, then the monitor.

Display Devices

Besides the built-in LCD, you can also use an external monitor/flat panel display as your display device. The display options are:

- The built-in LCD.
- An external display connected to the DVI-Out port.
- An external display connected to the HDMI-Out port.

Note that HDMI supports video and audio signals.

DO NOT use the **Fn + F7** key combination to toggle through display options when SLI is enabled.

B

Downloaded from LpManual.com Manuals

SLI Configuration & Multiple Displays

Note that if SLI configuration is enabled only a **Single** display may be used as the display device.

DO NOT use the **Fn + F7** key combination to toggle through display options when SLI is enabled. SLI supports only a **Single** display, and attempting to configure dual displays may cause an error. Use the NVIDIA control panel to select the display to be used.

Display Modes

Single Display Mode

Only one of your displays is used.

Duplicate Displays

Duplicate simply shows an exact copy of the Primary display desktop on the other display(s). This mode will drive multiple displays with the same content.

Extend Desktop

Extend Desktop treats both connected displays as separate devices, and they act as a virtual desktop resulting in a large workspace. When enabled, you can drag any icons or windows across to the other display desktop. It is therefore possible to have one program visible in one of the displays, and a different program visible in the other display.

Downloaded from ManualsLib.com Manuals

Configuring an External Display using the NVIDIA Control Panel

You can use the **NVIDIA control panel** to configure any attached displays.

1. Attach your external display to the DVI-Out Port or HDMI-Out port, and turn it on.
2. Go to **NVIDIA Control Panel** (see page ***B - 2***).
3. Double-click **Display** (if the sub-menus are not visible)**,** and then click **Set up multiple displays**.
4. Any attached display will appear under "**1.Select the displays you want to use.**"

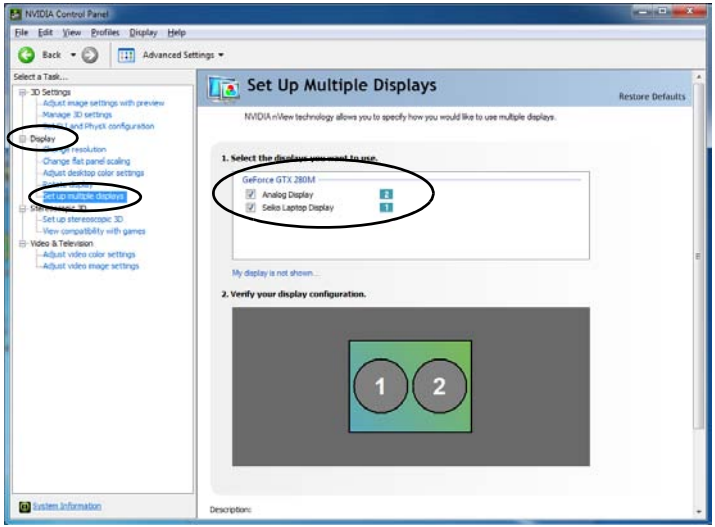

5. Click the tickbox alongside any display you wish to use.
6. Click **Apply > Yes** to save any changes made.

Display Not Shown

If the attached display does not appear in the "***1.Select the displays you want to use.***" window, click "***My Display is not shown...***" and then click the appropriate button to force detection of the missing display.

Figure B - 4
Set Up Multiple Displays

B

Downloaded from LpManual.com Manuals

Duplicating the Displays

1. Attach your external display to the DVI-Out Port or HDMI-Out port, and turn it on.
2. Go to **NVIDIA Control Panel** (see page ***B - 2***).
3. Double-click **Display** (if the sub-menus are not visible)**,** and then click **Set up multiple displays**.
4. Any attached display will appear under *"**1.Select the displays you want to use.**"*
5. Click the tickbox alongside any display you wish to use.
6. Right-click one of the display icons and click "**Duplicate displays....**" (select which is to be the primary display) to duplicate the desktop on both displays.

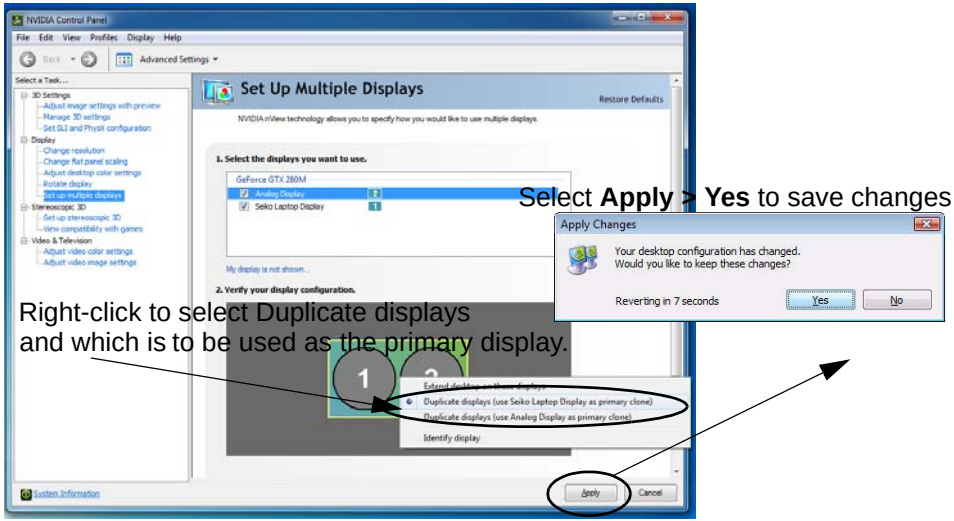
NVIDIA Control Panel
Set Up Multiple Displays
1. Select the displays you want to use.
2. Verify your display configuration.
Right-click to select Duplicate displays
and which is to be used as the primary display.
Select Apply > Yes to save changes
Apply Changes
Your desktop configuration has changed.
Would you like to keep these changes?
Reverting in 7 seconds
Yes
No
Duplicate displays (use Seiko Laptop Display as primary clone)
Identify display
Apply
Cancel

Figure B - 5
Duplicate Displays

7. Click **Apply > Yes** to save any changes.

Downloaded from ManualsNet.com Manuals

Extending the Display

1. Attach your external display to the DVI-Out Port or HDMI-Out port, and turn it on.
2. Go to **NVIDIA Control Panel** (see page ***B - 2***).
3. Double-click **Display** (if the sub-menus are not visible)**,** and then click **Set up multiple displays**.
4. Click to select a primary display under ***"1.Select the displays you want to use."***
5. Right-click one of the display icons and click "**Extend Desktop on this display...."** to extend the desktop across both displays.

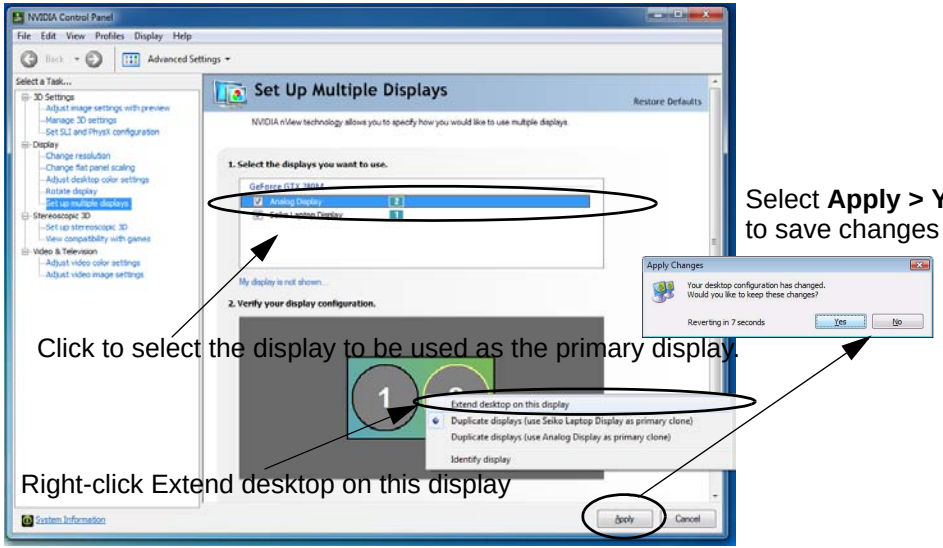
NVIDIA Control Panel
Set Up Multiple Displays
1. Select the displays you want to use.
2. Verify your display configuration.
Extend desktop on this display
Duplicate displays (use Seiko Laptop Display as primary clone)
Duplicate displays (use Analog Display as primary clone)
Identify display
Apply
Cancel
Apply Changes
Your desktop configuration has changed.
Would you like to keep these changes?
Yes
No
Select **Apply > Yes** to save changes
Click to select the display to be used as the primary display.
Right-click Extend desktop on this display

Figure B - 6
Extend the Display

6. Click **Apply > Yes** to save any changes.

Downloaded from LpManual.com Manuals

Changing the Primary Display on Extended Displays

1. If you want to switch the primary display if the displays are extended then right-click the **secondary** display icon.
2. Select **Make this the Windows primary display**.
3. Click **Apply > Yes** to save the change.

Figure B - 7
Switch Primary Display

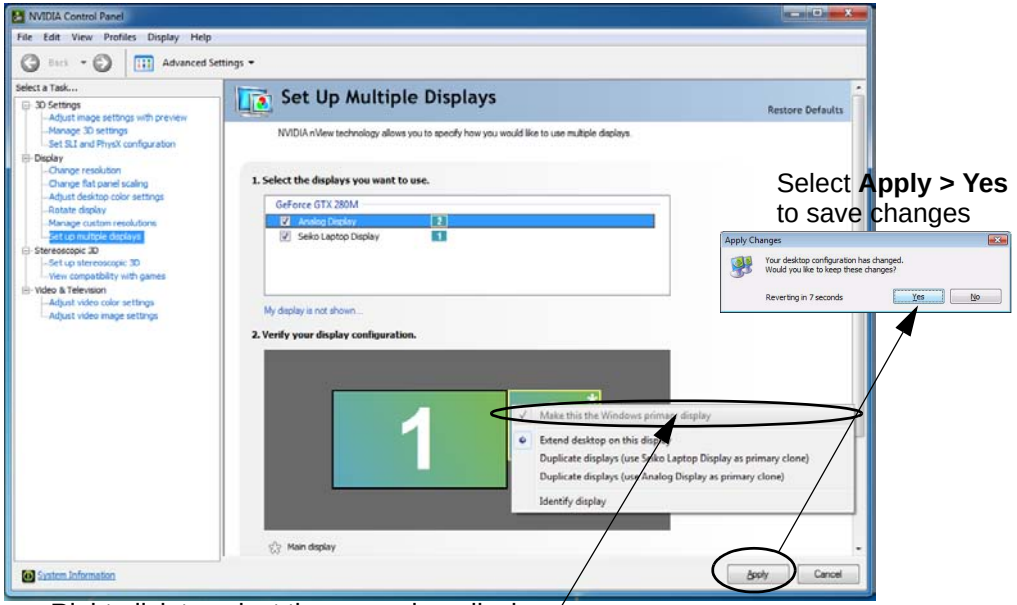
NVIDIA Control Panel
File Edit View Profiles Display Help
Advanced Settings
Select a Task...
3D Settings
Display
Video & Television
Set Up Multiple Displays
Restore Defaults
NVIDIA nView technology allows you to specify how you would like to use multiple displays.
1. Select the displays you want to use.
GeForce GTX 280M
Analog Display
Seiko Laptop Display
My display is not shown...
2. Verify your display configuration.
1
Make this the Windows primary display
Extend desktop on this display
Duplicate displays (use Seiko Laptop Display as primary clone)
Duplicate displays (use Analog Display as primary clone)
Identify display
Main display
System Information
Apply
Cancel
Apply Changes
Your desktop configuration has changed.
Would you like to keep these changes?
Reverting in 7 seconds
Yes
No
Select Apply > Yes to save changes
Right-click to select the secondary display and select Make this the Windows primary display.

Download from Programmer's Manuals

Attaching Other Displays (Win 7)

Configuring an External Display in Windows 7

1. Attach your external display to the DVI-Out Port or HDMI-Out port, and turn it on.
2. Go to the **Screen resolution** control panel.
3. Click the **Detect** button.
4. The computer will then detect any attached displays.

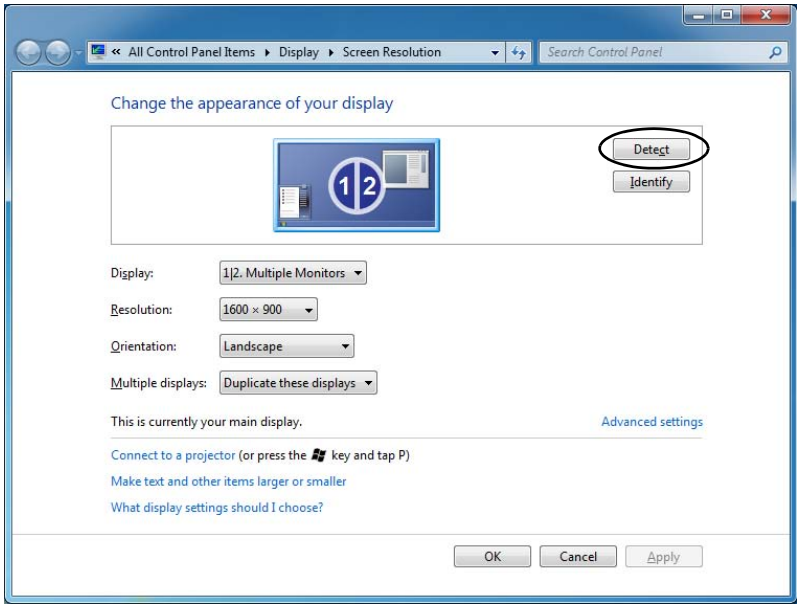
All Control Panel Items ▸ Display ▸ Screen Resolution
Search Control Panel
Change the appearance of your display
Detect
Identify
1 2
Display: 1|2. Multiple Monitors
Resolution: 1600 × 900
Orientation: Landscape
Multiple displays: Duplicate these displays
This is currently your main display.
Advanced settings
Connect to a projector (or press the key and tap P)
Make text and other items larger or smaller
What display settings should I choose?
OK
Cancel
Apply

Function Key Combination

You can use the **Fn + F7** key combination to toggle through the display options:

- Notebook Only
- External Display Only
- Notebook + External Display

Make sure you give the displays enough time to refresh.

DO NOT use the **Fn + F7** key combination to toggle through display options when SLI is enabled.

Figure B - 8
Screen Resolution Multiple Displays (Win 7)

B

Downloaded from LpManual.com Manuals

5. You can configure the displays from the **Multiple Displays** menu.

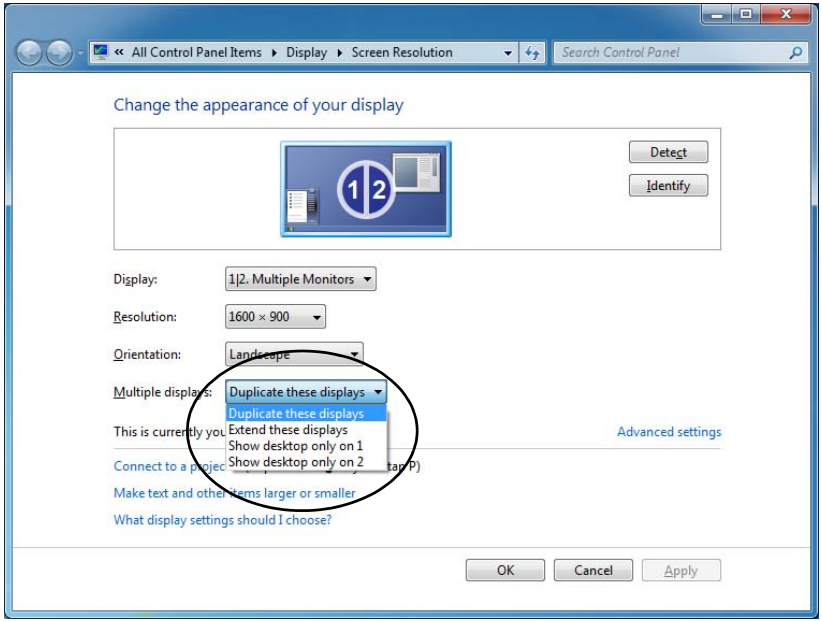

Figure B - 9
Screen Resolution Multiple Display Options (Win 7)

- Duplicate these displays - Shows an exact copy of the main display desktop on the other display(s)
- Extend these displays - Treats both connected displays as **separate** devices
- Show desktop only on 1/2 - Only one of your displays is used.

Download from Clevo Manuals Online

Using the Windows Logo Key + P Key Combination to Switch Displays

You can also use the + **P** key combination to quickly change display configuration and modes (this is particularly useful when attaching a projector) in ***Windows 7***.

1. Attach your external display to the external monitor port and turn it on.
2. Press the + **P** key combination.
3. An on-screen menu will pop up.
4. Use the cursor keys (or + **P**) to select the appropriate configuration from the menu, and press Enter to confirm the selection.

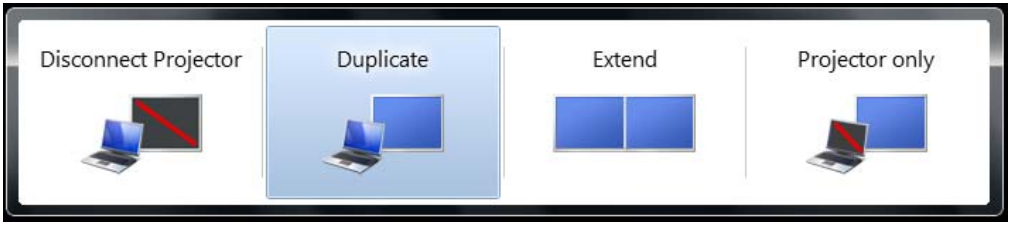

Figure B - 10
+ P Display Configuration Selection (Win 7)

Downloaded from LpManual.com Manuals

SLI Configuration & Multiple Displays

Note that if SLI configuration is enabled only a **Single** display may be used as the display device.

DO NOT use the **Fn + F7** key combination to toggle through display options when SLI is enabled. SLI supports only a **Single** display, and attempting to configure dual displays may cause an error. Use the NVIDIA control panel to select the display to be used.

SLI Multi GPU Configuration

This computer features an **NVIDIA Scalable Link Interface (SLI)** that improves graphic quality and performance by combining **dual** NVIDIA GPUs (two video cards are required) in a single system. To enable/disable SLI Configuration:

1. Go to **NVIDIA Control Panel** (see page ***B - 2***).
2. Click "**+**" next to **3D Setting**s if its sub-items are not shown and then click **Set SLI and PhysX configuration**.

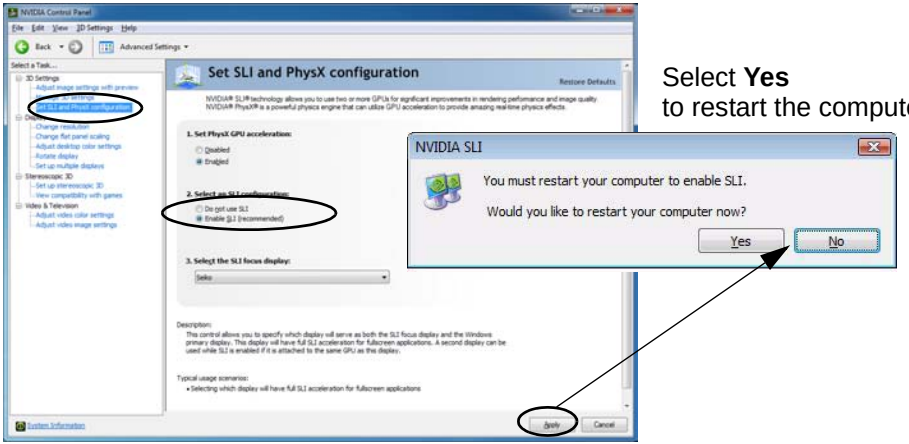
Set SLI and PhysX configuration
NVIDIA SLI
You must restart your computer to enable SLI.
Would you like to restart your computer now?
Yes
No

Select **Yes** to restart the computer

Figure B - 11
Set SLI Configuration

3. Click "**Enable SLI technology (recommended)**" under "**2.Select an SLI configuration:"**.
4. Click to "**Select the SLI focus display:"** (only a **single display** may be used).
5. Click **Apply** and **Yes** to restart the computer (see over).

Download from Dimanuals.com Manuals

SLI Multi GPU Configuration & Battery Power

Note that due to the high power and system demands created by enabling SLI Configuration, **you should not enable SLI configuration if your computer is powered by battery only**. If you attempt to run an SLI configuration when the computer is powered by the battery only, then system problems may occur.

- If the computer is currently powered by battery only **do not enable SLI configuration**.

- If you have currently enabled SLI configuration, and the computer is powered by the AC/DC adapter, **do not switch to battery power only** (or go to the NVIDIA Control Panel and disable SLI configuration before switching to battery power only).

Downloaded from LpManual.com Manuals

Detect Displays

To get a full range of display options click "***My display is not shown in the list...***".

HDMI Audio Setup

See ***"HDMI Audio Configuration" on page 2 - 13*** for instructions on configuring audio for HDMI display devices.

Set up your external display (TV or LCD) for HDMI input (see your display device manual).

Enabling TV Display

To display desktop images on a TV, connect the TV to your computer by using an HDMI cable/DVI cable from the TV to the HDMI-Out port/DVI-Out port (if supported by your TV).

You will need to enable the TV display from the **NVIDIA Control Panel** as per the instructions on ***B - 7***. The TV will appear as a display option (***1. Select the displays you would like to use.***) when attached to the appropriate port. **Apply** the settings, and then click **Yes** to save the changes.

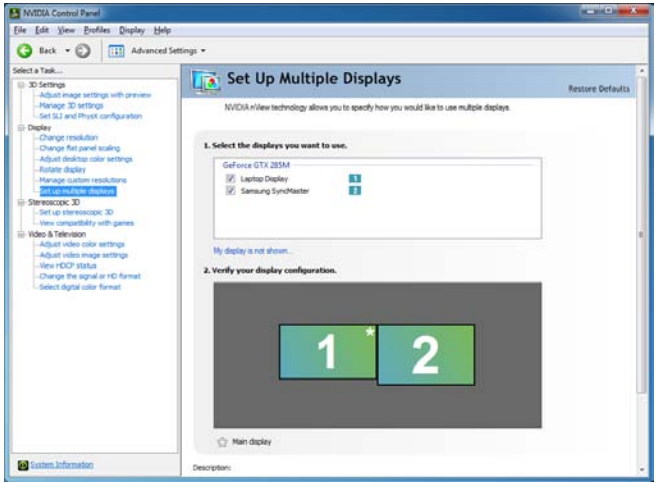

Figure B - 12
Set Up Multiple Displays (with TV connected)

Download from Laptop Manual.com Displays

Changing the TV Signal Format

1. When the TV is enabled as a display device click the sub-menus under **Video & Television**.
2. Click "***Change the signal or HD format***".
3. Select the connector or format you want to use (the menu that appears will depend upon your type of connector).
4. **Apply** the settings, and then click **Yes** to save the changes.

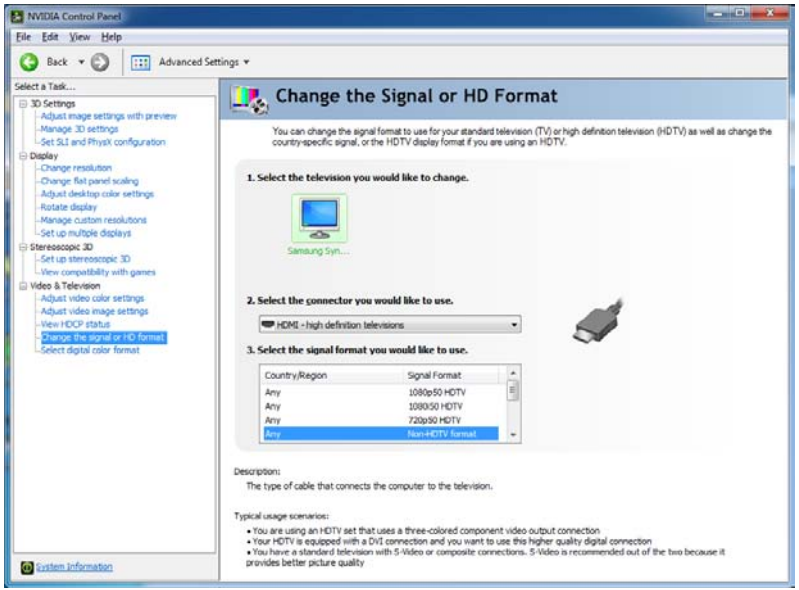
NVIDIA Control Panel
File Edit View Help
Back
Advanced Settings
Select a Task...
3D Settings
Adjust image settings with preview
Manage 3D settings
Set SLI and PhysX configuration
Display
Change resolution
Change flat panel scaling
Adjust desktop color settings
Rotate display
Manage custom resolutions
Set up multiple displays
Stereoscopic 3D
Set up stereoscopic 3D
View compatibility with games
Video & Television
Adjust video color settings
Adjust video image settings
View HDCP status
Change the signal or HD format
Select digital color format
System Information
Change the Signal or HD Format
You can change the signal format to use for your standard television (TV) or high definition television (HDTV) as well as change the country-specific signal, or the HDTV display format if you are using an HDTV.
1. Select the television you would like to change.
Samsung Syn...
2. Select the connector you would like to use.
HDMI - high definition televisions
3. Select the signal format you would like to use.
Country/Region
Signal Format
Any
1080p50 HDTV
Any
1080i50 HDTV
Any
720p50 HDTV
Any
Non-HDTV format
Description:
The type of cable that connects the computer to the television.
Typical usage scenarios:
• You are using an HDTV set that uses a three-colored component video output connection
• Your HDTV is equipped with a DVI connection and you want to use this higher quality digital connection
• You have a standard television with S-Video or composite connections. S-Video is recommended out of the two because it provides better picture quality

Figure B - 13
Change the Signal or HD Format

Downloaded from LpManual.com Manuals

The **NVIDIA Control Panel** provides additional configuration controls to adjust the TV settings in the **Video & Television** menu.

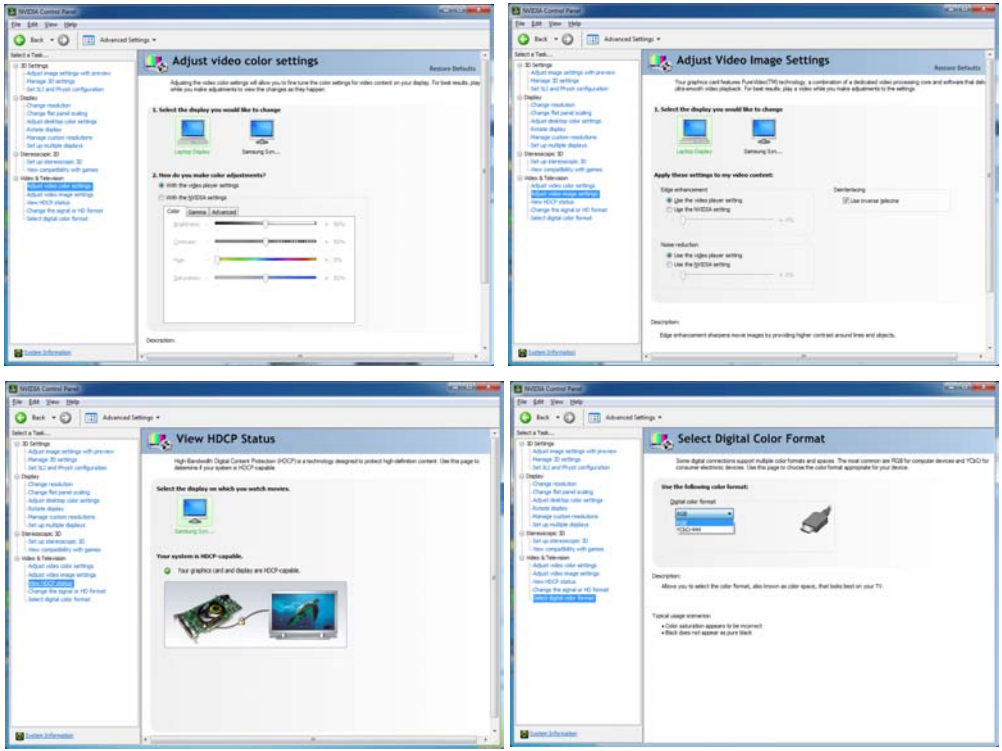

Figure B - 14
NVIDIA Control Panels (Video & Television)

Download from Laptopmanual.com Manuals

Appendix C: Specifications

Latest Specification Information

The specifications listed in this Appendix are correct at the time of going to press. Certain items (particularly processor types/ speeds and CD/DVD device types) may be changed, updated or delayed due to the manufacturer's release schedule. Check with your service center for details.

Downloaded from LpManual.com Manuals

Processor

Intel® Core i7-720QM Processor: 1.6GHz
45nm (45 Nanometer) Process Technology, 6M L3 Cache & FSB 1333MHz - TDP 45W
rPGA988A Package

Intel® Core i7-820QM Processor: 1.73GHz
45nm (45 Nanometer) Process Technology, 8M L3 Cache & FSB 1333MHz - TDP 45W
rPGA988A Package

Intel® Core i7-920XM Processor: 2.00GHz
45nm (45 Nanometer) Process Technology, 8M L3 Cache & FSB 1333MHz - TDP 55W
rPGA988A Package

Core Logic

Intel® PM55 Chipset

Display

18.4" HD+/ FHD (1920 * 1080) TFT LCD

Memory

DDRIII (DDR3) Dual Channels
Two 204 Pin SO-DIMM Sockets Supporting **DDRIII (DDR3)** 1066MHz/ 1333MHz Memory Modules
Memory Expandable up to 8GB
Compatible with 2GB or 4GB Modules

Video Adapter Options

nVIDIA® GeForce GTX 280M SLI PCIe Video Card
1GB GDDR3 Video RAM On Board
Supports PCIe * 8 (SLI - 2 * PCIe * 8)
Supports Microsoft DirectX® 10.0
Supports HDCP

nVIDIA® GeForce GTX 285M SLI PCIe Video Card
1GB GDDR3 Video RAM On Board
Supports PCIe * 8 (SLI - 2 * PCIe * 8)
Supports Microsoft DirectX® 11.0
Supports HDCP

BIOS

One 32Mb Flash ROM
Phoenix™ BIOS

Storage

Up to three (**Factory Option**) Changeable 2.5" 9.5 mm (h) **SATA** (Serial) Hard Disk Drives supporting RAID level 0/1
One 12.7 mm Super Multi/Blu-Ray Combo/Blu-Ray Writer SATA Optical Device Drive (**Factory Option**)

Audio

High Definition Audio
3D Enhanced Sound System
S/PDIF Digital Output
Built-In Microphone
5.1 Channel Speakers (with Subwoofer)
Dolby Home Theater Certified

Downloaded Specification from Manuals

Keyboard & Pointing Device

Full Size Winkey Keyboard with Numeric Keypad
Built-In TouchPad (with Multi Gesture Functionality)
Eight Touch Sensor Instant Keys (Color, CCD, Bluetooth, WLAN, Internet, Silent Mode, Sound Effect, Mute)
Eight Gaming Keys G1 ~ G8

Card Reader

Embedded 7-in-1 Card Reader (MS/ MS Pro/ SD/ Mini SD/ MMC/ RS MMC/ MS Duo) **Note:** MS Duo/ Mini SD/ RS MMC Cards require a PC adapter

Slots

One ExpressCard/34 Slot
Two Mini Card Slots:
Slot 1 for PCIe WLAN Module
Slot 2 for PCIe TV Tuner Module

Interface

Four USB 2.0 Ports
One eSATA Port
One Mini-IEEE1394a Port
One DVI-Out Port (with CRT out)
One HDMI-Out (High-Definition Multimedia Interface) Port (with HDCP Support)
One HDMI-In (High-Definition Multimedia Interface) Port (with HDCP Support)
One RJ-45 LAN Jack
One Headphone/Speaker-Out Jack
One Microphone-In Jack
One Line-In Jack
One S/PDIF Out Jack
One DC-In Jack
One Consumer Infrared Port for TV Tuner Remote Controller
One CATV-In Jack (for TV Tuner)

Communication

Built-In 10/100/100 Base-TX Ethernet LAN

Bluetooth 2.1 + EDR (Enhanced Data Rate) Module (**Factory Option**)

Intel® WiFi Link 5300 Series (3*3 - 802.11a/g/n) Wireless LAN PCIe Interface Half Mini-Card Module (**Factory Option**)

3rd Party 802.11b/g/n Wireless LAN PCIe Interface Half Mini-Card Module (**Factory Option**)

2.0M Pixel PC Video Camera Module (**Factory Option**)

Mini-Card TV Tuner Module (**Factory Option**)

Security

Security (Kensington® Type) Lock Slot
BIOS Password
Fingerprint Reader Module (**Factory Option**)

Downloaded from LpManual.com Manuals

Operating System
Windows® 7 Note that the TV Tuner module (factory) option in is supported by the **Windows Media Center** software. **Windows Media Center** is not included in **Starter** or **Home Basic** versions of ***Windows 7***.
Power Management
Supports Wake on LAN Supports Wake on USB
Power
Full Range AC/DC Adapter – AC in 100 - 240V, 50 - 60Hz DC Output 19V, 11.57A (**220 Watts**) Removable Polymer Smart Lithium-Ion 68.82Wh Main Battery

Environmental Spec	
Temperature	
Operating:	5°C - 35°C
Non-Operating:	-20°C - 60°C
Relative Humidity	
Operating:	20% - 80%
Non-Operating:	10% - 90%
Physical Dimensions & Weight	
439mm (w) * 299mm (d) * 44mm (h) Around 5.6kg with Battery and ODD	

C

Downloaded Specification from Manuals